

NAVELEX 0967-LP-613-5010

TECHNICAL MANUAL
OPERATION AND MAINTENANCE INSTRUCTIONS
WITH PARTS LIST

TELETYPEWRITER SET
COMPACT PAGE PRINTER
KEYBOARD SEND-RECEIVE AND
RECEIVE ONLY MODEL 28

Manufactured by
Teletype Corporation

Manual Prepared by
Western Technical Associates
N00039-76-C-0153

This publication **supersedes** NAVSHIPS 0967-LP-059-9010, NAVSHIPS 0967-LP-059-9020
NAVSHIPS 0967-LP-059-9030 dated November 1972

Portions of this Technical Manual were extracted and either reproduced
or reformatted from material in copyrighted Teletype Corporation bulletins
and reprinted by permission of Teletype Corporation

Each transmittal of this document outside of the Department of Defense
must have approval of the issuing Service

Published by direction of Commander, Naval Electronic Systems Command

1 FEBRUARY 1978
Change 1 Approved: 24 July 1980
NAVELEX 0967-LP-613-5011

Insert latest changed pages.
 Destroy superseded pages.

LIST OF EFFECTIVE PAGES

NOTE: The portion of the text affected by the changes is indicated by a vertical line in the outer margins of the page. Changes to illustrations are indicated by miniature pointing hands. Changes to wiring diagrams are indicated by shaded areas.

Dates of original and changed pages are:

Original 1 February 1978
 Change 1 24 July 1980

TOTAL NUMBER OF PAGES IN THIS PUBLICATION IS 1000 CONSISTING OF THE FOLLOWING:

| Page No. | Change No. | Page No. | Change No. |
|-------------|------------|---------------|------------|
| Title | 1 | 6-63 - 6-71 | 0 |
| A | 1 | 6-72 | 1 |
| i - lix | 0 | 6-73 - 6-78 | 0 |
| 1-1 - 1-8 | 0 | 6-79 | 1 |
| 1-9 | 1 | 6-80 | 0 |
| 1-10 - 1-25 | 0 | 6-81 | 1 |
| 1-26 | 1 | 6-82 - 6-83 | 0 |
| 1-27 - 1-29 | 0 | 6-84 | 1 |
| 2-1 - 2-7 | 0 | 6-85 - 6-118 | 0 |
| 3-1 - 3-9 | 0 | 6-119 | 1 |
| 3-10 - 3-11 | 1 | 6-120 - 6-123 | 0 |
| 3-12 - 3-36 | 0 | 6-124 | 1 |
| 3-37 - 3-38 | 1 | 6-125 - 6-126 | 0 |
| 3-39 - 3-40 | 0 | 6-127 | 1 |
| 3-41 | 1 | 6-128 - 6-132 | 0 |
| 3-42 | 0 | 6-133 | 1 |
| 3-43 | 1 | 6-134 - 6-138 | 0 |
| 3-44 - 3-68 | 0 | 6-139 | 1 |
| 3-69 | 1 | 6-140 | 0 |
| 3-70 - 3-72 | 0 | 6-141 | 1 |
| 3-73 | 1 | 6-142 - 6-396 | 0 |
| 3-74 - 3-95 | 0 | 7-1 - 7-96 | 0 |
| 4-1 - 4-155 | 0 | 7-97 | 1 |
| 5-1 - 5-97 | 0 | 7-98 - 7-128 | 0 |
| 6-1 - 6-48 | 0 | 7-129 | 1 |
| 6-49 | 1 | 7-130 - 7-146 | 0 |
| 6-50 - 6-61 | 0 | 8-1 - 8-13 | 0 |
| 6-62 | 1 | 8-14 Blank | 0 |

UNCLASSIFIED

Change 1

NAVELEX 0967-LP-613-5011

INSTRUCTION SHEET

Change 1 to Technical Manual Operation and Maintenance Instructions with Parts List for Teletypewriter Set Compact Page Printer Keyboard Send-Receive and Receive Only Model 28 NAVELEX 0967-LP-613-5010.

General Instructions:

Insert this change in the manual immediately after the front cover preceding the title page, prior changes or interim corrections in effect.


Specific Instructions:

1. Remove the following pages and insert the corrected Change 1 pages:

| Remove | Insert | Remove | Insert |
|------------------------|------------------------|-------------|------------------|
| Title Page,CH-1/A,CH-1 | Title Page,CH-1/A,CH-1 | 6-71/6-72 | 6-71/6-72,CH-1 |
| 1-9/1-10 | 1-9,CH-1/1-10 | 6-79/6-80 | 6-79,CH-1/6-80 |
| 1-25/1-26 | 1-25/1-26,CH-1 | 6-81/6-82 | 6-81,CH-1/6-82 |
| 3-9/3-10 | 3-9/3-10,CH-1 | 6-83/6-84 | 6-83/6-84,CH-1 |
| 3-11/3-12 | 3-11,CH-1/3-12 | 6-119/6-120 | 6-119,CH-1/6-120 |
| 3-37/3-38 | 3-37,CH-1/3-38,CH-1 | 6-123/6-124 | 6-123/6-124,CH-1 |
| 3-41/3-42 | 3-41,CH-1/3-42 | 6-127/6-128 | 6-127,CH-1/6-128 |
| 3-43/3-44 | 3-43,CH-1/3-44 | 6-133/6-134 | 6-133,CH-1/6-134 |
| 3-69/3-70 | 3-69,CH-1/3-70 | 6-139/6-140 | 6-139,CH-1/6-140 |
| 3-73/3-74 | 3-73,CH-1/3-74 | 6-141/6-142 | 6-141,CH-1/6-142 |
| 6-49/6-50 | 6-49,CH-1/6-50 | 7-97/7-98 | 7-97,CH-1/7-98 |
| 6-61/6-62 | 6-61/6-62,CH-1 | 7-129/7-130 | 7-129,CH-1/7-130 |

DATED: 24 July 1980

UNCLASSIFIED

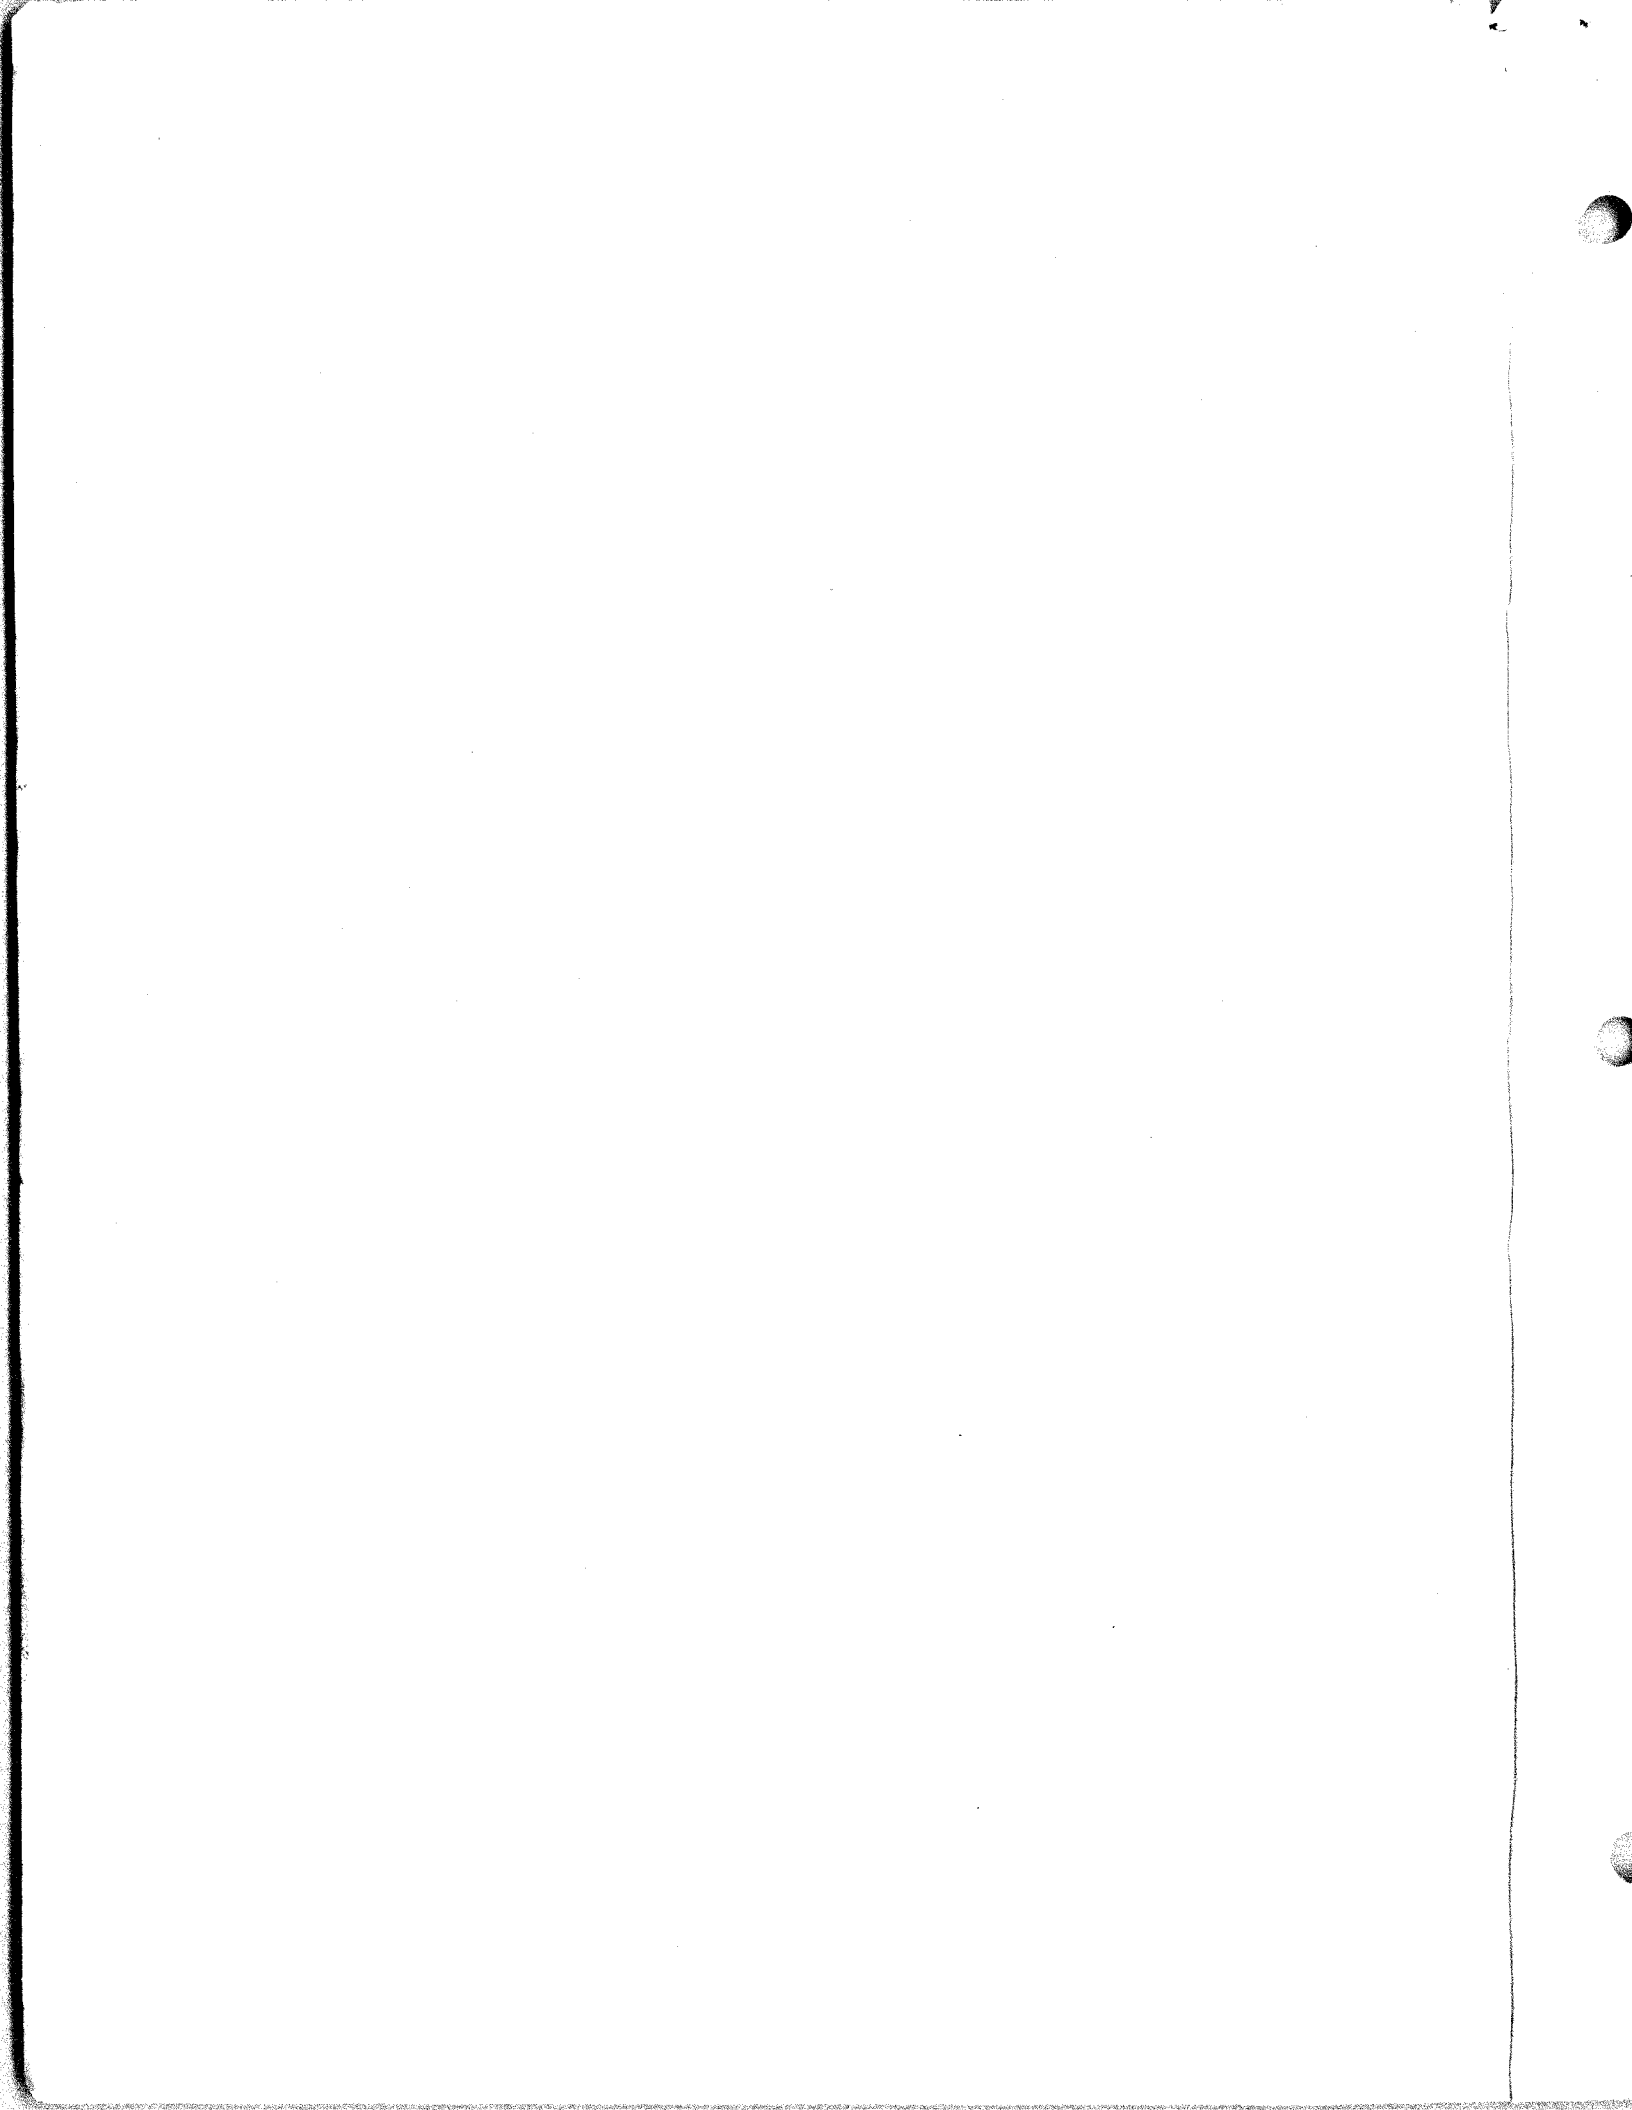

RECORD OF CHANGES

| CHANGE NO. | DATE | TITLE OR BRIEF DESCRIPTION | ENTERED BY |
|-------------|----------------|----------------------------|----------------|
| <i>CH-1</i> | <i>4-12-84</i> | | <i>W. Wilb</i> |

VALIDATION PERFORMANCE

Teletypewriter Set Compact Page Printer Keyboard Send-Receive and Receiver Only Model 28

Contractor: Western Technical Associates
5730 Arbor Vitae Street
Los Angeles, CA 90045

Contract No: N00039-76-C-0153

| Chapter | Section | Paragraph | Date Validation Completed | Check here if not validated |
|---------|---------|-------------------|---------------------------|-----------------------------|
| 1 | -- | 1-1 through 1-7 | 1-15-78 | |
| 2 | -- | 2-1 through 2-4 | 1-15-78 | |
| 3 | -- | 3-1 through 3-6 | 1-15-78 | |
| 4 | -- | 4-1 through 4-8 | 1-15-78 | |
| 5 | -- | 5-1 through 5-2 | 1-15-78 | |
| 6 | I | 6-1 through 6-4 | 1-15-78 | |
| 6 | II | 6-5 through 6-6 | 1-15-78 | |
| 6 | III | 6-7 through 6-8 | 1-15-78 | |
| 6 | IV | 6-9 through 6-10 | 1-15-78 | |
| 6 | V | 6-11 through 6-12 | 1-15-78 | |
| 7 | -- | 7-1 through 7-4 | 1-15-78 | |
| 8 | -- | 8-1 through 8-5 | 1-15-78 | |

Name & Authority of Validating Officer:

Signature of Validating Officer:

William J. Miklos
Director of Operations
Western Technical Associates



TABLE OF CONTENTS

| <u>Chapter</u> | | <u>Page</u> |
|----------------|--|-------------|
| 1 | GENERAL INFORMATION AND SAFETY PRECAUTIONS | 1-1 |
| | 1-1. Safety Precautions | 1-1 |
| | 1-2. Introduction | 1-1 |
| | 1-3. Equipment Description | 1-1 |
| | a. General | 1-1 |
| | b. High- and Low-Level | 1-2 |
| | 1-3.1 Equipment Description (High-Level) | 1-2 |
| | a. Keyboard Unit (KSR) | 1-2 |
| | (1) Mounting Base | 1-2 |
| | (2) Keyboard Transmitter | 1-6 |
| | (3) Distributor | 1-6 |
| | (4) Gear Shift Assembly | 1-6 |
| | b. Base Unit (RO) | 1-6 |
| | c. Typing Unit (KSR and RO) | 1-10 |
| | d. Motor Unit (KSR and RO) | 1-13 |
| | e. Cover Unit (KSR and RO) | 1-13 |
| | f. Variable Features | 1-16 |
| | 1-3.2 Equipment Description (Low-Level) | 1-16 |
| | a. RFI Suppression | 1-16 |
| | (1) Signaling | 1-16 |
| | (2) Electrical Service Assembly (ESA) | 1-16 |
| | (3) Cabling | 1-17 |
| | b. Keyboard Unit (KSR) | 1-17 |
| | (1) Mounting Base | 1-17 |
| | (2) Photoelectric Keyboard Transmitter | 1-17 |
| | (3) Photoelectric Distributor | 1-17 |
| | (4) Gear Shift Assembly | 1-17 |
| | (5) Synchronous Pulse | 1-17 |
| | c. Base Unit (RO) | 1-17 |
| | d. Typing Unit (KSR and RO) | 1-17 |
| | e. Motor Unit (KSR and RO) | 1-20 |
| | f. Cover Unit (KSR and RO) | 1-20 |
| | g. Electrical Service Assemblies | 1-21 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|---|-------------|
| | 1-4 Relationship of Units | 1-21 |
| | 1-5. Reference Data | 1-21 |
| | 1-6. Equipment Supplied | 1-21 |
| | 1-7. Equipment Required but not Supplied | 1-21 |
| 2 | OPERATION | 2-1 |
| | 2-1. Introduction | 2-1 |
| | 2-2. Controls and Indicators | 2-1 |
| | 2-3. Operating Procedures | 2-1 |
| | 2-4. Operator Maintenance | 2-1 |
| | a. Installing Paper | 2-1 |
| | b. Installing Ribbon | 2-1 |
| 3 | FUNCTIONAL DESCRIPTION | 3-1 |
| | 3-1. Introduction | 3-1 |
| | 3-2. Overall Functional Description | 3-1 |
| | 3-2.1 Overall Functional Description (High-Level) | 3-1 |
| | 3-2.2 Overall Functional Description (Low-Level) | 3-1 |
| | 3-3. Detailed Functional Description | 3-4 |
| | a. Power Distribution | 3-4 |
| | (1) Motor Unit | 3-4 |
| | (2) Gear Shift Assembly | 3-4 |
| | (3) Main Shaft | 3-4 |
| | b. Transmission (KSR Only) | 3-6 |
| | (1) Keyboard Unit (High-Level) | 3-6 |
| | (2) Keyboard Unit (Low-Level) | 3-6 |
| | c. Reception and Printing | 3-7 |
| | (1) Selecting Mechanism | 3-7 |
| | (2) Code Bar Mechanism | 3-10 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|--|-------------|
| | (3) Printing Mechanism | 3-10 |
| | (4) Spacing Mechanism | 3-11 |
| | (5) Line Feed Mechanism | 3-11 |
| | (6) Stunt Box | 3-11 |
| | (7) Ribbon Feed Mechanism | 3-13 |
| | (8) Paper Feed Mechanism | 3-13 |
| | (9) Signaling Code | 3-13 |
| 3-4. | Electrical Circuits | 3-16 |
| 3-4.1 | Electrical Circuits (High-Level) | 3-16 |
| 3-4.2 | Electrical Circuits (Low-Level) | 3-16 |
| 3-4.3 | Electrical Service Assemblies | 3-16 |
| | a. ESA Power Supply Circuits | 3-16 |
| | (1) Technical Description | 3-16 |
| | (2) Technical Data | 3-19 |
| | (3) Theory of Operation | 3-19 |
| | b. Selector Magnet Driver | 3-22 |
| | (1) Technical Description | 3-23 |
| | (2) Technical Data | 3-23 |
| | (3) Principles of Operation | 3-24 |
| | c. Low-Level Keyer | 3-26 |
| | (1) Technical Description | 3-26 |
| | (2) Technical Data | 3-26 |
| | (3) Principles of Operation | 3-27 |
| | d. Clutch Magnet Driver (CMD) | 3-27 |
| | (1) Technical Description | 3-27 |
| | (2) Technical Data | 3-28 |
| | (3) Principles of Operation | 3-29 |
| 3-5. | Typing Unit Mechanical Motion Descriptions | 3-30 |
| | a. Distribution of Motion | 3-30 |
| | (1) General | 3-32 |
| | (2) One-Stop Clutches | 3-32 |
| | (3) Three-Stop Clutches | 3-34 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|--|-------------|
| b. Selection | 3-34 |
| (1) General | 3-34 |
| (2) Selector Mechanism | 3-34 |
| (3) Orientation | 3-38 |
| c. Positioning the Code Bars | 3-38 |
| (1) Code Bar Mechanism | 3-38 |
| (2) Code Bar Operation | 3-38 |
| (3) Code Bar Arrangement | 3-41 |
| d. Positioning the Type Box | 3-41 |
| (1) General | 3-41 |
| (2) Letters-Figures Shift | 3-43 |
| (3) Vertical Positioning | 3-46 |
| (4) Horizontal Positioning | 3-48 |
| e. Printing | 3-52 |
| (1) Positioning | 3-52 |
| (2) Operation | 3-52 |
| f. Spacing | 3-54 |
| (1) General | 3-54 |
| (2) Space Function | 3-56 |
| (3) Space Suppression | 3-56 |
| (4) Margin Indicator | 3-56 |
| g. Ribbon Feeding | 3-57 |
| (1) General | 3-57 |
| (2) Operation | 3-57 |
| (3) Ribbon Reversing | 3-57 |
| h. Paper Feeding (Friction Feed) | 3-59 |
| i. Stunt Box Operation | 3-59 |
| (1) Functions | 3-59 |
| (2) Carriage Return Function | 3-62 |
| (3) Line Feed Function | 3-69 |
| (4) Letters-Figures Shift Function | 3-72 |
| (5) Stunt Box Contacts | 3-72 |
| 3-6. Keyboard Unit Mechanical Motion Descriptions | 3-73 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|---|-------------|
| 3-6.1 | Keyboard Unit Mechanical Motion Descriptions (High-Level) | 3-73 |
| a. | General | 3-73 |
| b. | Keyboard Transmitter | 3-74 |
| | (1) Code Bar Mechanism | 3-74 |
| | (2) Universal Mechanism | 3-75 |
| | (3) Contact Mechanism | 3-78 |
| | (4) Reset Mechanism | 3-78 |
| | (5) Repeat Mechanism | 3-78 |
| | (6) Line Break Mechanism | 3-78 |
| | (7) Local Function Keys | 3-80 |
| c. | Distributor | 3-80 |
| d. | 3-Speed Gear Shift Assembly | 3-83 |
| e. | Mounting Base | 3-83 |
| | (1) Margin Indicator Switch | 3-85 |
| | (2) Local Functions | 3-85 |
| | (3) Local Carriage Return | 3-85 |
| | (4) Local Line Feed | 3-85 |
| f. | Variable Features | 3-85 |
| | (1) Time Delay Mechanism | 3-85 |
| 3-6.2 | Keyboard Unit Mechanical Motion Descriptions (Low-Level) | 3-88 |
| a. | Keyboard Transmitter | 3-88 |
| | (1) Code Bar Mechanism | 3-88 |
| | (2) Universal Mechanism | 3-89 |
| b. | Photoelectric Distributor Mechanism | 3-94 |
| | (1) General | 3-94 |
| | (2) Engaging and Disengaging Distributor Clutch | 3-95 |
| 4 | SCHEDULED MAINTENANCE | 4-1 |
| 4-1. | Introduction | 4-1 |
| 4-2. | Scheduled Maintenance Action Index | 4-1 |
| 4-3. | Equipment and Materials Required | 4-1 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|--|-------------|
| 4-4. | Safety Precautions | 4-1 |
| | a. Keep Away From Live Circuits | 4-1 |
| | b. Do Not Service Or Adjust Alone | 4-1 |
| | c. Resuscitation | 4-2 |
| 4-5. | Preventive Maintenance Procedures | 4-2 |
| | a. Daily Inspection and Cleaning | 4-2 |
| | b. Weekly Inspection and Cleaning | 4-2 |
| | c. Monthly Inspection and Cleaning | 4-4 |
| | d. Quarterly Inspection and Cleaning | 4-5 |
| 4-6. | Typing Unit Lubrication | 4-5 |
| 4-7. | Keyboard Unit Lubrication | 4-11 |
| 4-8. | Scheduled Performance Tests | 4-13 |
| | a. Preliminary Instructions | 4-13 |
| | b. Keyboard Unit Adjustment Checks | 4-14 |
| | c. Typing Unit Mechanical Adjustment Checks | 4-17 |
| | d. Operational Tests | 4-27 |
| | (1) Operational Tests (High-Level) | 4-27 |
| | (2) Operational Tests (Low-Level) | 4-39 |
| 5 | TROUBLESHOOTING | 5-1 |
| 5-1. | Introduction | 5-1 |
| 5-2. | Troubleshooting Procedures | 5-1 |
| 5-2.1 | High-Level Troubleshooting Procedures | 5-1 |
| | a. Troubleshooting Index | 5-1 |
| | b. Lamp and Fuse Index | 5-1 |
| | c. Fault Isolation Procedures | 5-1 |
| | d. Maintenance Schematics and Wiring Diagrams | 5-9 |
| 5-2.2 | Low-Level Troubleshooting Procedures | 5-9 |
| | a. Wiring and Schematic Diagrams | 5-9 |
| | b. Lamp, Photocell, Fuse, and Semiconductor Indexes | 5-9 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|--|-------------|
| | c. ESA General Troubleshooting Instructions | 5-9 |
| | d. Power Supply Troubleshooting Procedures | 5-30 |
| | e. Selector Magnet Driver (SMD) Troubleshooting Procedures | 5-31 |
| | f. Low-Level Keyer (LLK) Troubleshooting Procedures | 5-31 |
| | g. Clutch Magnet Driver (CMD) Troubleshooting Procedures | 5-37 |
| 6 | CORRECTIVE MAINTENANCE | 6-1 |
| | 6-1. Introduction | 6-1 |
| | 6-2. General | 6-1 |
| | SECTION I. ADJUSTMENTS (BASIC UNITS) | 6-1 |
| | 6-3. Typing Unit Adjustments | 6-1 |
| | 6-3.1 Typing Unit Adjustments (High-Level) | 6-2 |
| | a. Code Bar Mechanism Adjustments | 6-2 |
| | (1) Code Bar Detent | 6-2 |
| | (2) Code Bar Detent Spring | 6-2 |
| | (3) Code Bar Yield Spring | 6-2 |
| | (4) Code Bar Shift Lever Link Bracket | 6-2 |
| | (5) Code Bar Shift Lever Drive Arm | 6-4 |
| | (6) Transfer Lever Spring | 6-6 |
| | (7) Common Transfer Lever Spring | 6-6 |
| | (8) Transfer Lever Eccentric | 6-6 |
| | (9) Intermediate Arm Backstop Bracket | 6-10 |
| | b. Function Mechanism Adjustments | 6-10 |
| | (1) Figures-Letters Shift Code Bar Operating Mechanism | 6-10 |
| | (2) Function Bar Spring | 6-13 |
| | (3) Function Lever Spring | 6-13 |
| | (4) Function Pawl Spring | 6-13 |
| | (5) Function Contact Spring | 6-13 |
| | (6) Function Reset Bail Blade | 6-15 |
| | (7) Function Reset Bail Spring | 6-18 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|---|-------------|
| (8) Keyboard Lock Lever Spring | 6-18 |
| (9) Stipper Blade Drive Cam Position | 6-18 |
| (10) Stunt Box Clip | 6-19 |
| (11) Unshift-on-Space Function Pawl | 6-23 |
| c. Line Feed and Platen Mechanism Adjustments | 6-23 |
| (1) Left Margin (Sprocket Feed) | 6-23 |
| (2) Printing Hammer Stop Bracket (Sprocket Feed) | 6-23 |
| (3) Right Margin (Sprocket Feed) | 6-26 |
| (4) Line Feed Bar Bell Crank Spring | 6-26 |
| (5) Line Feed Bar Release Lever Spring | 6-26 |
| (6) Line Feed Spur Gear Detent Eccentric | 6-29 |
| (7) Platen Detent Bail Spring | 6-29 |
| (8) Line Feed Clutch Phasing | 6-29 |
| (9) Paper Finger (Friction Feed) | 6-29 |
| (10) Paper Finger Spring | 6-32 |
| (11) Paper Pressure Bail Spring | 6-32 |
| (12) Pressure Roller Lever Spring | 6-32 |
| (13) Paper Finger Locking Arm Spring (Sprocket Feed) | 6-32 |
| (14) Paper Finger or Guide Bracket Latch Spring | 6-32 |
| (15) Paper Finger or Guide Bracket Shaft Spring | 6-35 |
| (16) Paper Finger or Guide Bracket (Sprocket Feed) | 6-35 |
| (17) Paper Guide (Sprocket Feed) | 6-37 |
| (18) Sprocket Pin Spring | 6-37 |
| (19) Paper Straightener Collar (Friction Feed) | 6-37 |
| (20) Paper Straightener Lever Spring | 6-37 |
| (21) Platen End Play (Sprocket Feed) | 6-39 |
| (22) Printed Line (Sprocket Feed) | 6-39 |
| (23) Sprocket Pin Separation | 6-40 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|---|-------------|
| | (24) Single-Double Line Feed Stripper Bail Assembly Springs | 6-40 |
| | (25) Paper Finger | 6-43 |
| d. | Mainshaft and Tripshaft Mechanisms Adjustments | 6-43 |
| | (1) Clutch Drum Position (Except Selector) | 6-43 |
| | (2) Clutch Shoe Lever Spring | 6-43 |
| | (3) Clutch Shoe Spring | 6-43 |
| | (4) Clutch Latch Lever Spring (Except Selector) | 6-46 |
| | (5) Code Bar Clutch Trip Lever | 6-46 |
| | (6) Trip Shaft Lever Spring | 6-46 |
| | (7) Clutch Shoe Lever | 6-49 |
| | (8) Type Box Clutch Trip Lever | 6-49 |
| | (9) Clutch Trip Lever Spring | 6-49 |
| | (10) Spacing Clutch Trip Lever | 6-49 |
| | (11) Clutch Trip Shaft Set Collars | 6-54 |
| | (12) Code Bar Clutch Cam Follower Spring | 6-54 |
| | (13) Function Clutch Trip Lever | 6-56 |
| | (14) Type Box Clutch Trip Lever Eccentric Post | 6-56 |
| | (15) Line Feed Clutch Trip Lever Eccentric Post | 6-56 |
| | (16) Line Feed Clutch Trip Lever Adjusting Screw | 6-61 |
| e. | Positioning Mechanism Adjustments | 6-61 |
| | (1) Breaker Slide Bail Spring | 6-61 |
| | (2) Horizontal Positioning Lock Lever Spring | 6-61 |
| | (3) Rocker Shaft Bracket Eccentric Stud | 6-62 |
| | (4) Decelerating Slide Spring | 6-64 |
| | (5) Horizontal Positioning Drive Linkage | 6-64 |
| | (6) Horizontal Positioning Drive Linkage Spring | 6-67 |
| | (7) Horizontal Stop Slide Spring | 6-67 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|---|-------------|
| (8) Left Vertical Positioning Lever Eccentric Stud | 6-67 |
| (9) Vertical Positioning Lock Lever Spring | 6-68 |
| (10) Reversing Slide Adjusting Stud | 6-70 |
| (11) Reversing Slide Detent Spring | 6-70 |
| (12) Reversing Slide Brackets | 6-70 |
| (13) Right Vertical Positioning Lever Eccentric Stud | 6-73 |
| (14) Vertical Positioning Lever Spring | 6-73 |
| (15) Rocker Shaft Left Bracket | 6-73 |
| (16) Shift Linkage | 6-75 |
| (17) Shift Linkage Spring | 6-75 |
| (18) Type Box Position (Sprocket Feed) | 6-77 |
| (19) Vertical Positioning Lock Lever | 6-77 |
| f. Printing Mechanism Adjustments | 6-80 |
| (1) Printing Arm | 6-80 |
| (2) Printing Hammer Stop Bracket | 6-80 |
| (3) Type Pallet Spring | 6-82 |
| (4) Printing Carriage Lower Roller | 6-82 |
| (5) Type Box Carriage Roller Arm Spring | 6-82 |
| (6) Printing Carriage Position | 6-82 |
| (7) Printing Hammer Bearing Stud | 6-84 |
| (8) Printing Hammer Operating Bail Latch Spring | 6-85 |
| (9) Printing Hammer Operating Bail Spring | 6-85 |
| (10) Printing Hammer Plunger Spring | 6-87 |
| (11) Printing Hammer Yield Spring | 6-87 |
| (12) Printing Track | 6-87 |
| (13) Ribbon Feed Lever Bracket | 6-87 |
| (14) Ribbon Feed Lever Spring | 6-89 |
| (15) Ribbon Ratchet Wheel Friction Spring | 6-89 |
| (16) Ribbon Lever Spring | 6-90 |
| (17) Ribbon Tension Spring | 6-90 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|---|-------------|
| (18) Ribbon Reverse Detent | 6-90 |
| (19) Ribbon Reverse Detent Lever Spring (If Unit is Equipped) | 6-90 |
| (20) Ribbon Reverse Spur Gear | 6-93 |
| (21) Type Box Alignment | 6-93 |
| g. Selector Mechanism Adjustments | 6-93 |
| (1) Marking Lock Lever Spring | 6-95 |
| (2) Start Lever Spring | 6-95 |
| (3) Push Lever Reset Bail Spring | 6-95 |
| (4) Selector Clutch Latch Lever Spring | 6-95 |
| (5) Spacing Lock Lever Spring | 6-95 |
| (6) Range Finder Knob Phasing | 6-100 |
| (7) Selector Clutch Stop Arm | 6-100 |
| (8) Selector Receiving Margin for Dual Speed Operation (60 and 100 WPM) | 6-100 |
| (9) Selector Receiving Margin | 6-102 |
| (10) Selector Armature | 6-104 |
| (11) Selector Armature Downstop (Preliminary) | 6-104 |
| (12) Selector Armature Downstop (Final) | 6-104 |
| (13) Selector Armature Spring (Double Button) | 6-107 |
| (14) Selector Magnet Bracket | 6-108 |
| (15) Selector Armature Spring (Single Button) | 6-110 |
| (16) Selector Cam Lubricator | 6-111 |
| (17) Selector Clutch Drum | 6-111 |
| (18) Selector Lever Spring | 6-113 |
| (19) Selector Push Lever Spring | 6-113 |
| h. Spacing Mechanism Adjustments | 6-113 |
| (1) Automatic Carriage Return/Line Feed Bell Crank Spring | 6-113 |
| (2) Left Margin | 6-116 |
| (3) Carriage Draw-Wire Rope | 6-119 |
| (4) Lower Draw-Wire Rope Pulley Bail Spring | 6-121 |
| (5) Carriage Return Latch Bail | 6-121 |
| (6) Carriage Return Latch Bail Spring | 6-121 |
| (7) Carriage Return Lever | 6-121 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|---|-------------|
| | (8) Carriage Return Spring | 6-124 |
| | (9) Spacing Feed Pawl Release Link Spring | 6-124 |
| | (10) Dashpot Vent Screw | 6-124 |
| | (11) Transfer Slide Spring | 6-126 |
| | (12) Margin Indicator Lamp | 6-127 |
| | (13) Oscillating Rail Slide Position | 6-127 |
| | (14) Spacing Feed Pawl Spring | 6-127 |
| | (15) Right Margin | 6-130 |
| | (16) Spacing Cutout Transfer Bail Spring | 6-130 |
| | (17) Right Margin with Automatic Carriage Return Line Feed Ring | 6-130 |
| | (18) Spacing Gear Clearance | 6-132 |
| | (19) Spacing Gear Phasing | 6-132 |
| | (20) Spacing Suppression Bail Spring | 6-132 |
| | (21) Spacing Trip Lever Bail Cam Plate | 6-135 |
| | (22) Spacing Trip Lever Bail Spring | 6-135 |
| | (23) Spacing Trip Lever Spring | 6-137 |
| 6-3.2 | Typing Unit Adjustments (Low-Level) | 6-137 |
| | a. Selector Armature | 6-137 |
| | b. Selector Armature Alignment | 6-137 |
| | c. Selector Armature Spring | 6-139 |
| | d. Selector Base (Magnets Energized) | 6-139 |
| 6-4. | Keyboard Unit Adjustments | 6-142 |
| 6-4.1 | Keyboard Unit Adjustments (High-Level) | 6-142 |
| | a. Keyboard Transmitter Mechanism Adjustments | 6-142 |
| | (1) Universal Link | 6-142 |
| | (2) Contact Wires | 6-142 |
| | (3) Spacebar Spring | 6-142 |
| | (4) Keylever Spring | 6-145 |
| | (5) Non-repeat Lever Spring | 6-145 |
| | (6) Latchlever Spring | 6-145 |
| | (7) Contact Block Spring | 6-146 |
| | (8) Contact Wire Spring | 6-146 |
| | (9) Repeat Keylever Spring | 6-149 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|--|-------------|
| | (10) Break Keylever Spring | 6-149 |
| | (11) Reset Bail Spring | 6-149 |
| | (12) Universal Link Spring | 6-149 |
| | (13) Universal Lever Spring | 6-149 |
| | (14) Reset Solenoid Position | 6-149 |
| | (15) Reset Arm | 6-153 |
| | (16) Universal Contact | 6-153 |
| | (17) Keyboard Transmitter Positioning | 6-154 |
| b. | Distributor Mechanism Adjustments | 6-154 |
| | (1) Clutch Trip Armature Air Gap | 6-154 |
| | (2) Clutch Trip Lever | 6-157 |
| | (3) Armature Extension | 6-157 |
| | (4) Clutch Stop Lug | 6-157 |
| | (5) Clutch Shoe Lever | 6-157 |
| | (6) Cam Follower Guide | 6-160 |
| | (7) Mounting Typing Unit on Base | 6-160 |
| | (8) Distributor Block | 6-161 |
| | (9) Code Level Contact Gaps | 6-161 |
| | (10) Clutch Timing Contact Gap | 6-164 |
| | (11) Solenoid Contact Gap | 6-164 |
| | (12) Clutch Shoe Lever Spring | 6-165 |
| | (13) Clutch Shoe Spring | 6-166 |
| | (14) Cam Follower Spring | 6-166 |
| | (15) Rocker Spring | 6-169 |
| | (16) Rocker Compression Spring | 6-169 |
| | (17) Clutch Latchlever Spring | 6-169 |
| | (18) Clutch Trip Lever Spring | 6-171 |
| | (19) Clutch Magnet Armature Bail Spring | 6-171 |
| c. | Gear Shift Assembly Adjustments | 6-171 |
| | (1) Typing Unit Gear Backlash | 6-171 |
| | (2) Motor Pinion Backlash | 6-173 |
| | (3) Baud Selector Stop Plate | 6-173 |
| | (4) Gear Shift Spring | 6-175 |
| | (5) Distributor Gear Backlash | 6-175 |
| | (6) Margin Indicator Spring | 6-176 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|--|-------------|
| d. Local Function Mechanism Adjustments | 6-176 |
| (1) Local Carriage Return Spring | 6-176 |
| (2) Local Line Feed Spring | 6-179 |
| (3) Line Break Key | 6-179 |
| (4) Local Line Feed | 6-181 |
| (5) Local Carriage Return | 6-181 |
| e. Latch and Hinge Mechanism Adjustments | 6-181 |
| (1) Cover Latch | 6-180 |
| (2) Window Door Hinge | 6-185 |
| (3) Dome Hinge Clearance | 6-185 |
| (4) Dome Centering | 6-185 |
| (5) Dome Latch | 6-185 |
| (6) Paper Guide | 6-185 |
| (7) Window | 6-188 |
| (8) Keyboard Hood (KSR Only) | 6-188 |
| (9) Base Hood (RO Only) | 6-188 |
| (10) Line Guide | 6-188 |
| 6-4.2 Keyboard Unit Adjustments (Low-Level) | 6-188 |
| a. Keyboard Transmitting Mechanism Adjustments | 6-188 |
| (1) Shutter Window Gap | 6-188 |
| (2) Universal Link | 6-191 |
| (3) Universal Link Spring | 6-191 |
| (4) Keyboard Reset Lever Spring | 6-191 |
| b. Distributor Mechanism Adjustments | 6-194 |
| (1) Clutch Drum | 6-194 |
| (2) Clutch Shoe Lever | 6-196 |
| (3) Clutch Trip Lever | 6-196 |
| (4) Magnet Plate | 6-196 |
| (5) Distributor Gear | 6-196 |
| (6) Reset Lever | 6-201 |
| (7) Latch Bail | 6-201 |
| (8) Clutch Shoe Lever Spring | 6-201 |
| (9) Clutch Shoe Spring | 6-201 |
| (10) Armature Spring | 6-201 |
| (11) Latch Bail Spring | 6-206 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|--|-------------|
| (12) Latchlever Spring | 6-206 |
| (13) Magnet Blocking Lever Spring | 6-206 |
| (14) Trip Lever Spring | 6-206 |
| SECTION II. ADJUSTMENTS (VARIABLE FEATURES) | 6-206 |
| 6-5. Typing Unit Adjustments | 6-206 |
| a. Answer-Back Mechanism Adjustment | 6-206 |
| b. Continuous Spacing Mechanism Adjustments | 6-208 |
| (1) Carriage Return Lever | 6-208 |
| (2) Reset Bail Operating Spring | 6-209 |
| (3) Suppression Bail Adjusting Bracket | 6-209 |
| (4) Function Clutch Trip Lever | 6-209 |
| (5) Solenoid Plunger Spring | 6-213 |
| c. Dc Magnet Operated Print Suppression Adjustments | 6-213 |
| (1) Armature Extension Clearance | 6-213 |
| (2) Blocking Bail Extension Clearance | 6-213 |
| (3) Armature Extension Overtravel | 6-214 |
| (4) Type Box Clutch Trip Lever | 6-216 |
| d. Form Alignment Switch Mechanism Adjustments | 6-216 |
| (1) Form Alignment Switch | 6-216 |
| (2) Form Alignment Switch Spring | 6-216 |
| (3) Form Feed-Out Adjustment | 6-219 |
| e. Form Feed-Out Mechanism Adjustment | 6-219 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|---|-------------|
| f. | Horizontal Tabulator Mechanism Adjustments | 6-219 |
| | (1) Blocking Lever Return Spring | 6-219 |
| | (2) Tabulator Pawl-Vertical (Final) | 6-219 |
| | (3) Tabulator Pawl Spring | 6-222 |
| | (4) Cam Plate Stripper Bail | 6-222 |
| | (5) Horizontal Tabulator Slide Arm Spring | 6-222 |
| | (6) Operating Lever Cam Arm Spring | 6-222 |
| | (7) Spacing Cutout Transfer Bail Set Collar | 6-224 |
| | (8) Clutch Trip Lever Spring | 6-224 |
| | (9) Spacing Clutch Stop Lever | 6-226 |
| | (10) Intermediate Bail Spring | 6-226 |
| | (11) Latch Bail Adjusting Plate | 6-226 |
| | (12) Trip Lever Arm Latch Bail | 6-226 |
| | (13) Trip Lever Arm Latch Bail Spring | 6-229 |
| | (14) Operating Lever Adjusting Plate | 6-230 |
| | (15) Operating Lever Eccentric Link | 6-230 |
| | (16) Operating Lever Extension Link Spring | 6-232 |
| | (17) Right Margin | 6-233 |
| | (18) Space Suppression Bypass Spring | 6-233 |
| | (19) Tabulator Pawl (Preliminary) | 6-233 |
| | (20) Tabulator Pawl-Horizontal (Final) | 6-236 |
| | (21) Tabulator Stop Settings | 6-238 |
| | (22) Transmitter Control Contact Gap | 6-238 |
| | (23) Transmitter Control Contact Spring | 6-241 |
| g. | Letters-Figures Code Bar Shift Magnet Mechanism Adjustments | 6-241 |
| | (1) Shift Magnet Yoke | 6-241 |
| | (2) Shift Magnet Armature | 6-241 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|---|-------------|
| (3) Shift Magnet Armature Return Spring | 6-243 |
| (4) Shift Code Bar Return Spring | 6-244 |
| h. Local Backspace Mechanism Adjustments | 6-244 |
| (1) Camming Bail Spring | 6-244 |
| (2) Camming Bail Stop Arm | 6-245 |
| i. Page Feed-Out Mechanism Adjustments | 6-247 |
| (1) Pointer | 6-247 |
| (2) Blocking Arm | 6-247 |
| (3) Blocking Arm Spring | 6-247 |
| (4) Page Feed-Out Gear Play | 6-247 |
| (5) Mounting Bracket | 6-250 |
| (6) Indexing Disc | 6-250 |
| (7) Switch Operating Arm (Transmitter Control) | 6-250 |
| j. Paper Jam Alarm (Sprocket Feed) Adjustments | 6-251 |
| (1) Bail Spring | 6-251 |
| (2) Wire Bail | 6-251 |
| (3) Switch Position | 6-251 |
| k. Paper-Out Alarm Mechanism Adjustments | 6-253 |
| (1) Switch Position | 6-253 |
| (2) Switch Bracket Spring | 6-255 |
| (3) Switch Operating Lever | 6-255 |
| l. Print Suppression Mechanism Adjustments | 6-257 |
| (1) Suppression Code Bar Mechanism | 6-257 |
| (2) Zero Code Bar Shift Mechanism | 6-257 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|---|-------------|
| m. | Print Suppression and Off-Line Stunt Shift Control Mechanism Adjustments | 6-257 |
| | (1) Suppression Code Bar Position | 6-257 |
| | (2) Print Suppression Magnet Armature Return Spring | 6-259 |
| | (3) Type Box Clutch Trip Lever | 6-260 |
| n. | Reverse Line Feed Mechanism Adjustments | 6-260 |
| | (1) Line Feed Bar Bell Crank Spring | 6-260 |
| | (2) Line Feed Bar Release Lever Spring | 6-260 |
| | (3) Platen Detent Bail Spring | 6-260 |
| | (4) Line Feed Spur Gear Detent Eccentric | 6-260 |
| | (5) Line Feed Bar Spring | 6-263 |
| | (6) Line Feed Clutch Spur Gear | 6-263 |
| | (7) Reverse Line Feed Slide Link Spring | 6-266 |
| | (8) Reverse Line Feed Slide Link Stop Bracket | 6-266 |
| o. | Selective Calling Mechanism Adjustments | 6-266 |
| | (1) Automatic Carriage Return- Line Feed Blocking Slide Spring | 6-266 |
| | (2) Condition Code Shift Fork Spring | 6-268 |
| | (3) Blocking Bail | 6-268 |
| | (4) Off-Line Stunt Shift Solenoid Spring | 6-268 |
| | (5) Type Box Clutch Suppression Arm | 6-268 |
| | (6) Type Box Clutch Trip Lever (Selective Calling Units With or Without Off-Line Shift Solenoid) | 6-271 |
| | (7) Print Suppressor Code Bar Spring | 6-271 |
| | (8) Code Bar Shift Mechanism | 6-271 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|---|-------------|
| (9) Condition Code (Zero) Code Bar Shift Mechanism | 6-274 |
| (10) Off-Line Shift Solenoid Bracket Assembly (Off-Line Only) | 6-274 |
| p. Two-Color Ribbon Mechanism Adjustments | 6-274 |
| (1) Armature Spring, Left and Right | 6-274 |
| (2) Ribbon Magnet Hinge Bracket, Left and Right (Preliminary) | 6-276 |
| (3) Ribbon Magnet Hinge Bracket, Left and Right (Final) | 6-276 |
| (4) Ribbon Magnet Bracket, Left and Right (Preliminary) | 6-276 |
| (5) Operational Requirement for Ribbon Magnet Bracket (Final) | 6-277 |
| (6) Ribbon Guide Lever Spring, Left and Right | 6-277 |
| (7) Ribbon Reversing Lever Spring, Right and Left | 6-277 |
| (8) Ribbon Foller Bail Spring, Left and Right | 6-277 |
| q. Universal Contact (Selector) Mechanism Adjustments | 6-277 |
| (1) Contact Mounting Bracket | 6-277 |
| (2) Contact Block | 6-280 |
| (3) Contact Drive Arm Position | 6-280 |
| (4) Contact Arm Spring | 6-280 |
| r. Universal Contact (Stunt Box) Mechanism Adjustments | 6-280 |
| (1) Contact | 6-280 |
| (2) Normally Open Contact Gap | 6-281 |
| (3) Contact springs (Two Springs) | 6-283 |
| (4) Swinger Spring | 6-283 |
| (5) Contact Bracket and Drive Cam | 6-283 |
| (6) Latch Lever Spring | 6-285 |
| (7) Trip Cam | 6-285 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|--|-------------|
| | (8) Contact Bracket and Drive Cam Position | 6-285 |
| | (9) Trip Cam Position | 6-285 |
| | (10) Normally Closed Contact (100 WPM for 83B2 Switching System) | 6-287 |
| s. | Vertical Tabulation and Transmitter-Distributor Control Mechanism Adjustments | 6-287 |
| | (1) Blocking Lever | 6-287 |
| | (2) Pointer | 6-287 |
| | (3) Switch Contact Pressure (Transmitter Control Only) | 6-289 |
| | (4) Transmitter Control Switch for Single-Contact Type Control (Transmitter Control Only) | 6-289 |
| | (5) Tabulation Index Plate Position | 6-289 |
| | (6) Blocking Lever Spring | 6-291 |
| | (7) Form-Out Pawl Spring | 6-291 |
| | (8) Tabulator Bail Spring | 6-291 |
| | (9) Line Feed Clutch Trip Lever Spring | 6-291 |
| | (10) Stunt Box Switch Spring | 6-293 |
| | (11) Page Feed-Out Gear Play | 6-293 |
| | (12) Mounting Bracket | 6-293 |
| | (13) Indexing Disc | 6-296 |
| | (14) Page Feed-Out Index Plate Position | 6-296 |
| | (15) Vertical Tabulator Slide Retainer | 6-297 |
| | (16) Switch Contacts for Transfer Type Control Switch (Transmitter Control Only) | 6-297 |
| | (17) Transmitter Control Switch for Transfer Type Contacts (Transmitter Control Only) | 6-297 |
| 6-6. | Keyboard Unit Adjustments (Variable Features) | 6-300 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|--|-------------|
| SECTION III. ADJUSTMENTS (EARLIER DESIGN), BASIC UNITS | 6-300 |
| 6-7 Typing Unit | 6-300 |
| 6-7.1 Typing Unit (High-Level) | 6-300 |
| a. Code Bar Mechanism Adjustments | 6-301 |
| (1) Code Bar Shift Lever Drive Arm | 6-301 |
| (2) Code Bar Shift Lever Link Guide Bracket | 6-301 |
| b. Function Mechanism Adjustments | 6-301 |
| (1) Bell or Motor Stop Function Contact | 6-301 |
| (2) Figures-Letters Shift Code Bar Operating Mechanism | 6-305 |
| (3) Function Contact Spring | 6-305 |
| (4) Function Reset Bail Blade | 6-308 |
| (5) Function Stripper Blade Arms | 6-308 |
| c. Line Feed Mechanism and Platen Mechanism Adjustments | 6-311 |
| (1) Single-Double Line Feed Lever | 6-311 |
| (2) Line Feed Stripper Bail Spring | 6-311 |
| d. Main Shaft and Trip Shaft Mechanisms Adjustments | 6-311 |
| (1) Antideflection Plate | 6-311 |
| (2) Clutch Trip Shaft Set Collars | 6-314 |
| (3) Clutch Trip Lever Spring | 6-315 |
| (4) Spacing Clutch Trip Lever | 6-315 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|--|-------------|
| e. Positioning Mechanism Adjustments | 6-315 |
| (1) Horizontal Positioning Drive Linkage with Earlier Design Drive Linkage and Tension Springs | 6-318 |
| (2) Horizontal Positioning Drive Linkage Spring (Tension Spring) | 6-318 |
| (3) Horizontal Positioning Drive Linkage with Earlier Design Drive Linkage and Torsion Springs | 6-318 |
| (4) Horizontal Positioning Drive Linkage Spring (Torsion Spring) | 6-321 |
| (5) Shift Linkage Spring | 6-321 |
| f. Printing Mechanism Adjustments | 6-321 |
| (1) Type Box Carriage Roller | 6-321 |
| (2) Printing Hammer Stop Bracket (for Thick Type Box with Dummy Pallets) | 6-323 |
| (3) Printing Arm | 6-325 |
| (4) Type Pallet Spring | 6-325 |
| (5) Ribbon Reverse Spur Gear | 6-325 |
| (6) Ribbon Reverse Detent | 6-327 |
| (7) Ribbon Reverse Detent Lever Spring | 6-327 |
| g. Selector Mechanism Adjustments | 6-327 |
| (1) Bail Lever Guide | 6-327 |
| (2) Start Lever Spring | 6-327 |
| (3) Armature Clamp Stop | 6-329 |
| (4) Armature Alignment | 6-329 |
| (5) Armature Backstop Alignment (TP152424 Only) | 6-331 |
| h. Spacing Mechanism Adjustments | 6-331 |
| (1) Printing Carriage Position | 6-331 |
| (2) Left Margin | 6-331 |
| (3) Automatic Carriage Return-Line Feed Bell Crank Spring | 6-333 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|---|-------------|
| (4) Automatic Carriage Return and Line Feed Arm | 6-333 |
| (5) Decelerating Slide Bell Crank Spring | 6-336 |
| (6) Spacing Cutout Transfer Bail Spring | 6-336 |
| (7) Right Margin | 6-336 |
| (8) Margin Indicator Lamp | 6-339 |
| (9) Oscillating Rail Slide Position | 6-339 |
| (10) Spacing Feed Pawl Spring | 6-339 |
| 6-8. Keyboard Unit | 6-342 |
| 6-8.1 Keyboard Unit (High-Level) | 6-342 |
| a. Ratchet Wheel Tension | 6-343 |
| b. Time Delay Switch Position | 6-343 |
| c. Latch Pawl Spring | 6-343 |
| d. Feed Pawl Spring | 6-343 |
| e. Contact Pawl Spring | 6-343 |
| f. Disabling Device | 6-347 |
| g. Cam Follower Lever Spring | 6-347 |
| h. Time Delay Mechanism Position | 6-350 |
| SECTION IV. ADJUSTMENTS (EARLIER DESIGN VARIABLE FEATURES) | 6-350 |
| 6-9. Typing Unit | 6-350 |
| 6-9.1 Typing Unit (High-Level) | 6-350 |
| a. Horizontal Tabulator Mechanism Adjustment | 6-350 |
| (1) Operating Lever Slide Arm | 6-350 |
| (2) Operating Lever Extension Link Spring | 6-350 |
| (3) Tabulator Shaft Spring (Torsion) | 6-353 |
| (4) Operating Lever Adjusting Plate | 6-353 |
| (5) Trip Arm Latch Bail | 6-353 |
| (6) Trip Arm Latch Bail Spring | 6-353 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | <u>Page</u> |
|--|-------------|
| (7) Trip Arm Latch Bail Adjusting Plate | 6-356 |
| (8) Spacing Cutout Transfer Bail Set Collar | 6-356 |
| (9) Cam Plate Stripper Bail | 6-356 |
| (10) Horizontal Tabulator Slide Arm Spring | 6-358 |
| (11) Operating Lever Cam Plate Spring | 6-358 |
| (12) Right Margin | 6-360 |
| (13) Space Suppression Bypass Spring | 6-360 |
| (14) Tabulator Shaft Mounting Brackets | 6-361 |
| (15) Tabulator Pawl Springs | 6-362 |
| (16) Pawl Mounting Arm Operating Range (Preliminary) | 6-362 |
| (17) Pawl Mounting Arm Operating Range (Final) | 6-362 |
| (18) Columnar Tabulator Stops | 6-365 |
| (19) Tabulator Stop Setting- Right Margin Tabulator Stop (with Wide Shelf) | 6-366 |
| b. Paper-Out Alarm Mechanism Adjustment | 6-366 |
| (1) Bell Crank Follower | 6-366 |
| (2) Bell Crank Follower Spring | 6-366 |
| 6-10. Keyboard Unit Adjustments (Earlier Design - Variable Features) | 6-366 |
| SECTION V. REPAIR | 6-368 |
| 6-11. General | 6-368 |
| 6-12. Disassembly and Reassembly Procedures | 6-368 |
| a. Removing Cover | 6-368 |
| b. Removing Typing Unit | 6-368 |
| c. Removing Keyboard Transmitter | 6-368 |
| d. Removing Distributor Mechanism | 6-368 |
| e. Removing Motor | 6-369 |
| f. Removing Base from Pan | 6-369 |
| g. Removing Gear Assembly | 6-369 |
| h. Disassembling Gear Assembly | 6-369 |
| i. Disassembling Motor Unit | 6-370 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|--|-------------|
| j. | Disassembling Distributor Mechanism | 6-370 |
| k. | Disassembling Keyboard Transmitter | 6-371 |
| l. | Disassembling Typing Unit | 6-371 |
| | (1) Removing Paper | 6-371 |
| | (2) Removing Ribbon | 6-371 |
| | (3) Removing Type Box | 6-371 |
| | (4) Disassembling Type Box | 6-371 |
| | (5) Disconnecting Type Box Link from Carriage | 6-372 |
| | (6) Removing Front Plate | 6-372 |
| | (7) Removing Code Bar Shift Bars | 6-372 |
| | (8) Removing Code Bar Basket | 6-372 |
| | (9) Removing Selector Clutch and Cam Sleeve Assembly | 6-372 |
| | (10) Removing Selector Mechanism | 6-373 |
| | (11) Removing Type Box Clutch | 6-373 |
| | (12) Removing Main Shaft | 6-373 |
| | (13) Disassembling Main Shaft | 6-374 |
| | (14) Removing B-Plug Mounting Bracket, Signal Bell, and Signal Bell Contacts | 6-374 |
| | (15) Removing Stunt Box | 6-374 |
| | (16) Removing Platen (Friction Feed) | 6-375 |
| | (17) Removing Code Bar Positioning Mechanism | 6-375 |
| | (18) Removing Left and Right Ribbon Feeding Mechanisms | 6-375 |
| | (19) Removing Trip Shaft | 6-376 |
| | (20) Removing Vertical Positioning Levers and Type Box Carriage Track | 6-376 |
| | (21) Removing Main Rocker Shaft | 6-376 |
| | (22) Removing Spacing Suppression Mechanism | 6-377 |
| | (23) Removing and Disassembling Code Bar Clutch Trip Shaft | 6-377 |
| | (24) Disassembling Selector Mechanism | 6-377 |
| | (25) Disassembling Front Plate | 6-377 |
| | (26) Disassembling Stunt Box | 6-379 |
| | (27) Disassembling Code Bar Detent Mechanism | 6-379 |
| m. | Reassembling Gear Assembly | 6-380 |
| n. | Mounting Gear Assembly on Base | 6-380 |
| o. | Mounting Base on Pan | 6-380 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|--|-------------|
| p. | Reassembling Type Box | 6-381 |
| q. | Reassembling Motor Unit | 6-381 |
| r. | Mounting Motor on Base | 6-381 |
| s. | Reassembling Distributor Mechanism | 6-382 |
| t. | Mounting Distributor on Base | 6-383 |
| u. | Reassembling Keyboard Transmitter | 6-383 |
| v. | Mounting Keyboard Transmitter | 6-383 |
| w. | Reassembling Typing Unit | 6-383 |
| | (1) Replacing Felts and Parts Attached to Side Plates | 6-383 |
| | (2) Replacing Eight Felts on Space Suppression Mechanism | 6-384 |
| | (3) Installing Space Suppression Mechanism on Typing Unit | 6-385 |
| | (4) Installing Code Bar Clutch Trip Shaft | 6-385 |
| | (5) Installing Trip Shaft Mechanism | 6-385 |
| | (6) Reassembling Main Shaft | 6-386 |
| | (7) Installing Main Shaft | 6-387 |
| | (8) Installing Vertical Positioning Levers and Type Box Carriage Track | 6-387 |
| | (9) Reassembling Code Bar Detent Mechanism | 6-388 |
| | (10) Installing Code Bar Basket | 6-388 |
| | (11) Installing Main Rocker Shaft | 6-388 |
| | (12) Installing Type Box Clutch | 6-388 |
| | (13) Installing Ribbon Feed Mechanism | 6-389 |
| | (14) Installing Code Bar Positioning Mechanism | 6-389 |
| | (15) Installing Code Bar Shift Bars | 6-389 |
| | (16) Reassembling Selector Mechanism | 6-389 |
| | (17) Installing Selector Mechanism | 6-390 |
| | (18) Installing Selector Clutch and Cam Sleeve Assembly | 6-390 |
| | (19) Installing Control Springs for Main Shaft | 6-391 |
| | (20) Performing Typing Unit Adjustments | 6-391 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|---|-------------|
| | (21) Reassembling Cover Unit Components | 6-391 |
| | (22) Installing Platen | 6-391 |
| | (23) Reassembling Stunt Box | 6-392 |
| | (24) Installing Signal Bell Contacts on Stunt Box | 6-392 |
| | (25) Installing Stunt Box | 6-392 |
| | (26) Reassembling Front Plate | 6-392 |
| | (27) Installing Front Plate | 6-394 |
| | (28) Installing Type Box | 6-395 |
| | (29) Installing Ribbon | 6-395 |
| | x. Reinstalling Typing Unit | 6-395 |
| 7 | PARTS LIST | 7-1 |
| | 7-1. Scope | 7-1 |
| | 7-2. Maintenance Parts List | 7-1 |
| | 7-3. List of Manufacturers | 7-1 |
| | 7-4. Parts Location Diagrams | 7-1 |
| | 7-5. List of Abbreviations | 7-1 |
| 8 | INSTALLATION | 8-1 |
| | 8-1. Introduction | 8-1 |
| | 8-2. Unpacking | 8-1 |
| | 8-3. Space Requirements | 8-1 |
| | 8-4. Installation Procedures | 8-1 |
| | 8-4.1 Installation Procedures (High-Level) | 8-1 |
| | a. Normal Mounting | 8-1 |
| | b. Special Shock Mounting | 8-4 |
| | c. Attaching Speed Indicator Plate | 8-4 |
| | d. Enabling Time Delay Mechanism | 8-4 |
| | e. Electrical Connections | 8-4 |

TABLE OF CONTENTS - Continued

| <u>Chapter</u> | | <u>Page</u> |
|----------------|--|-------------|
| 8-4.2 | Installation Procedures (Low-Level) | 8-4 |
| a. | Electrical Service Assembly (KSR) Installation | 8-4 |
| b. | Electrical Service Assembly (RO) Installation | 8-6 |
| c. | ESA Circuit Card Hold-Down Installation | 8-6 |
| | (1) ESA 323120 | 8-8 |
| | (2) ESA 321231 and 323121 | 8-8 |
| d. | Electrical Connections (Low-Level) | 8-8 |
| 8-5. | Installation Checkout | 8-8 |
| a. | Reference Standards Test | 8-8 |
| b. | Performance Tests | 8-13 |

LIST OF ILLUSTRATIONS

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 1-1 | Model 28 Compact Page Printers KSP and RO | 1-0 |
| 1-2 | Model 28 Compact Page Printer (KSR) (Cover Removed) | 1-3 |
| 1-3 | Model 28 Compact Page Printer (RO) (Cover Removed) | 1-4 |
| 1-4 | Keyboard Unit | 1-5 |
| 1-5 | Keyboard Transmitter | 1-7 |
| 1-6 | Distributor (Rear View) | 1-8 |
| 1-7 | 3-Speed Gear Shift Assembly | 1-9 |
| 1-8 | Control Hood (RO) | 1-10 |
| 1-9 | Typing Unit (Front View) | 1-11 |
| 1-10 | Typing Unit (Rear View) | 1-12 |
| 1-11 | Motor Unit (Rear View) | 1-13 |
| 1-12 | Cover Unit (KSR) | 1-14 |
| 1-13 | Cover Unit (RO) | 1-15 |
| 1-14 | Keyboard Transmitter Photoelectric Assembly | 1-18 |
| 1-15 | Photoelectric Distributor | 1-19 |
| 1-16 | RFI Selector Mechanism | 1-20 |
| 1-17 | Typical ESA (Top View) | 1-22 |
| 1-18 | ESA - Circuit Cards Installed | 1-24 |
| 2-1 | CPP (KSR and RO) Controls and Indicators | 2-2 |
| 2-2 | Path of Ribbon | 2-7 |
| 3-1 | CPP (KSR and RO) Overall Functional Block Diagram (High-Level) | 3-2 |
| 3-2 | CPP (KSR and RO) Overall Functional Block Diagram (Low-Level) | 3-3 |
| 3-3 | CPP Detailed Functional Diagram | 3-5 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 3-4 | Typing Unit (Friction Feed) (Front View) | 3-8 |
| 3-5 | Typing Unit (Left Rear View) | 3-9 |
| 3-6 | Typical Stunt Box | 3-12 |
| 3-7 | Signaling Code | 3-14 |
| 3-8 | Code Representation of Letters R and Y | 3-15 |
| 3-9 | ESA for Table Mounting - Double Box Construction | 3-17 |
| 3-10 | Typical Parts of an ESA - Double Box Construction (Bottom View) | 3-18 |
| 3-11 | Typical Parts of an ESA - Single Box Construction (Top View, Covers Removed) | 3-19 |
| 3-12 | Typical ESA Showing Circuit Card Connectors | 3-20 |
| 3-13 | One-Half Ampere Power Supply (TP321290) | 3-21 |
| 3-14 | Selector Magnet Driver (SMD) (TP323810) | 3-23 |
| 3-15 | Main Shaft (Right Front View) | 3-31 |
| 3-16 | Three-Stop Clutch | 3-33 |
| 3-17 | One-Stop Clutch (Disengaged) | 3-33 |
| 3-18 | One-Stop Clutch (Engaged) | 3-34 |
| 3-19 | Selector Clutch and Range Finder (Right Front View) | 3-35 |
| 3-20 | Selecting Mechanism and Transfer Mechanism | 3-36 |
| 3-21 | Code Bar Mechanism | 3-39 |
| 3-22 | Code Bar Shift Bar Positioning | 3-40 |
| 3-23 | Vertical Arrangement of Code Bars | 3-40 |
| 3-24 | Typical Type Box Pallet Arrangement | 3-42 |
| 3-25 | Draw-Wire Rope and Drums (Front View) | 3-44 |
| 3-26 | Letters-Figures Shift Mechanism (Left Front View) | 3-45 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 3-27 | Vertical Positioning Mechanism | 3-47 |
| 3-28 | Clutch Trip Mechanism (Right Rear View) | 3-48 |
| 3-29 | Horizontal Positioning Mechanisms (Front View) | 3-49 |
| 3-30 | Horizontal Motion Stop Slides (Right Front View) | 3-50 |
| 3-31 | Print Hammer and Carriage | 3-53 |
| 3-32 | Spacing Mechanism | 3-55 |
| 3-33 | Ribbon Feeding Mechanism | 3-58 |
| 3-34 | Friction Feed Platen Mechanism | 3-60 |
| 3-35 | Stunt Box (Top View) | 3-61 |
| 3-36 | Stunt Box (Function Linkage Unselected) | 3-63 |
| 3-37 | Reset Bail Mechanism | 3-64 |
| 3-38 | Function Bar Selection | 3-65 |
| 3-39 | Typical Function Linkage (Unselected) | 3-65 |
| 3-40 | Typical Function Linkage (Selected) | 3-66 |
| 3-41 | Carriage Return Function Mechanism | 3-67 |
| 3-42 | Carriage Return Mechanism | 3-68 |
| 3-43 | Line Feed Mechanism (Left Rear View) | 3-70 |
| 3-44 | Line Feed Mechanism (Right Rear View) | 3-71 |
| 3-45 | Typical Stunt Box Contact (Unoperated) | 3-73 |
| 3-46 | Typical Stunt Box Contact (Operated) | 3-74 |
| 3-47 | Code Bar Mechanism | 3-76 |
| 3-48 | Universal Mechanism | 3-77 |
| 3-49 | Contact Mechanism | 3-79 |
| 3-50 | Reset Mechanism | 3-80 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---------------------------------------|-------------|
| 3-51 | Repeat Mechanism | 3-81 |
| 3-52 | Distributor Mechanism | 3-82 |
| 3-53 | 3-Speed Gear Shift Assembly | 3-84 |
| 3-54 | Local Carriage Return Mechanism | 3-86 |
| 3-55 | Local Line Feed Mechanism | 3-86 |
| 3-56 | Time Delay Mechanism | 3-87 |
| 3-57 | Code Bar Mechanism | 3-90 |
| 3-58 | Shutter Window Mechanism | 3-91 |
| 3-59 | Universal Mechanism (Left Front View) | 3-92 |
| 3-60 | Universal Mechanism (Left Side View) | 3-93 |
| 3-61 | Photoelectric Distributor Mechanism | 3-95 |
| 4-1 | CPP Test Setup (High-Level) | 4-28 |
| 4-2 | CPP Test Setup (Low-Level) | 4-40 |
| 4-3 | Printing Area (Front View) | 4-49 |
| 4-4 | Printing Mechanism | 4-50 |
| 4-5 | Type Box Carriage Mechanism | 4-51 |
| 4-6 | Paper Feed Area | 4-52 |
| 4-7 | Paper Feed Mechanism | 4-53 |
| 4-8 | Code Bar Area | 4-54 |
| 4-9 | Code Bar Detents | 4-54 |
| 4-10 | Code Bar Mechanism (A) | 4-55 |
| 4-11 | Ribbon Area (A) | 4-56 |
| 4-12 | Ribbon Feed Mechanism (A) | 4-57 |
| 4-13 | Ribbon Feed Mechanism (B) | 4-58 |
| 4-14 | Vertical Positioning Mechanism | 4-59 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--------------------------------------|-------------|
| 4-15 | Ribbon Area (B) | 4-60 |
| 4-16 | Ribbon Feed Mechanism (C) | 4-61 |
| 4-17 | Vertical Positioning Mechanism | 4-62 |
| 4-18 | Selector Area | 4-63 |
| 4-19 | Code Bar Mechanism (B) | 4-64 |
| 4-20 | Selector Mechanism | 4-65 |
| 4-21 | Function Area (A) | 4-66 |
| 4-22 | Stunt Box Mechanism | 4-67 |
| 4-23 | Stripper Blade Mechanism | 4-68 |
| 4-24 | Function Area (B) | 4-69 |
| 4-25 | Ribbon Reverse Mechanism | 4-70 |
| 4-26 | Shift Mechanism | 4-71 |
| 4-27 | Function Rocker Shaft Mechanism | 4-72 |
| 4-28 | Spacing Area | 4-73 |
| 4-29 | Spacing Drum Drive Mechanism | 4-74 |
| 4-30 | Carriage Return Mechanism | 4-75 |
| 4-31 | Spacing Drum Feed Mechanism | 4-75 |
| 4-32 | Track Guide Mechanism | 4-76 |
| 4-33 | Horizontal Positioning Area | 4-77 |
| 4-34 | Horizontal Positioning Mechanism (A) | 4-78 |
| 4-35 | Horizontal Positioning Mechanism (B) | 4-79 |
| 4-36 | Letters-Figures Shift Area | 4-80 |
| 4-37 | Letters-Figures Shift Mechanism (A) | 4-81 |
| 4-38 | Letters-Figures Shift Mechanism (B) | 4-82 |
| 4-39 | Oscillating Mechanism (A) | 4-83 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 4-40 | Oscillating Mechanism (B) | 4-84 |
| 4-41 | Main Shaft Area | 4-85 |
| 4-42 | Main Shaft Mechanism (A) | 4-86 |
| 4-43 | Main Shaft Mechanism (B) | 4-87 |
| 4-44 | Selector Cam Clutch Assembly | 4-87 |
| 4-45 | Main Shaft-Clutches; Gears | 4-88 |
| 4-46 | Spacing Area | 4-89 |
| 4-47 | Spacing Mechanism (A) | 4-90 |
| 4-48 | Spacing Mechanism (B) | 4-91 |
| 4-49 | Spacing Mechanism (C) | 4-92 |
| 4-50 | Line Feed Area (A) | 4-93 |
| 4-51 | Line Feed Mechanism (A) | 4-94 |
| 4-52 | Line Feed Area (B) | 4-95 |
| 4-53 | Line Feed Mechanism (B) | 4-96 |
| 4-54 | Paper Guide Area | 4-97 |
| 4-55 | Paper Guide Mechanism | 4-98 |
| 4-56 | Horizontal Tabulator Mechanism (Early Design) | 4-99 |
| 4-57 | Tabulator Shaft Mechanism | 4-100 |
| 4-58 | Space Suppression Mechanism | 4-100 |
| 4-59 | Horizontal Tabulator Mechanism (Early Design) | 4-101 |
| 4-60 | Operating Lever Mechanism | 4-102 |
| 4-61 | Spacing Clutch Mechanism | 4-103 |
| 4-62 | Selective Calling Mechanism | 4-104 |
| 4-63 | Stripper Bail Mechanism | 4-105 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 4-64 | Shaft and Stripper Bail Mechanism | 4-106 |
| 4-65 | Selective Calling Mechanism | 4-107 |
| 4-66 | Single-Double Line Feed Mechanism | 4-108 |
| 4-67 | Function Reset Bail Mechanism | 4-109 |
| 4-68 | Selective Calling Mechanism | 4-110 |
| 4-69 | Clutch Suppression Mechanism | 4-111 |
| 4-70 | Local Backspace Mechanism | 4-112 |
| 4-71 | Pawl Mechanism | 4-113 |
| 4-72 | Trip Mechanism | 4-114 |
| 4-73 | Reverse Line Feed Mechanism | 4-115 |
| 4-74 | Trip Mechanism | 4-116 |
| 4-75 | Line Feed Mechanism (C) | 4-117 |
| 4-76 | Page Feed-Out Mechanism | 4-118 |
| 4-77 | Drive Mechanism | 4-119 |
| 4-78 | Paper-Out Alarm Mechanism | 4-120 |
| 4-79 | Continuous Spacing Mechanism | 4-121 |
| 4-80 | Slide Arm Bracket | 4-122 |
| 4-81 | Compression Spring | 4-122 |
| 4-82 | Trip Mechanism | 4-123 |
| 4-83 | Horizontal Tabulator Mechanism (Late Design) | 4-124 |
| 4-84 | Blocking Lever | 4-125 |
| 4-85 | Spacing Cutout Transfer Bail | 4-126 |
| 4-86 | Bail Extension Arm | 4-126 |
| 4-87 | Latch Bail | 4-127 |
| 4-88 | Operating Lever | 4-128 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 4-89 | Intermediate Bail | 4-129 |
| 4-90 | Slide Arm | 4-130 |
| 4-91 | Operating Lever | 4-130 |
| 4-92 | Two-Color Ribbon Mechanism Oscillating Lever | 4-131 |
| 4-93 | Two-Color Ribbon Mechanism Ribbon Operating Mechanism | 4-132 |
| 4-94 | Universal Contact Stunt Box Mechanism | 4-133 |
| 4-95 | Operating Mechanism | 4-134 |
| 4-96 | Vertical Tabulation and Transmitter Distributor Control Mechanism | 4-135 |
| 4-97 | Form Alignment Switch Mechanism | 4-136 |
| 4-98 | Universal Contact Selector Mechanism | 4-137 |
| 4-99 | DC Magnet-Operated Print Suppression Mechanism | 4-137 |
| 4-100 | Letters-Figures Code Bar Shift Magnet Mechanism | 4-138 |
| 4-101 | Print Suppression and Off-Line Stunt Shift Control Mechanism | 4-138 |
| 4-102 | Form Feed-Out Mechanism | 4-139 |
| 4-103 | Keyboard Transmitter Mechanism | 4-140 |
| 4-104 | Keylevers | 4-141 |
| 4-105 | Spacebar | 4-141 |
| 4-106 | Break and REPT Levers | 4-142 |
| 4-107 | Contact Block | 4-142 |
| 4-108 | Latchlever | 4-143 |
| 4-109 | Reset Bail | 4-143 |
| 4-110 | Code Bar Mechanisms | 4-144 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 4-111 | Universal Lever | 4-144 |
| 4-112 | Solenoid Reset Mechanism | 4-145 |
| 4-113 | Gear Shift Assembly | 4-146 |
| 4-114 | Gear Shift Linkage | 4-147 |
| 4-115 | Gear Assembly | 4-148 |
| 4-116 | Local Carriage Return Mechanism | 4-149 |
| 4-117 | Local Line Feed Mechanism | 4-149 |
| 4-118 | Margin Indicator Switch | 4-150 |
| 4-119 | Cover Unit | 4-151 |
| 4-120 | Cover Latch Mechanism | 4-152 |
| 4-121 | Dome Stop Arm | 4-152 |
| 4-122 | Window Door Hinge | 4-153 |
| 4-123 | Dome Hinge | 4-153 |
| 4-124 | Time Delay Mechanism | 4-154 |
| 4-125 | Trip and Reset Mechanism | 4-155 |
| 4-126 | Cam Follower and Feed Mechanism | 4-155 |
| 5-1 | AC Power and Control Circuits | 5-11 |
| 5-2 | DC (Signal) Circuits | 5-13 |
| 5-3 | Wiring Diagram; Model 28 CPP Covers LPC400 (KSR) and LPC401 (RO) | 5-17 |
| 5-4 | Wiring Diagram; Model 28 CPP KSR Keyboard Base LLK 2 | 5-19 |
| 5-5 | Wiring Diagram; Model 28 CPP RO, Base LLB | 5-21 |
| 5-6 | Wiring Diagram; Model 28 CPP KSR and RO Typing Unit LP111 | 5-23 |
| 5-7 | Wiring Diagram; Model 28 CPP Motor Units LMU37 and LMU51 | 5-25 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 5-8 | Wiring Diagram; Model 28 CPP KSR (Less Cover and Printer) | 5-39 |
| 5-9 | Schematic Diagram; Model 28 CPP KSR | 5-41 |
| 5-10 | Schematic Diagram; Model 28 CPP RO | 5-43 |
| 5-11 | Wiring Diagram; Model 28 CPP RO Cover LPC402 | 5-45 |
| 5-12 | Wiring Diagram; Model 28 CPP KSR Cover LPC403 | 5-47 |
| 5-13 | Wiring Diagram; Model 28 CPP RO ESA 321231 (Sheet 1 of 3) | 5-49 |
| 5-13 | Wiring Diagram; Model 28 CPP RO ESA 321231 (Sheet 2 of 3) | 5-51 |
| 5-13 | Wiring Diagram; Model 28 CPP RO ESA 321231 (Sheet 3 of 3) | 5-53 |
| 5-14 | Schematic Diagram; Model 28 CPP RO ESA 321231 | 5-55 |
| 5-15 | Assembly Drawing; Model 28 CPP KSR and RO ESA Power Supply Circuit Board Assembly with Heat Sink | 5-57 |
| 5-16 | Circuit Board Assembly; Model 28 CPP KSP and RO ESA Power Supply (47 - 53 VDC, 0.5 Amp Max) (Sheet 1 of 2) | 5-59 |
| 5-16 | Circuit Board Assembly; Model 28 CPP KSR and RO ESA Power Supply (47 - 53 VDC, 0.5 Amp Max) (Sheet 2 of 2) | 5-61 |
| 5-17 | Circuit Board Assembly; Model 28 CPP KSR and RO ESA SMD with Signal Combiner | 5-63 |
| 5-18 | Schematic Diagram; Model 28 CPP KSP and FO ESA SMD with Signal Combiner, 323810 | 5-65 |
| 5-19 | Wiring Diagram; Model 28 CPP KSR FSA 323120 (CMD) (Sheet 1 of 4) | 5-67 |
| 5-19 | Wiring Diagram; Model 28 CPP KSR FSA 323120 (CMD) (Sheet 2 of 4) | 5-69 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 5-19 | Wiring Diagram; Model 28 CPP KSR ESA 323120 (CMD) (Sheet 3 of 4) | 5-71 |
| 5-19 | Wiring Diagram; Model 28 CPP KSR ESA 323120 (CMD) (Sheet 4 of 4) | 5-73 |
| 5-20 | Schematic Diagram; Model 28 CPP KSR ESA 323120 (CMD) | 5-75 |
| 5-21 | Assembly Drawing; Model 28 CPP KSR ESA CMD Circuit Board Assembly with Heat Sink | 5-77 |
| 5-22 | Schematic Diagram; Model 28 CPP KSR ESA CMD Circuit Board Assembly | 5-79 |
| 5-23 | Wiring Diagram; Model 28 CPP KSR ESA 323121 (SMD and LLK) (Sheet 1 of 3) | 5-81 |
| 5-23 | Wiring Diagram; Model 28 CPP KSR ESA 323121 (SMD and LLK) (Sheet 2 of 3) | 5-83 |
| 5-23 | Wiring Diagram; Model 28 CPP KSR ESA 323121 (SMD and LLK) (Sheet 3 of 3) | 5-85 |
| 5-24 | Schematic Diagram; Model 28 CPP KSR ESA 323121 (SMD and LLK) | 5-87 |
| 5-25 | Schematic Diagram; Model 28 CPP KSR ESA LLK Circuit Board Assembly | 5-89 |
| 5-26 | Wiring Diagram; Model 28 CPP RO Base LLB 5 | 5-91 |
| 5-27 | Wiring Diagram; Model 28 CPP RO Typing Unit LP 139 | 5-93 |
| 5-28 | Wiring Diagram; Model 28 CPP RO Typing Unit Selector Assembly 319204 | 5-95 |
| 5-29 | Wiring Diagram; Model 28 CPP KSR Typing Unit LP 156 | 5-97 |
| 6-1 | Code Bar Detent | 6-3 |
| 6-2 | Code Bar Detent Spring | 6-3 |
| 6-3 | Code Bar Yield Spring | 6-4 |
| 6-4 | Code Bar Shift Lever Link Bracket | 6-5 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 6-5 | Code Bar Shift Lever Driver Arm | 6-7 |
| 6-6 | Transfer Lever Spring and Common Transfer Lever Spring | 6-8 |
| 6-7 | Transfer Lever Eccentric | 6-9 |
| 6-8 | Intermediate Arm Backstop Bracket | 6-11 |
| 6-9 | Figures-Letters Shift Code Bar Operating Mechanism | 6-12 |
| 6-10 | Function Bar Spring, Function Lever Spring, and Function Pawl Spring | 6-14 |
| 6-11 | Function Contact Spring | 6-16 |
| 6-12 | Function Reset Bail Blade | 6-17 |
| 6-13 | Function Reset Bail Spring | 6-19 |
| 6-14 | Keyboard Lock Lever Spring | 6-20 |
| 6-15 | Stripper Blade Driver Cam Position | 6-21 |
| 6-16 | Stunt Box Clip | 6-22 |
| 6-17 | Unshift-On-Space Function Pawl | 6-24 |
| 6-18 | Left Margin (Sprocket Feed), Printing Hammer Stop Bracket (Sprocket Feed) | 6-25 |
| 6-19 | Right Margin (Sprocket Feed) | 6-27 |
| 6-20 | Line Feed Bar Bell Crank Spring, Line Feed Bar Release Lever Spring, Line Feed Spur Gear Detent Eccentric, and Platen Detent Bail Spring | 6-28 |
| 6-21 | Line Feed Clutch Phasing | 6-30 |
| 6-22 | Paper Finger (Friction Feed) | 6-31 |
| 6-23 | Paper Finger Spring, Paper Pressure Bail Spring, and Pressure Roller Lever Spring | 6-33 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 6-24 | Paper Finger Locking Arm Spring, Paper Finger or Guide Bracket Latch Spring, and Paper Finger or Guide Bracket Shaft Spring | 6-34 |
| 6-25 | Paper Finger or Guide Bracket (Sprocket Feed) | 6-36 |
| 6-26 | Paper Guide (Sprocket Feed) and Sprocket Pin Spring | 6-38 |
| 6-27 | Paper Straightener Collar (Friction Feed) and Paper Straightener Lever Spring | 6-39 |
| 6-28 | Platen End Play (Sprocket Feed) | 6-40 |
| 6-29 | Printed Line (Sprocket Feed) and Sprocket Pin Separation | 6-41 |
| 6-30 | Single-Double Line Feed Stripper Bail Assembly Springs | 6-42 |
| 6-31 | Paper Finger | 6-44 |
| 6-32 | Clutch Drum Position and Clutch Shoe Lever Spring | 6-45 |
| 6-33 | Clutch Shoe Spring | 6-47 |
| 6-34 | Clutch Latch Lever Spring (Except Selector), Code Bar Clutch Trip Lever, and Trip Lever Spring | 6-48 |
| 6-35 | Clutch Shoe Lever | 6-50 |
| 6-36 | Type Box Clutch Trip Lever | 6-51 |
| 6-37 | Clutch Trip Lever Spring | 6-52 |
| 6-38 | Spacing Clutch Trip Lever | 6-53 |
| 6-39 | Clutch Trip Shaft Set Collars | 6-55 |
| 6-40 | Code Bar Clutch Cam Follower Spring | 6-57 |
| 6-41 | Function Clutch Trip Lever | 6-58 |
| 6-42 | Type Box Clutch Trip Lever Eccentric Post | 6-59 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 6-43 | Line Feed Clutch Trip Lever Eccentric Post and Line Feed Clutch Trip Lever Adjusting Screw | 6-60 |
| 6-44 | Breaker Slide Bail Spring | 6-62 |
| 6-45 | Horizontal Positioning Lock Lever Spring and Rocker Shaft Bracket Eccentric Stud | 6-63 |
| 6-46 | Decelerating Slide Spring | 6-65 |
| 6-47 | Horizontal Positioning Drive Linkage and Horizontal Positioning Drive Linkage Spring | 6-66 |
| 6-48 | Horizontal Stop Slide Spring | 6-68 |
| 6-49 | Left Vertical Positioning Lever Eccentric Stud and Vertical Positioning Lock Lever Spring | 6-69 |
| 6-50 | Reversing Slide Adjusting Stud and Reversing Slide Detent Spring | 6-71 |
| 6-51 | Reversing Slide Brackets | 6-72 |
| 6-52 | Right Vertical Positioning Lever Eccentric Stud and Vertical Positioning Lever Spring | 6-74 |
| 6-53 | Rocker Shaft Left Bracket | 6-75 |
| 6-54 | Shift Linkage and Shift Linkage Spring | 6-76 |
| 6-55 | Type Box Position (Sprocket Feed) | 6-78 |
| 6-56 | Vertical Positioning Lock Lever | 6-79 |
| 6-57 | Printing Arm, Printing Hammer Stop Bracket, and Type Pallet Spring | 6-81 |
| 6-58 | Printing Carriage Lower Roller | 6-83 |
| 6-59 | Type Box Carriage Roller Arm Spring | 6-83 |
| 6-60 | Printing Carriage Position | 6-84 |
| 6-61 | Printing Hammer Bearing Stud | 6-85 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 6-62 | Printing Hammer Operating Bail Latch Spring, Printing Hammer Bail Spring, Printing Hammer Plunger Spring, Printing Hammer Yield Spring, and Printing Track | 6-86 |
| 6-63 | Ribbon Feed Lever Bracket, Ribbon Feed Lever Spring, and Ribbon Ratchet Wheel Friction Spring | 6-88 |
| 6-64 | Ribbon Lever Spring and Ribbon Tension Spring | 6-91 |
| 6-65 | Ribbon Reverse Detent, Ribbon Reverse Detent Lever Spring, and Ribbon Reverse Spur Gear | 6-92 |
| 6-66 | Type Box Alignment | 6-94 |
| 6-67 | Marking Lock Lever Spring | 6-96 |
| 6-68 | Start Lever Spring | 6-97 |
| 6-69 | Push Lever Reset Bail Spring | 6-98 |
| 6-70 | Selector Clutch Latch Lever Spring and Spacing Lock Lever Spring | 6-99 |
| 6-71 | Range Finder Knob Phasing and Selector Clutch Stop Arm | 6-101 |
| 6-72 | Selector Receiving Margin (Dual Speed Operation) | 6-102 |
| 6-73 | Selector Armature | 6-105 |
| 6-74 | Selector Armature Downstop (Preliminary) | 6-105 |
| 6-75 | Selector Armature Downstop (Final) | 6-106 |
| 6-76 | Selector Armature Spring (Double Button) | 6-107 |
| 6-77 | Selector Magnet Bracket | 6-109 |
| 6-78 | Selector Armature Spring (Single Button) | 6-111 |
| 6-79 | Selector Cam Lubricator | 6-112 |
| 6-80 | Selector Clutch Drum | 6-114 |
| 6-81 | Selector Lever Spring | 6-115 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 6-82 | Selector Push Lever Spring | 6-116 |
| 6-83 | Automatic Carriage Return/Line Feed Bell Crank Spring | 6-117 |
| 6-84 | Left Margin | 6-118 |
| 6-85 | Carriage Draw-Wire Rope and Lower Draw Wire Rope Pulley Bail Spring | 6-120 |
| 6-86 | Carriage Return Latch Bail and Carriage Return Latch Bail Spring | 6-122 |
| 6-87 | Carriage Return Lever | 6-123 |
| 6-88 | Carriage Return Spring and Spacing Feed Pawl Release Link Spring | 6-125 |
| 6-89 | Dashpot Vent Screw and Transfer Slide Spring | 6-126 |
| 6-90 | Margin Indicator Lamp | 6-128 |
| 6-91 | Oscillating Rail Slide Position and Spacing Feed Pawl Spring | 6-129 |
| 6-92 | Right Margin and Spacing Cutout Transfer Bail Spring | 6-131 |
| 6-93 | Right Margin with Automatic Carriage Return-Line Feed Ring | 6-133 |
| 6-94 | Spacing Gear Clearance and Spacing Gear Phasing | 6-134 |
| 6-95 | Spacing Suppression Bail Spring | 6-135 |
| 6-96 | Spacing Trip Lever Bail Cam Plate, Spacing Trip Lever Bail Spring, and Spacing Trip Lever Spring | 6-136 |
| 6-97 | Selector Armature | 6-138 |
| 6-98 | Selector Armature Alignment | 6-138 |
| 6-99 | Selector Armature Spring | 6-140 |
| 6-100 | Selector Base (Magnets Energized) | 6-141 |
| 6-101 | Universal Link | 6-143 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 6-102 | Contact Wires | 6-144 |
| 6-103 | Spacebar Spring | 6-145 |
| 6-104 | Keylever Spring | 6-146 |
| 6-105 | Non-repeat and Latchlever Springs | 6-147 |
| 6-106 | Contact Block Spring | 6-148 |
| 6-107 | Contact Wire Spring | 6-148 |
| 6-108 | Repeat Keylever and Break Keylever Springs | 6-150 |
| 6-109 | Reset Bail Spring | 6-151 |
| 6-110 | Universal Link Spring | 6-151 |
| 6-111 | Universal Lever Spring | 6-152 |
| 6-112 | Reset Solenoid Position | 6-152 |
| 6-113 | Reset Arm | 6-153 |
| 6-114 | Universal Contact | 6-154 |
| 6-115 | Keyboard Transmitter Positioning | 6-155 |
| 6-116 | Clutch Trip Armature Air Gap | 6-156 |
| 6-117 | Clutch Trip Lever | 6-158 |
| 6-118 | Armature Extension | 6-159 |
| 6-119 | Clutch Stop Lug | 6-159 |
| 6-120 | Clutch Shoe Lever | 6-160 |
| 6-121 | Cam Follower Guide | 6-161 |
| 6-122 | Mounting Typing Unit | 6-162 |
| 6-123 | Distributor Block | 6-163 |
| 6-124 | Code Level Contact Gaps | 6-164 |
| 6-125 | Clutch Timing Contact Gap | 6-165 |
| 6-126 | Solenoid Contact Gap | 6-166 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 6-127 | Clutch Shoe Lever Spring | 6-167 |
| 6-128 | Clutch Shoe Spring | 6-168 |
| 6-129 | Cam Follower Spring | 6-169 |
| 6-130 | Rocker Spring and Rocker Compression Springs | 6-170 |
| 6-131 | Clutch Latchlever Spring | 6-172 |
| 6-132 | Clutch Trip Lever Spring | 6-172 |
| 6-133 | Clutch Magnet Armature Bail Spring | 6-173 |
| 6-134 | Typing Unit Gear Backlash and Motor Pinion Backlash | 6-174 |
| 6-135 | Baud Selector Stop Plate | 6-175 |
| 6-136 | Gear Shift Spring | 6-176 |
| 6-137 | Distributor Gear Backlash | 6-177 |
| 6-138 | Margin Indicator Spring | 6-178 |
| 6-139 | Local Carriage Return Spring | 6-178 |
| 6-140 | Local Line Feed Spring | 6-179 |
| 6-141 | Line Break Key | 6-180 |
| 6-142 | Local Line Feed | 6-182 |
| 6-143 | Local Carriage Return | 6-183 |
| 6-144 | Cover Latch | 6-184 |
| 6-145 | Window Door Hinge | 6-186 |
| 6-146 | Dome Hinge Clearance and Dome Centering | 6-186 |
| 6-147 | Dome Latch | 6-187 |
| 6-148 | Paper Guide | 6-187 |
| 6-149 | Window | 6-189 |
| 6-150 | Keyboard Hood (KSR Set Only) | 6-189 |
| 6-151 | Base Hood (RO Set Only) | 6-190 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 6-152 | Line Guide | 6-191 |
| 6-153 | Shutter Window Gap | 6-192 |
| 6-154 | Universal Link and Universal Link Spring | 6-193 |
| 6-155 | Keyboard Reset Lever Spring | 6-194 |
| 6-156 | Clutch Drum | 6-195 |
| 6-157 | Clutch Shoe Lever | 6-197 |
| 6-158 | Clutch Trip Lever | 6-198 |
| 6-159 | Magnet Plate | 6-199 |
| 6-160 | Distributor Gear | 6-200 |
| 6-161 | Reset Lever | 6-202 |
| 6-162 | Latch Bail | 6-203 |
| 6-163 | Clutch Shoe Lever Spring | 6-204 |
| 6-164 | Clutch Shoe Spring | 6-205 |
| 6-165 | Armature, Latch Bail, Latchlever, Magnet Blocking Lever, and Trip Lever Springs | 6-207 |
| 6-166 | "Figures" Stunt Box Contact | 6-208 |
| 6-167 | Reset Bail Operating Spring | 6-210 |
| 6-168 | Suppression Bail Adjusting Bracket | 6-211 |
| 6-169 | Function Clutch Trip Lever and Solenoid Plunger Spring | 6-212 |
| 6-170 | Armature Extension Clearance and Blocking Bail Extension Clearance | 6-214 |
| 6-171 | Armature Extension Overtravel | 6-215 |
| 6-172 | Type Box Clutch Trip Lever | 6-217 |
| 6-173 | Form Alignment Switch and Form Alignment Switch Spring | 6-218 |
| 6-174 | Form Feed-Out Torsion Spring | 6-220 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 6-175 | Blocking Lever Return Spring, Tabulator Pawl-Vertical (Final) and Tabulator Pawl Spring | 6-221 |
| 6-176 | Cam Plate Stripper Bail, Horizontal Tabulator Slide Arm Spring, and Operating Lever Cam Arm Spring | 6-223 |
| 6-177 | Spacing Cut-Out Transfer Bail Set Collar | 6-224 |
| 6-178 | Clutch Trip Lever Spring | 6-225 |
| 6-179 | Spacing Clutch Stop Lever | 6-227 |
| 6-180 | Intermediate Bail Spring and Latch Bail Adjusting Plate | 6-228 |
| 6-181 | Trip Lever Arm Latch Bail and Trip Lever Arm Latch Bail Spring | 6-229 |
| 6-182 | Operating Lever Adjusting Plate | 6-231 |
| 6-183 | Operating Lever Extension Link and Operating Lever Extension Link Spring | 6-232 |
| 6-184 | Right Margin and Space Suppression Bypass Spring | 6-234 |
| 6-185 | Tabulator Pawl (Preliminary) | 6-235 |
| 6-186 | Tabulator Pawl - Horizontal (Final) | 6-237 |
| 6-187 | Tabulator Stop Settings | 6-239 |
| 6-188 | Transmitter Control Contact Gap | 6-240 |
| 6-189 | Transmitter Control Contact Spring | 6-242 |
| 6-190 | Shift Magnet Yoke, Shift Magnet Armature, and Shift Magnet Armature Return Spring | 6-243 |
| 6-191 | Shift Code Bar Return Spring | 6-244 |
| 6-192 | Camming Bail Spring | 6-245 |
| 6-193 | Camming Bail Stop Arm | 6-246 |
| 6-194 | Pointer, Blocking Arm, and Blocking Arm Spring | 6-248 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 6-195 | Page Feed-Out Gear Play, Mounting Bracket, Indexing Disc, and Switch Operating Arm (Transmitter Control) | 6-249 |
| 6-196 | Bail Spring | 6-252 |
| 6-197 | Wire Bail | 6-253 |
| 6-198 | Switch Position | 6-254 |
| 6-199 | Switch Position and Switch Bracket Spring | 6-255 |
| 6-200 | Switch Operating Lever | 6-256 |
| 6-201 | Suppression Code Bar Mechanism and Zero Code Bar Shift Mechanism | 6-258 |
| 6-202 | Suppression Code Bar Position and Suppression Magnet Armature Return Spring | 6-259 |
| 6-203 | Line Feed Bar Bell Crank Spring | 6-261 |
| 6-204 | Line Feed Bar Release Lever Spring and Platen Detent Bail Spring, and Line Feed Spur Gear Detent Eccentric | 6-262 |
| 6-205 | Line Feed Bar Springs | 6-264 |
| 6-206 | Line Feed Clutch Spur Gear | 6-265 |
| 6-207 | Reverse Line Feed Slide Link Spring and Reverse Line Feed Slide Link Stop Bracket | 6-267 |
| 6-208 | Automatic Carriage Return-Line Feed Blocking Slide Spring | 6-267 |
| 6-209 | Condition Code Shift Fork Spring | 6-269 |
| 6-210 | Blocking Bail, Off-Line Stunt Shift Solenoid Spring, and Type Box Clutch Suppression Arm | 6-270 |
| 6-211 | Type Box Clutch Trip Lever (Selective Calling Units) | 6-272 |
| 6-212 | Print Suppressor Code Bar Spring | 6-273 |
| 6-213 | Code Bar Shift Mechanism, Condition Code (Zero) Code Bar Shift Mechanism, and Off-Line Shift Solenoid Bracket Assembly | 6-273 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 6-214 | Armature Spring, Left and Right; Ribbon Magnet Hinge Bracket, Left and Right (Preliminary); Ribbon Magnet Hinge Bracket, Left and Right (Final); Ribbon Magnet Bracket, Left and Right (Preliminary); Operational Requirement for Ribbon Magnet Bracket (Final) | 6-275 |
| 6-215 | Ribbon Guided Lever Spring, Left and Right; Ribbon Reversing Lever Spring, Left and Right; and Ribbon Roller Bail Spring, Left and Right | 6-278 |
| 6-216 | Contact Mounting Bracket, Contact Block, and Contact Drive Arm Position | 6-279 |
| 6-217 | Contact Arm Spring | 6-281 |
| 6-218 | Contact, Normally Open Contact Gap, Contact Spring, and Swinger Spring | 6-282 |
| 6-219 | Contact Bracket and Drive Cam Position | 6-284 |
| 6-220 | Latch Lever Spring and Trip Cam | 6-286 |
| 6-221 | Blocking Lever, Pointer, and Switch Contact Pressure | 6-288 |
| 6-222 | Transmitter Control Switch for Signal-Contact Type Control, Tabulation Index Plate Position, and Blocking Lever Spring | 6-290 |
| 6-223 | Form-Out Pawl Spring | 6-292 |
| 6-224 | Tabulator Bail Spring | 6-292 |
| 6-225 | Stunt Box Switch Spring | 6-294 |
| 6-226 | Page Feed-Out Gear Play, Mounting Bracket, Indexing Disc, Page Feed-Out Index Plate Position, and Vertical Tabulator Slide Retainer | 6-295 |
| 6-227 | Switch Contacts for Transfer Type Control Switch (Transmitter Control Only) | 6-298 |
| 6-228 | Transmitter Control Switch for Transfer Type Contacts (Transmitter Control Only) | 6-299 |
| 6-229 | Code Bar Shift Lever Drive Arm | 6-302 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 6-230 | Code Bar Shift Lever Link Guide Bracket | 6-303 |
| 6-231 | Bell or Motor Stop Function Contact | 6-304 |
| 6-232 | Figures-Letters Shift Code Bar Operating Mechanism | 6-306 |
| 6-233 | Function Contact Spring | 6-307 |
| 6-234 | Function Reset Bail Blade | 6-309 |
| 6-235 | Function Stripper Blade Arms | 6-310 |
| 6-236 | Single-Double Line Feed Lever | 6-312 |
| 6-237 | Line Feed Stripper Bail Spring | 6-313 |
| 6-238 | Antideflection Plate | 6-314 |
| 6-239 | Clutch Trip Shaft Set Collars | 6-316 |
| 6-240 | Clutch Trip Lever Spring | 6-316 |
| 6-241 | Spacing Clutch Trip Lever | 6-317 |
| 6-242 | Horizontal Positioning Drive Linkage With Earlier Design Drive Linkage and Tension Springs, and Horizontal Positioning Drive Linkage Spring (Tension Spring) | 6-319 |
| 6-243 | Horizontal Positioning Drive Linkage With Earlier Design Drive Linkage and Torsion Springs, and Horizontal Positioning Drive Linkage (Torsion Spring) | 6-320 |
| 6-244 | Shift Linkage Spring | 6-322 |
| 6-245 | Type Box Carriage Roller | 6-323 |
| 6-246 | Printing Hammer Stop Bracket, Printing Arm, and Type Pallet Spring | 6-324 |
| 6-247 | Ribbon Reverse Spur Gear, Ribbon Reverse Detent, and Ribbon Reverse Detent Lever Spring | 6-326 |
| 6-248 | Bail Lever Guide and Start Lever Spring | 6-328 |
| 6-249 | Armature Clamp Strip and Armature Alignment | 6-330 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 6-250 | Armature Backstop Alignment | 6-332 |
| 6-251 | Printing Carriage Position | 6-332 |
| 6-252 | Left Margin and Automatic Carriage Return-Line Feed Bail Crank Spring | 6-334 |
| 6-253 | Automatic Carriage Return and Line Feed Arm | 6-335 |
| 6-254 | Decelerating Slide Bell Crank Spring | 6-337 |
| 6-255 | Spacing Cutout Transfer Bail Spring and Right Margin | 6-338 |
| 6-256 | Margin Indicator Lamp | 6-340 |
| 6-257 | Oscillating Rail Slide Position | 6-341 |
| 6-258 | Spacing Feed Pawl Spring | 6-342 |
| 6-259 | Ratchet Wheel Tension | 6-344 |
| 6-260 | Time Delay Switch Position | 6-345 |
| 6-261 | Latch Pawl Spring | 6-346 |
| 6-262 | Feed Pawl Spring | 6-346 |
| 6-263 | Contact Pawl Spring | 6-347 |
| 6-264 | Disabling Device | 6-348 |
| 6-265 | Cam Follower Lever Spring | 6-349 |
| 6-266 | Time Delay Mechanism Position | 6-351 |
| 6-267 | Operating Lever Slide Arm, Operating Lever Extension Link Spring, and Tabulator Shaft Spring (Torsion) | 6-352 |
| 6-268 | Operating Lever Adjusting Plate | 6-354 |
| 6-269 | Trip Arm Latch Bail and Trip Arm Latch Bail Spring | 6-355 |
| 6-270 | Trip Arm Latch Bail Adjusting Plate | 6-357 |
| 6-271 | Spacing Cutout Transfer Bail Set Collar | 6-358 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 6-272 | Cam Plate Stripper Bail, Horizontal Tabulator Slide Arm Spring, and Operating Lever Cam Plate Spring | 6-359 |
| 6-273 | Right Margin and Space Suppression Bypass Spring | 6-360 |
| 6-274 | Tabular Shaft Mounting Bracket and Tabulator Pawl Springs | 6-361 |
| 6-275 | Pawl Mounting Arm Operating Range (Preliminary) | 6-363 |
| 6-276 | Pawl Mounting Arm Operating Range (Final), Columnar Tabulator Stops, and Tabulator Stop Setting-Right Margin Tabulator Stop | 6-364 |
| 6-277 | Bell Crank Follower and Bell Crank Follower Spring | 6-367 |
| 7-1 | Left and Right Side Frame (Sheet 1 of 3) | 7-81 |
| 7-2 | Left and Right Side Frame (Sheet 2 of 3) | 7-82 |
| 7-3 | Left and Right Side Frame (Sheet 3 of 3) Modification Parts for Low-Level Sets | 7-83 |
| 7-4 | Pressure Roller Mechanism | 7-84 |
| 7-5 | Space Suppression Mechanism | 7-85 |
| 7-6 | Paper Spindle and Reset Bail Mechanism | 7-86 |
| 7-7 | 151799 Modification Kit to Provide Latches for Paper Spindle | 7-87 |
| 7-8 | 157514 Modification Kit to Provide Automatic Carriage Return and Line Feed | 7-87 |
| 7-9 | Line Feed and Platen Mechanism | 7-88 |
| 7-10 | Left Side Linkage and Rocker Shaft | 7-89 |
| 7-11 | Right Side Linkage and Type Box Carriage Mechanism | 7-90 |
| 7-12 | Main Shaft (Sheet 1 of 2) | 7-91 |
| 7-13 | Main Shaft (Sheet 2 of 2) | 7-92 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 7-14 | Trip Shaft Mechanism | 7-93 |
| 7-15 | Carriage Return and Spacing Drum Mechanism | 7-94 |
| 7-16 | Front Plate Mechanism (Sheet 1 of 3) | 7-95 |
| 7-17 | Front Plate Mechanism (Sheet 2 of 3) | 7-96 |
| 7-18 | Front Plate Mechanism (Sheet 3 of 3) | 7-97 |
| 7-19 | Code Bar Positioning Mechanism | 7-98 |
| 7-20 | Selector Mechanism - Used on High-Level Sets | 7-99 |
| 7-21 | Selector Magnet Mechanism - Used on High-Level Sets | 7-100 |
| 7-22 | 319204 Selector Mechanism - Used on Low-Level Sets (Sheet 1 of 2) | 7-101 |
| 7-23 | 319204 Selector Mechanism - Used on Low-Level Sets (Sheet 2 of 2) | 7-102 |
| 7-24 | 319200 Selector and Print Connector Mounting Parts - Used on Low-Level Sets | 7-103 |
| 7-25 | Right Ribbon Feed Mechanism | 7-104 |
| 7-26 | Left Ribbon Feed Mechanism | 7-105 |
| 7-27 | 179724 Modification Kit to Provide Two-Color Ribbon Printing - Right Side | 7-106 |
| 7-28 | 179724 Modification Kit to Provide Two-Color Ribbon Printing - Left Side | 7-107 |
| 7-29 | Code Bar Mechanism | 7-108 |
| 7-30 | Printing Carriage Mechanism | 7-109 |
| 7-31 | 154971 "AY" Stunt Box Assembly | 7-110 |
| 7-32 | 197844 "AJF" and 197845 "AJG" Stunt Box Assemblies | 7-111 |
| 7-33 | Type Box and Pallets | 7-112 |
| 7-34 | Mounting Pans | 7-113 |
| 7-35 | Send-Receive Mounting Base and Components | 7-114 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 7-36 | Receive-Only Mounting Base and Components | 7-115 |
| 7-37 | Cables for Receive-Only Base - Modification Parts for Low-Level Sets | 7-116 |
| 7-38 | 151988 Modification Kit to Add Power Line Electrical Noise Suppressor | 7-116 |
| 7-39 | 195553 Time Delay Motor Stop Assembly - Used On High-Level Sets | 7-117 |
| 7-40 | Keyboard Cover and Keylever Arrangements | 7-118 |
| 7-41 | Keytops | 7-119 |
| 7-42 | Keyboard Frame and Reset Mechanism - Used on High-Level Sets | 7-120 |
| 7-43 | Keyboard Assembly - Used on Low-Level Sets | 7-121 |
| 7-44 | Trip Shaft Mechanism - Used on Low-Level Sets | 7-122 |
| 7-45 | Keyboard Code Bar Mechanism | 7-123 |
| 7-46 | Gear Shift Mechanism (Send-Receive and Receive-Only) | 7-124 |
| 7-47 | Distributor Components - Used on High-Level Sets | 7-125 |
| 7-48 | Distributor Clutch Mechanism - Used on High-level Sets | 7-126 |
| 7-49 | Distributor Clutch Trip Mechanism - Used on High-Level Sets | 7-127 |
| 7-50 | 323118 Distributor Mechanism - Used on Low-Level Sets (Sheet 1 of 2) | 7-128 |
| 7-51 | 323118 Distributor Mechanism - Used on Low-Level Sets (Sheet 2 of 2) | 7-129 |
| 7-52 | 333152 Distributor Clutch Trip Assembly - Used on Low-Level Sets | 7-130 |
| 7-53 | 333155 Distributor Clutch Assembly - Used on Low-Level Sets | 7-131 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|--|-------------|
| 7-54 | Code Bar Mechanism Parts Used on Low-Level Sets | 7-131 |
| 7-55 | Cabling - Used on Send-Receive Low-Level Sets | 7-132 |
| 7-56 | Motor Assembly and Relay/Capacitor Mounting | 7-133 |
| 7-57 | Cover and Component | 7-134 |
| 7-58 | 198569 Keyboard Hood Assembly - Receive-Only | 7-135 |
| 7-59 | 321231 Electrical Service Assembly - Used with RO Sets (Sheet 1 of 2) | 7-136 |
| 7-60 | 321231 Electrical Service Assembly - Used with RO Sets (Sheet 2 of 2) | 7-137 |
| 7-61 | 323120 Electrical Service Assembly - Used with KSR Sets (Sheet 1 of 2) | 7-138 |
| 7-62 | 323120 Electrical Service Assembly - Used with KSR Sets (Sheet 2 of 2) | 7-139 |
| 7-63 | 323121 Electrical Service Assembly - Used with KSR Sets (Sheet 1 of 2) | 7-140 |
| 7-64 | 323121 Electrical Service Assembly - Used with KSR Sets (Sheet 2 of 2) | 7-141 |
| 7-65 | 321290 Power Supply Circuit Card - Used with RO and KSR Sets | 7-142 |
| 7-66 | 323810 Selector Magnet Driver Circuit Card - Used with RO and KSR Sets | 7-143 |
| 7-67 | 333069 Clutch Magnet Driver Circuit Card - Used with KSR Sets | 7-144 |
| 7-68 | 323130 Low-Level Keyer Circuit Card - Used with KSR Sets | 7-145 |
| 8-1 | Shipping Stud Details | 8-2 |
| 8-2 | CPP (KSR) Dimensions and Shipping Stud Locations | 8-2 |
| 8-3 | CPP (RO) Dimensions and Shipping Stud Locations | 8-3 |

LIST OF ILLUSTRATIONS - Continued

| <u>Figure</u> | <u>Title</u> | <u>Page</u> |
|---------------|---|-------------|
| 8-4 | Speed Indicator Plate | 8-5 |
| 8-5 | Time Delay Mechanism | 8-5 |
| 8-6 | Typical ESA Installation | 8-6 |
| 8-7 | Circuit Card Hold-Down Installation for ESA 323120 | 8-9 |
| 8-8 | Circuit Card Hold-Down Installation for ESAs 321231 and 323121 | 8-10 |

LIST OF TABLES

| <u>Table</u> | <u>Title</u> | <u>Page</u> |
|--------------|---|-------------|
| 1-1. | Electrical Service Assemblies used in Low-Level CPP Teletypewriter Sets | 1-23 |
| 1-2. | Reference Data | 1-25 |
| 1-3. | Equipment Matrix - Model 28 Compact Page Printer (CPP) Teletypewriter Sets - High-Level | 1-27 |
| 1-4. | Equipment Matrix - Model 28 Compact Page Printer (CPP) Teletypewriter Sets - Low-Level | 1-28 |
| 1-5. | Equipment Required But Not Supplied | 1-29 |
| 2-1. | Control and Indicator Functions | 2-3 |
| 2-2. | KSF Operating Procedures | 2-5 |
| 3-1. | Time Delay Range | 3-89 |
| 4-1. | Scheduled Maintenance Action Index | 4-3 |
| 4-2. | Lubrication Interval | 4-6 |
| 4-3. | Typing Unit Lubrication Chart Index | 4-7 |
| 4-4. | Keyboard Unit Lubrication Chart Index | 4-12 |
| 4-5. | Operational Test Procedures (High-Level) | 4-29 |
| 4-6. | Operational Test Procedures (Low-Level) | 4-41 |
| 5-1. | Troubleshooting Index | 5-2 |
| 5-2. | Lamp and Fuse Index | 5-3 |
| 5-3. | Index of High-Level Schematic and Wiring Diagrams for Troubleshooting | 5-10 |
| 5-4. | Index of Low-Level Schematic and Wiring Diagrams for Troubleshooting | 5-14 |
| 5-5. | Lamp, Photocell, Fuse, and Semiconductor Index | 5-27 |
| 5-6. | Power Supply Troubleshooting Procedures (0.5 Ampere Card) | 5-32 |
| 5-7. | Selector Magnet Driver Troubleshooting Guide | 5-36 |
| 5-8. | Low-Level Keyer Troubleshooting Guide | 5-37 |

LIST OF TABLES - Continued

| <u>Table</u> | <u>Title</u> | <u>Page</u> |
|--------------|--|-------------|
| 5-9. | Clutch Magnet Driver Troubleshooting Guide | 5-38 |
| 6-1. | Selector Margin Minimum Requirements | 6-103 |
| 7-1. | Typing Unit | 7-2 |
| 7-2. | Keyboard (KSR)/Base (RO) Unit | 7-43 |
| 7-3. | Motor Unit, LMU37 and LMU51 | 7-66 |
| 7-4. | Cover Unit | 7-68 |
| 7-5. | Electrical Service Assemblies | 7-72 |
| 7-6 | List of Abbreviations | 7-146 |