f ·	THE	DECIEICA	TIAN		C1071
95%		PECIFICA	IION	No.	S1371
REV: COMPILED:	CHECK	ED: Wh.	APPD:	SHE	ET F
TITLE:		7/ /-	1	Jone	
		Λ NIT Γ NINI Λ	TUNING CVCTEM		
		ANTENNA	TUNING SYSTEM		
	TEST	PROCEDURE FOR	R ATU-1KC & REI	MOTE RCP-6	
					•
			•		
				<b>N</b>	
				•	

THE PORM SPEC I

		1	TM(	( )	SP	E(		FI	X:	TI	91	1		 		N	0.		<b>S</b> 1	37:	<u> </u>		
REV:				$\perp$																			
OMPILED:				CHE	CKE	D:					AP	PD:				3	HEE	т	1		QF	8	
TITLE:	TEST	PR00	EDUR	E F	OR .				REM		. RC	P-6	5										
			ANT	ENN	A T	UNII	VG :	SYS	ΕM														

### EQUIPMENT NEEDED

Hewlett-Packard Model (4815A) RF vector inpedance meter or equivalent. Hewlett-Packard power supply Model 6202 or equivalent 35 foot Antenna simulator Simpson 260 multi-meter

### POWER REQUIREMENTS

The ATU-1K requires +24VDC to operate the ledex motor for remote channel selection. The external +24VDC must be applied to the appropriate pins on remote jack J2 with Hewlett-Packard supply. When the ATU-1K is used with the remote unit AX5227 the 24VDC will be supplied by the remote through J2 to the ledex stepping motor. Refer to table 1-1.

### MECHANICAL INSPECTION

Make sure the correct value capacitor are installed. Refer to Table 1-2. The ATU-1K should be installed so that the distance between the antenna tuner output terminal and the Antenna does not exceed 2 feet. (35 ft. Antenna)

#### ELECTRICAL INSPECTION

Use Simpson ohm meter to check ledex circuit, make sure +24VDC is not shorted to ground. Electrical connection of the ATU-1K is made by means of the connectors located on the front and rear of the unit. When the ATU is shipped as part of a TMC system, interconnection between ATU-1K and the remote AX5227 are made through the multi-pin and RF connector jacks on the AX5227.

#### PROCEDURE

- 1. Connect the ATU-1K as shown in figure 1-2. Insure that the tuner is connected to the antenna simulator and the antenna lead is no more than 2 feet in length.
- 2. Remove outer top cover of the ATU-1K Tuner to expose the internal components.
- 3. Select the channel to be adjusted. Channel selections are made by applying +24VDC to the appropriate pin on remote jack J102 or by indexing the channel selector switch on the AX5226 control unit.
- 4. Set the appropriate channel adjust capacitor to mid-position. (C101-C108).
- 5. To determine the tap selection of loading coil L101, observe the test equipment and move the shorting clip on **th**e coil L101 until vactor inpedance meter indicates minimum reactance between  $\pm$  30 degrees and 50  $\pm$  10 ohms impedance.

THE FORM SPEC 1

	TMC SPECIFICATION										•	N . S1371														
REV:		Т	Т									$\prod$				$\mathbf{L}$	L	$\mathbf{I}_{-}$				$\mathbf{L}_{-}$				
COMPI	ED	:						CHE	CKE	D:			AP	PD:						HEE	T	_2_		F	8_	
TITLE	:														 											

TABLE 1-1

+24VDC to the following pins	on J	2:
CHANNEL 1	PIN	В
CHANNEL 2	PIN	С
CHANNEL 3	PIN	D
	PIN	<u></u> Е
CHANNEL 4	PIN	
CHANNEL 5	PIN	F.
CHANNEL 6	PIN	G
CHANNEL 7	PIN	Н
CHANNEL 8	PIN	Ι

THE FORM SPEC !

EM S-GG-AING

	TMC SPECIFICATION	N . S1371
EV:		SHEET 3 OF 8
MPILED: TLE:	CHECKED: APPD:	SHEET S ST A
	TABLE 1-2 SHUNT CAPACITOR/LOADING C	OIL VALUES
FREQ MHz	CA VALUE	TAP
2.0	100	26
3.0	100	13
4.0	100	7
5.0	300	3 3/4
6.0	400	3 3/4
7.0	200	6
8.0	100	6
9.0	0	5
10.0	0	4 1/4
11.0	0	3 1/4
12.0	0	2 1/4
13.0	0	1 1/4
14.0	. 0	1 1/2
15.0	0	2 3/4
16.0	0	2 3/4
17.0	0	2 3/4
18.0	. 0	2 3/4

24.00125.00126.001

0

0

0

0

0

She done office t

19.0

20.0

21.0

22.0

23.0

100 P-00-AING

2 3/4

1.3/4

1 3/4

1 3/4

1 3/4

	TMC SPECIFICAT	ON	<b>wo.</b> \$1371
REV:			
COMPILED:	CHECKED:	APPD:	4 00
TITLE:	TEST PROCEDURE FOR ATU-1KC & REMO	TE RCP-6	0
	ANTENNA TUNING SYSTEM (CONT		

# PROCEDURE (CONT'D)

- 6. Add shunt capacitor in parallel with the variable channel adjust capacitor wherever necessary according to specified frequencies. Refer to Table 1-2.
- 7. Observe test equipment and adjust the appropriate variable capacitor (C101-C108) as necessary to further minimize the reactance.
- 8. Repeat steps 5 through 8 as often as necessary to obtain minimum reactance on all frequency specified.
  - \*  $\pm$  30 degrees,  $\pm$  50 ohm  $\pm$  10 ohms inpedance as read on vector inpedance meter.

# ATU-1K CONTROL UNIT

SYMBOL	FUNCTION	PART NUMBER
S101	Selection of channel in tuner unit	SW296-1
\$102	Selection of LOCAL/REMOTE operation NOTE: Place in LOCAL position for stand-alone operation.	ST22N
S103	AC Power Switch	ST22K

As the pushbutton S101 is depressed, the ATU-1K stepping motor advances one position and a voltage is returned to the control unit via one of eight readback lines. The presense of this voltage causes indicator lamps on the front panel to fire corresponding to the actual channel selected. The AC power lamp is activated when S103 is placed in the AC ON position.

 



FIGURE 1-1 SELECTOR CONTROL UNIT

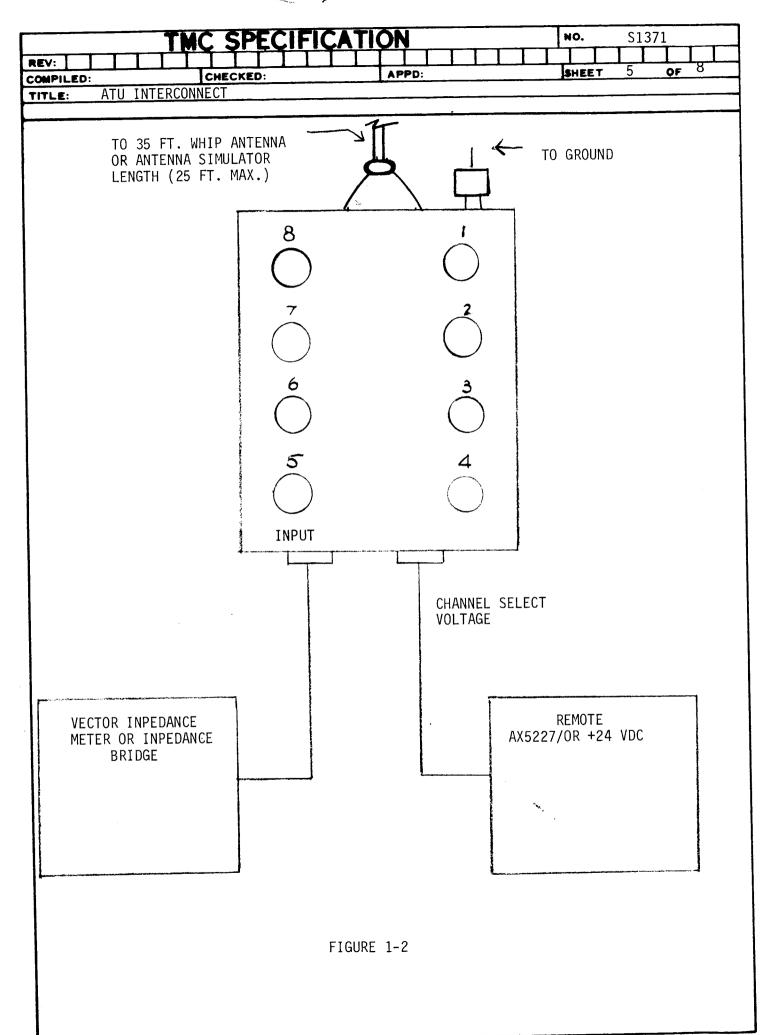

THE FORM SPEC 1

2M S-65-AINS.

: CHECKED	CIFICATI	APPD:	SHEET
CHECKED	•		
MANUFACTURING NO			
SERIAL NO.			
1-	ME CHANT CAI	OI	K
	MECHANICAL	01	
	WIRING	01	
c		0	
d	REMOTE	OHMS	DEGREE
OU 1	FREQUENCY	Orina	DEGINE
CH-1			
CH-2			
CH-3	Samuel State of the State of th		
CH-4			
CH-5			<del></del>
CH-6			
CH-7			
CH-8			

THE FORM SPEC I

200 D-60-AINS.

8

		ECIFICATI		N .
	CHECKE	D:	APPD:	SHEET
		·		,
SERIAL NO	<del> </del>			
	la	MECHANICAL	ſ	)K
		WIRING		)K
		LEDEX		
				OK
	a	REMOTE		)K
		FREQUENCY	OHMS	DEGRE
	CH-1			
	CH-2		we then the same or an arrange and the same	
	CH-3			
	CH-4			<del></del>
	CH-5			
	CH-6			
	CH-7			<del></del>
•	CH-8			
	CH-U			·
			•	
DATE				
TESTER			·	

• • •

	MC SPECIFICATION	<b>W</b>	
ED:	CHECKED:	APPD:	PHEET
			T
MANUFACTU	ATHO NO		
	RING NO.		
SERIAL NO.			
	1. MECHANICAL	Oi	,
	1a MECHANICAL		
	b WIRING	0	
	c LEDEX	0	<
	d REMOTE	0	<
	FREQUENCY	OHMS	DEGRE
	CH-1		<u> </u>
	CH-2		<del></del>
	CH-3		
	CH-4		
	CH-5		
	СН-6		
			<u></u>
	CH-7		<del></del>
·	СН-8		
		•	
DATE			
TESTER			•

•

-