

# TELETYPE

## PRINTING TELEGRAPH SYSTEMS

BULLETIN 245B

ADJUSTMENTS AND LUBRICATION

MODEL 28

MULTI-MAGNET REPERFORATOR

LARP , LARB



REG. U. S. PAT. OFF.

**CORPORATION**

SUBSIDIARY OF

*Western Electric Company*

CHICAGO, U. S. A.




## LIST OF EFFECTIVE PAGES

MAY, 1960  
 (Supersedes March, 1958 Issue)

PAGE NUMBER	CHANGE IN EFFECT
Title Page	Change 1
A	Change 2
B to C	Change 1
D	Original
1-0	Original
1-1 to 1-4	Change 2
1-5	Change 1
1-6	Change 2
1-7	Change 1
1-8 to 1-9	Change 2
1-10 to 1-17	Change 1
1-18 to 1-19	Change 2
1-20	Change 1
1-21	Change 2
1-22	Change 1
1-23 to 1-26	Change 2
1-27 to 1-28	Change 1
1-29	Change 2
1-30 to 1-32	Change 1
1-33	Change 2
1-34 to 1-35	Change 1
1-36 to 1-37	Change 2

The above list indicates the effective pages as of the date of issue. Upon receipt of change pages, insert them numerically and discard superseded pages.



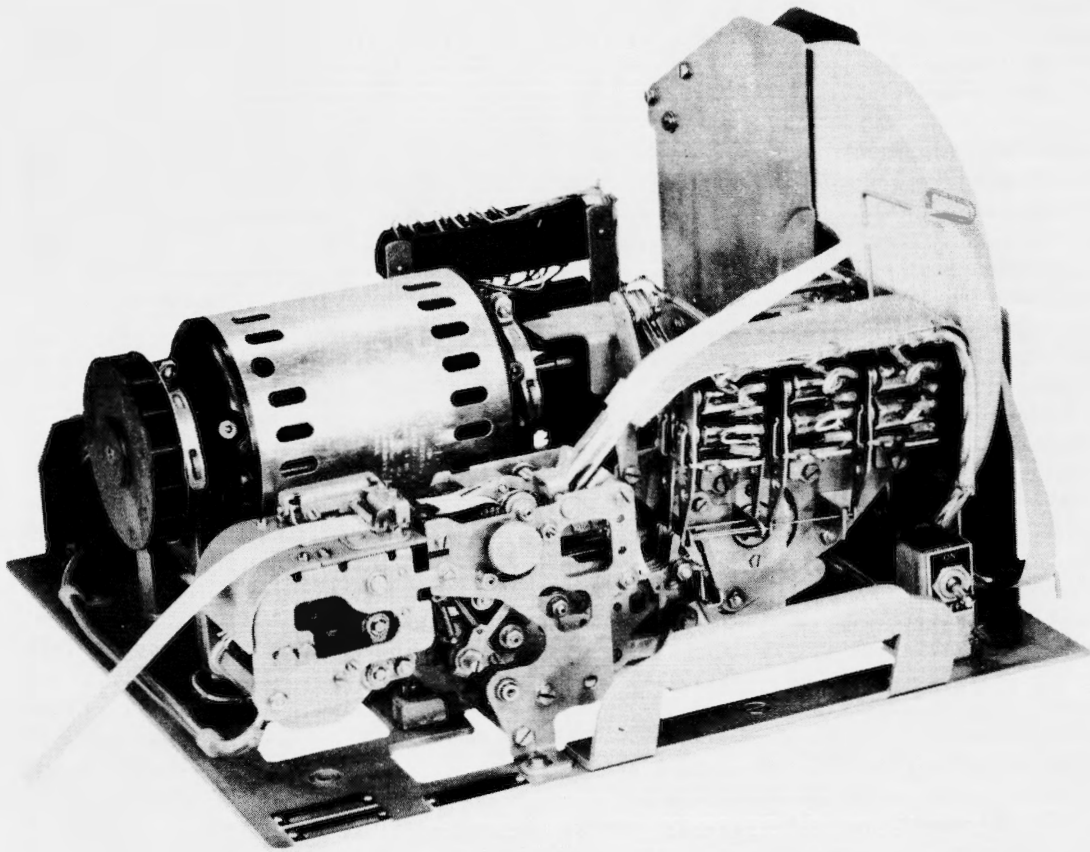

MULTI-MAGNET REPERFORATOR ON BASE

## TABLE OF CONTENTS

## SECTION 1

Paragraph	Page
1. GENERAL.....	1-0
2. ADJUSTMENTS.....	1-1
Armature Bracket.....	1-32
Armature Upstop.....	1-32
Clutch Drum.....	1-9
Clutch Shoe Lever.....	1-9
Code Magnet Armature Stop Bracket (Preliminary).....	1-1
Code Magnet Assembly.....	1-2
Code Magnet Armature Stop Bracket (Final).....	1-3
Contact Gap (Final).....	1-31
Contact Lever Guide Plate.....	1-30
Detent.....	1-21
Feed Hole Lateral Alignment.....	1-22
Feed Hole Spacing (Preliminary).....	1-20
Feed Hole Spacing (Final).....	1-20
Feed Pawl.....	1-19
Function Armature Bracket.....	1-4
Function Clutch Trip Lever.....	1-7
Function Magnet Assembly.....	1-4
Function Trip Lever.....	1-12
Magnet Release Contact Bail.....	1-15
Magnet Release Contact Gap.....	1-15
Motor Gear.....	1-37
Punch Pin Penetration.....	1-17
Punch Rocker Arm Position.....	1-16
Punch Slide Downstop Position.....	1-17
Punch Slide Guide Position.....	1-17
Punch Slide Reset Bail.....	1-19
Punch Unit Position.....	1-6
Reset Bail Trip Lever.....	1-18
Reset Lever.....	1-6
Reset Lever.....	1-13
Rocker Bail Guide.....	1-11
Rocker Bail Roller.....	1-9
Sensing Slide.....	1-29
Sensing Slide Alignment.....	1-28
Sensing Slide Stroke.....	1-29
Stop Bracket.....	1-1
Stop Bracket.....	1-6
Switch Lever.....	1-36
Switch Mechanism Mounting Plate.....	1-36
Tape Container Position.....	1-37
Tape Feed-Out Magnet Assembly.....	1-33
Tape Feed-Out Length.....	1-33
Tape Lid.....	1-27
Tape Lid Clearance.....	1-27
Tape Lid Plate.....	1-30
Tape Out Lever.....	1-35
Universal Contact Lever (Preliminary).....	1-30
Verifying Contact Lever (Preliminary).....	1-28
3. SPRING TENSIONS	

Paragraph	Page
Feed Pawl Spring.....	1-24
Function Armature Bail Spring.....	1-5
Function Trip Lever Spring.....	1-5
Magnet Release Contact Spring.....	1-14
Main Trip Lever Spring.....	1-3
Punch Pin Retractor Spring.....	1-22
Punch Slide Latch Spring.....	1-1
Punch Slide Spring.....	1-22
Ratchet Wheel Spring.....	1-33
Release Spring.....	1-13
Sensing Slide Spring.....	1-30
Switch Lever Spring.....	1-33
Switch Lever Spring.....	1-34
Tape Feed-Out Armature Bail Spring.....	1-31
Tape Feed-Out Pawl Spring.....	1-33
Tape Guide Spring (Tape Chute).....	1-23
Tape Guide Spring (Punch Block).....	1-23
Tape Lever Spring.....	1-34
Tape Shoe Torsion Spring.....	1-25

SECTION 2

DISASSEMBLY AND REASSEMBLY.....	2-0
---------------------------------	-----

SECTION 3

LUBRICATION.....	3-1
------------------	-----

## SECTION 1 ADJUSTMENTS

### 1. GENERAL

a. The adjustments of the multi-magnet reperforator are arranged in a sequence that should be followed if a complete readjustment of the unit were undertaken.

b. After an adjustment has been completed, be sure to tighten any nuts or screws that may have been loosened.

c. Tools and spring scales required to perform the adjustments are listed in Teletype Bulletin 1124B but are not supplied as part of the equipment.

d. The adjusting illustrations, in addition to indicating the adjusting tolerances, positions of moving parts, and spring tensions, also show the angle at which the scale should be applied when measuring spring tensions.

e. From time to time the requirements and procedures for the various adjustments may change. For this reason, the text of the adjustment in the latest issue should be read through before proceeding to make any readjustment.

f. If a part that is mounted on shims is removed, the number of shims used at each of its mounting screws should be noted so that the same shim pile-ups can be replaced when the part is remounted.

g. If parts or assemblies are removed to facilitate readjustments and subsequently replaced, recheck any adjustment that may have been affected by the removal of these parts or assemblies.

h. The spring tensions given in this bulletin are indications not exact values and should be checked

with proper spring scales in the position indicated. Springs which do not meet the requirement and for which no adjusting procedure is given should be replaced by new springs.

#### NOTE

When rotating the main shaft of the reperforator by hand, the clutch does not fully DISENGAGE upon reaching its stop positions. In order to relieve the drag on the clutch and permit the main shaft to rotate freely, apply pressure on a lug of the clutch disk with a screw driver to cause it to engage its latch lever and thus DISENGAGE the internal expansion clutch to prevent the clutch shoes from dragging on the clutch drum.

i. References made to "Left" or "Right", "Up" or "Down", "Front" or "Rear", etc. apply to the unit in its normal operating position as viewed from the operator's position in front of the unit opposite the motor and terminal blocks.

j. When the requirement calls for the clutch to be DISENGAGED the clutch shoe lever must be fully latched between its trip lever and latch lever so that the clutch shoes release their tension on the clutch drum. When ENGAGED the clutch shoe lever is unlatched and the clutch shoes are wedged firmly against the clutch drum.

k. All contact points should meet squarely. Smaller contact points should fall wholly within the circumference of its mating larger contact. Contacts having the same diameter should not be out of alignment more than 25 per cent of the contact diameter. Avoid sharp kinks or bends in the contact springs.



(B)

CODE MAGNET ARMATURE STOP BRACKET (PRELIMINARY)

REQUIREMENT  
 WITH CODE MAGNET DE-ENERGIZED AND CLUTCH DISENGAGED. ARMATURE HELD AGAINST ITS STOP BRACKET CLEARANCE BETWEEN ARMATURE AND UPPER MAGNET CORE  
 MIN. 0.015 INCH  
 MAX. 0.030 INCH

TO ADJUST  
 POSITION THE ARMATURE STOP BRACKET BY MEANS OF ITS ADJUSTING SLOT WITH ITS MOUNTING SCREWS LOOSENED.


(B)

PUNCH SLIDE LATCH SPRING

REQUIREMENT  
 CLUTCH DISENGAGED AND LATCHED  
 MIN. 2 OZS.  
 MAX. 3-1/2 OZS.

TO START CODE ARMATURE MOVING

NOTE  
 THE ARMATURE SPRING SHOULD HOLD THE ARMATURE AGAINST THE MAGNET YOKE. IF NECESSARY, REMOVE STOP BRACKET AND BEND SPRING.

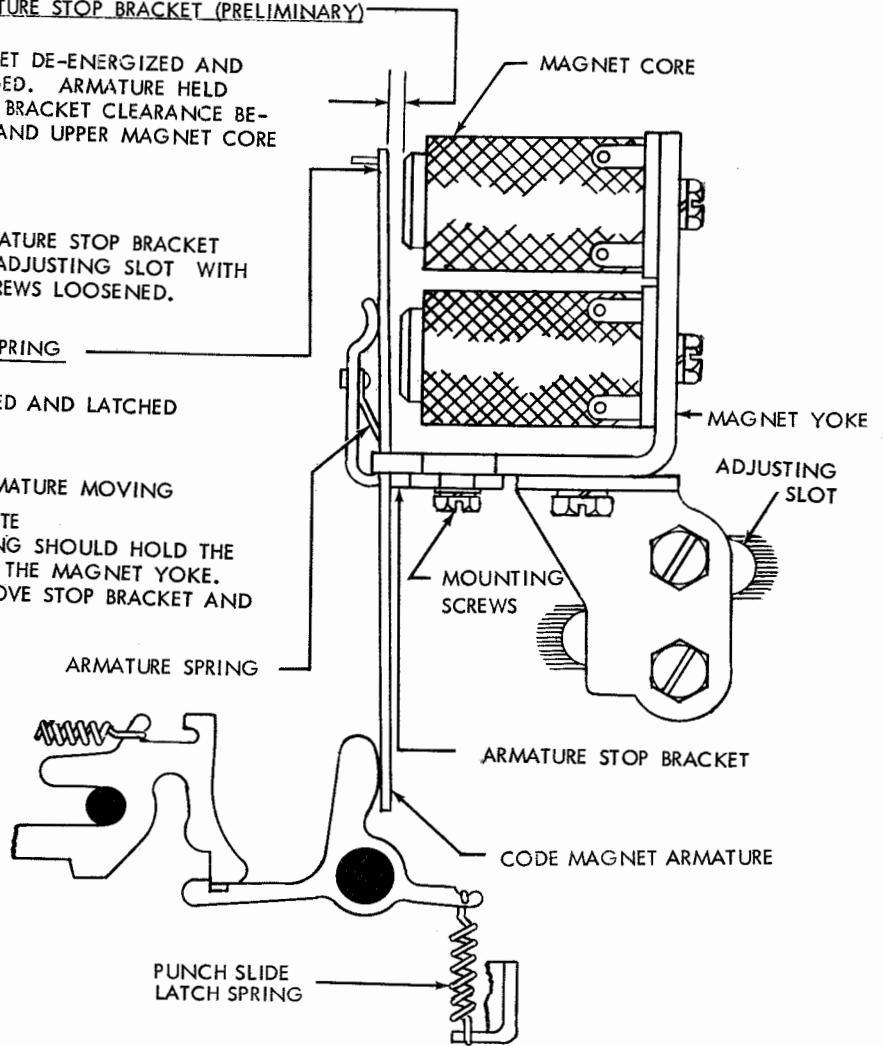

(C)

PUNCH UNIT POSITION

REQUIREMENT  
 BEFORE MAKING SUBSEQUENT ADJUSTMENTS, POSITION THE PUNCH UNIT AS FOLLOWS:  
 UPPER AND LOWER RIGHT MOUNTING SCREWS CENTRALLY LOCATED IN THEIR ELONGATED HOLES.

TO ADJUST  
 LOOSEN THE THREE MOUNTING SCREWS IN THE BACK PLATE OF THE UNIT AND THE BRACKET SCREW IN THE FRONT PLATE AND POSITION THE UNIT.


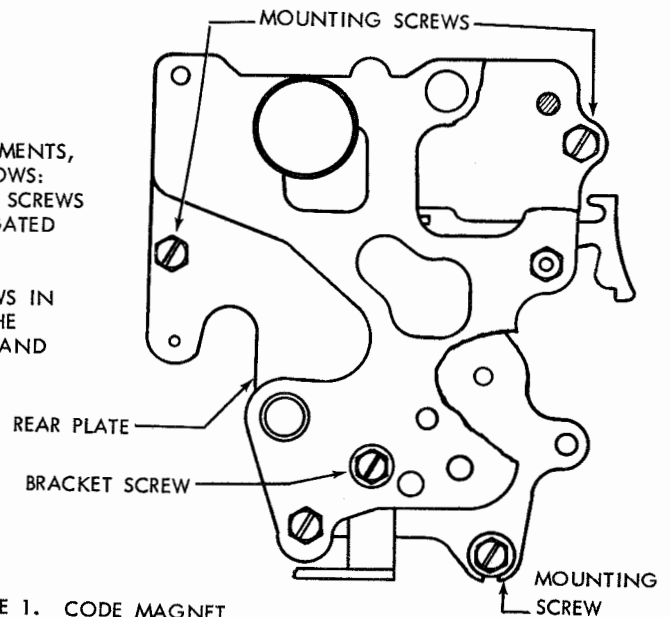


FIGURE 1. CODE MAGNET

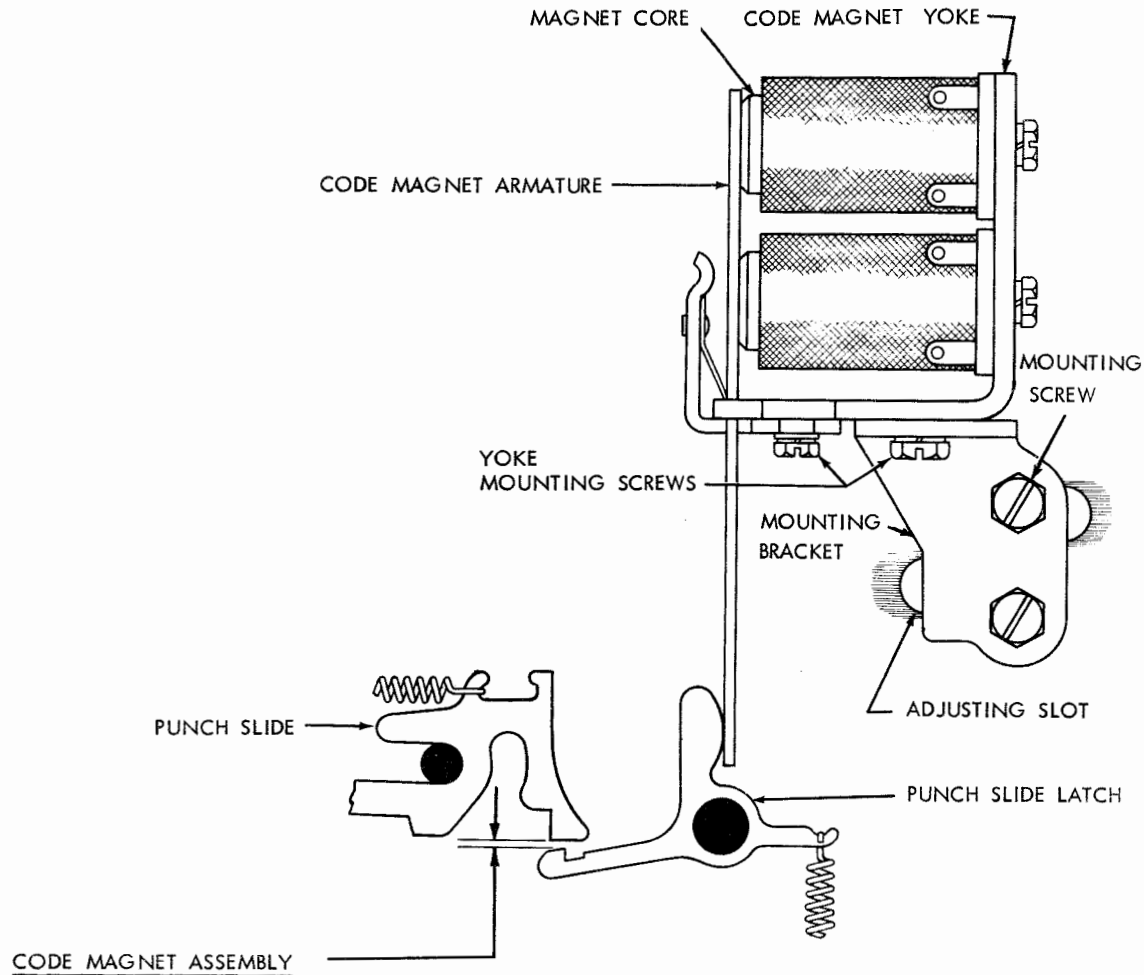

## (1) REQUIREMENT

FUNCTION ARMATURE TRIPPED AFTER THE FUNCTION CLUTCH HAS BEEN SET IN DISENGAGED POSITION, PUNCH SLIDE LATCHES TRIPPED, AND WITH THE CODE MAGNET ARMATURE HELD AGAINST THE UPPER MAGNET CORE, CLEARANCE BETWEEN THE PUNCH SLIDE AND ITS RESPECTIVE PUNCH SLIDE LATCH  
 MIN. 0.002 INCH  
 MAX. 0.015 INCH

## TO ADJUST

POSITION THE MOUNTING BRACKET BY MEANS OF THE ADJUSTING SLOT WITH ITS MOUNTING SCREWS LOOSENED.

## (2) REQUIREMENT

BOTH ARMATURES OF THE CODE MAGNET ASSEMBLY SHOULD ALIGN WITH RESPECTIVE PAWLS OR ARMATURE ROD AND MEET REQUIREMENT (1) EQUALLY WITHIN 0.002 INCH

## TO ADJUST

POSITION THE MAGNET YOKE WITH ITS MOUNTING SCREWS LOOSENED

FIGURE 2. CODE MAGNET

## CODE MAGNET ARMATURE STOP BRACKET (FINAL)

## REQUIREMENT

CODE MAGNETS DE-ENERGIZED AND THE CLUTCH  
DISENGAGED AND LATCHED, EACH CODE MAGNET  
ARMATURE HELD AGAINST ITS STOP BRACKET IT  
SHOULD CLEAR ITS RESPECTIVE PUNCH SLIDE LATCH  
OR ARMATURE ROD

MIN. 0.002 INCH

MAX. 0.008 INCH

## TO ADJUST

POSITION ARMATURE STOP BRACKET WITH ITS  
MOUNTING SCREWS LOOSENED.

## NOTE

AFTER MAKING THIS ADJUSTMENT, RECHECK THE  
CODE MAGNET ASSEMBLY ADJUSTMENT AND THE  
CODE MAGNET ARMATURE STOP BRACKET ADJUST-  
MENT AND REFINE IF NECESSARY.

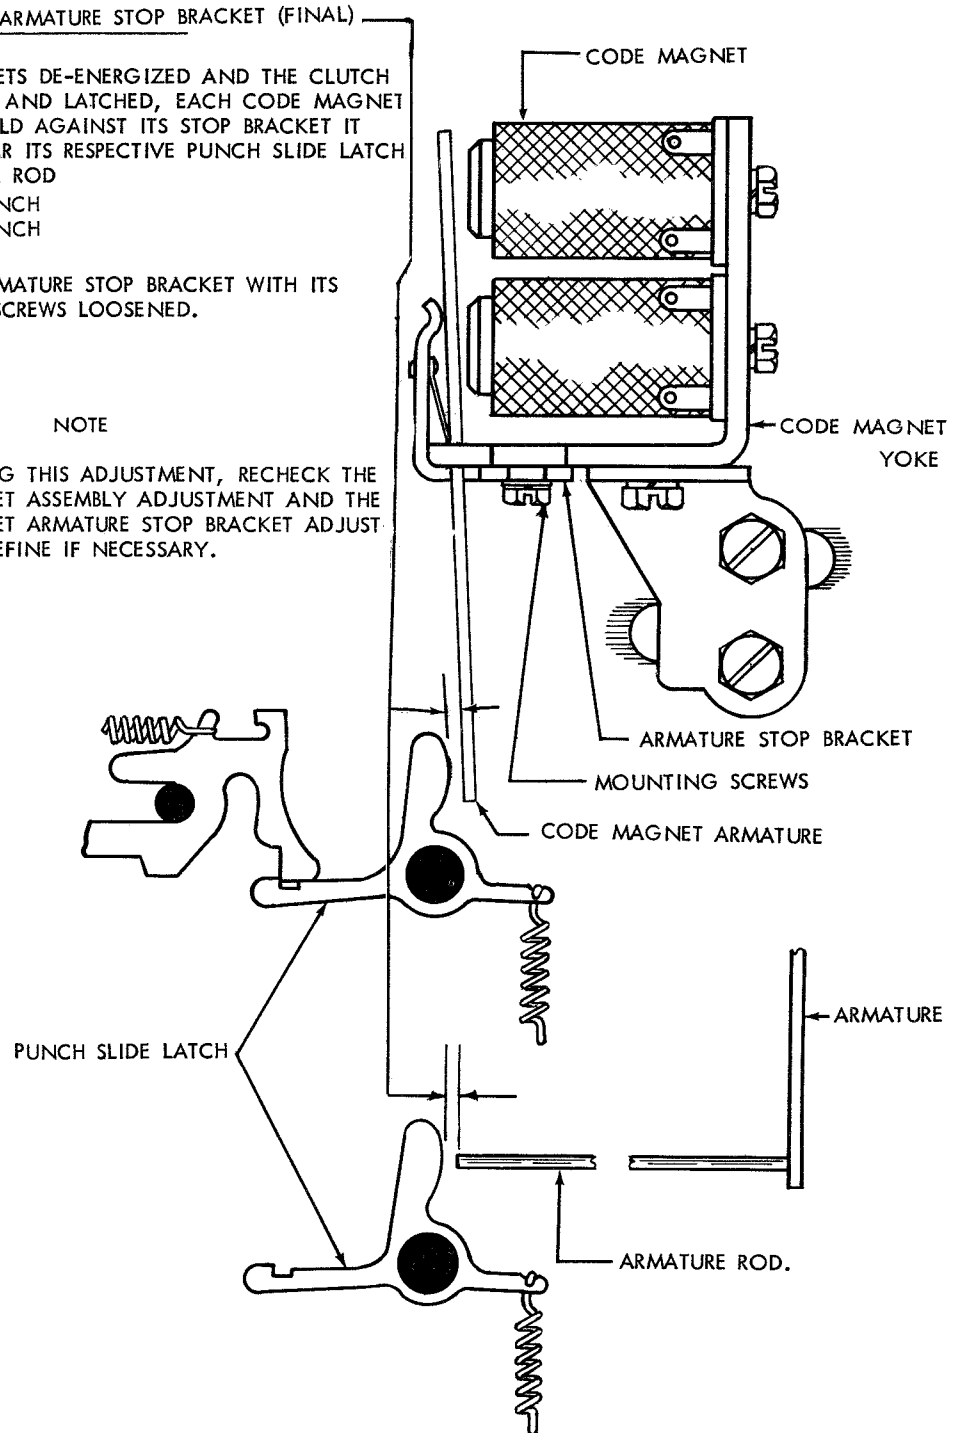


FIGURE 3. CODE MAGNET

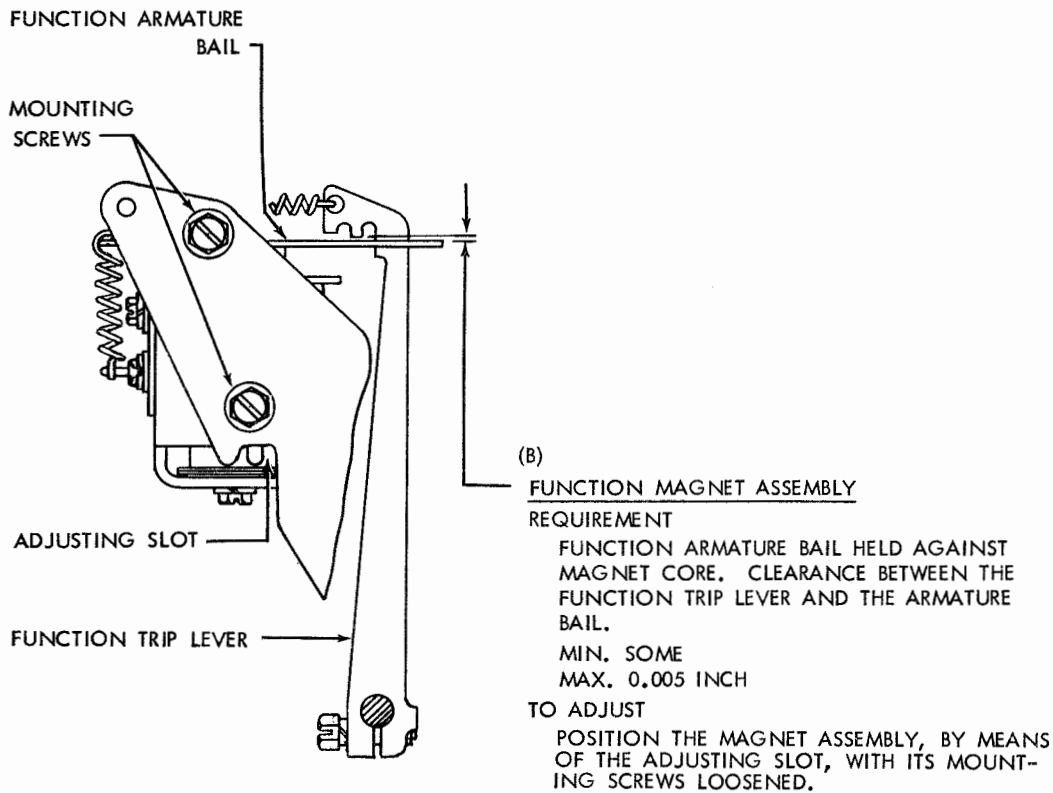
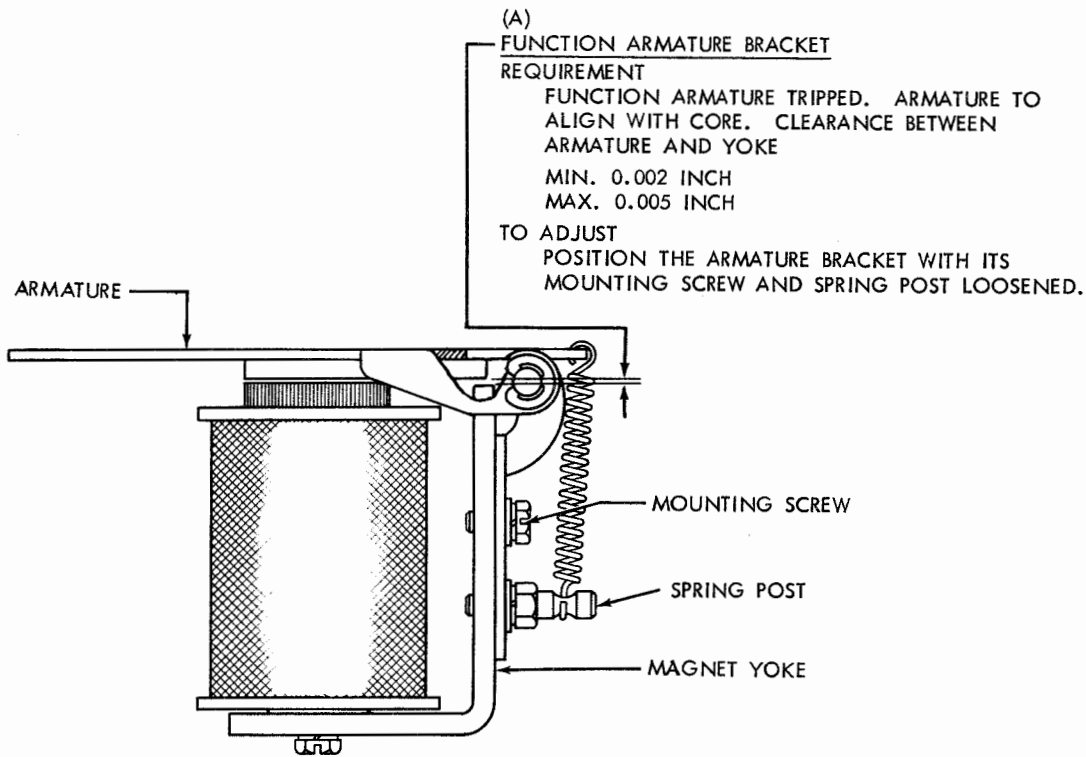


FIGURE 4. FUNCTION TRIP MAGNET



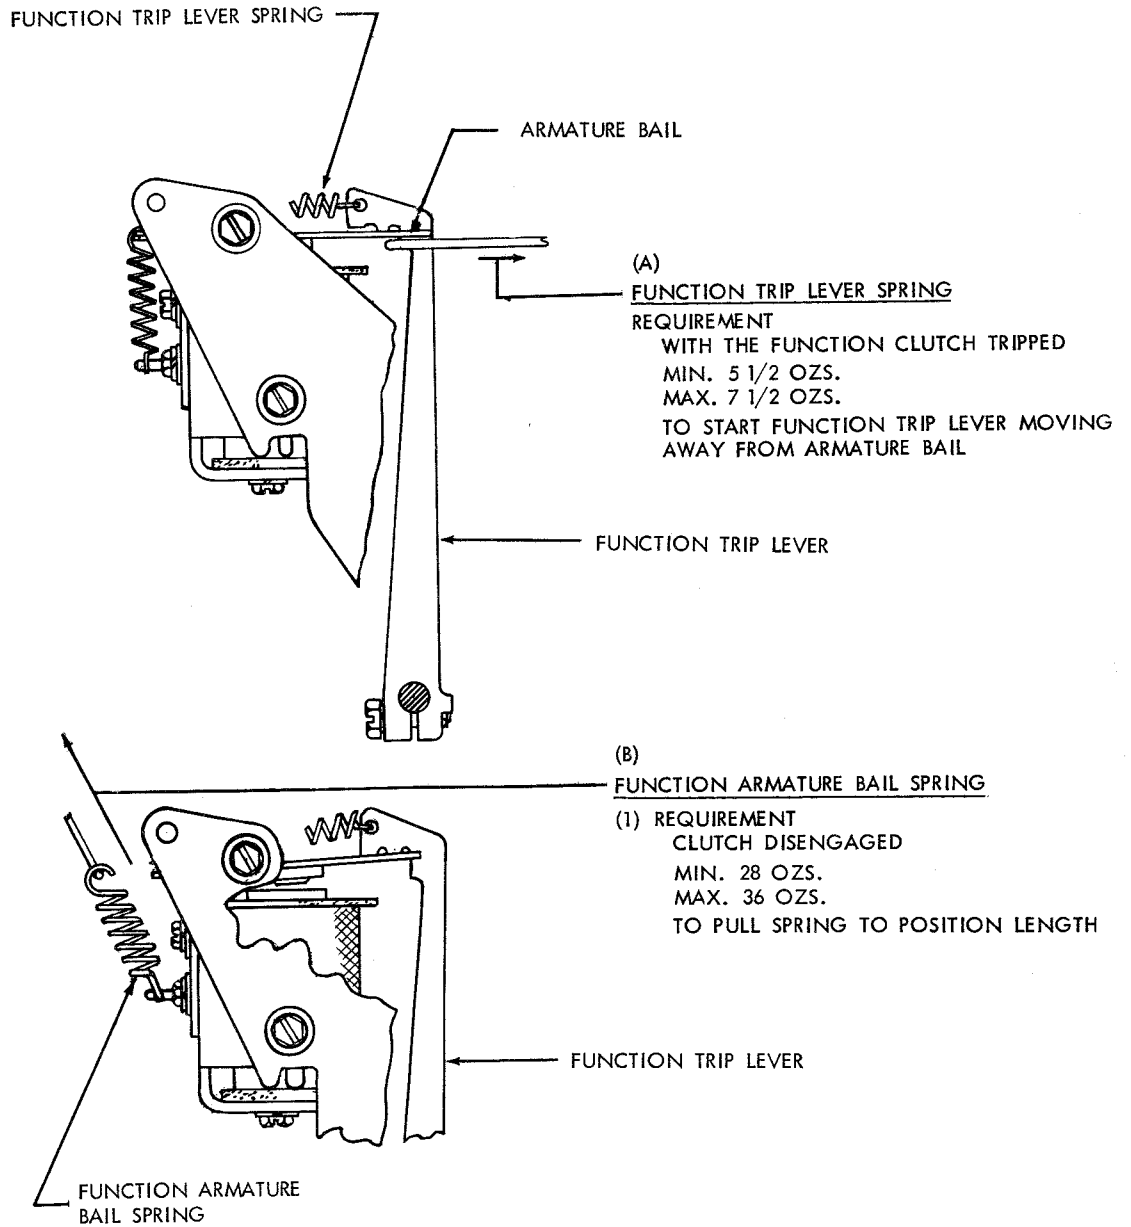


FIGURE 5. FUNCTION TRIP MAGNET

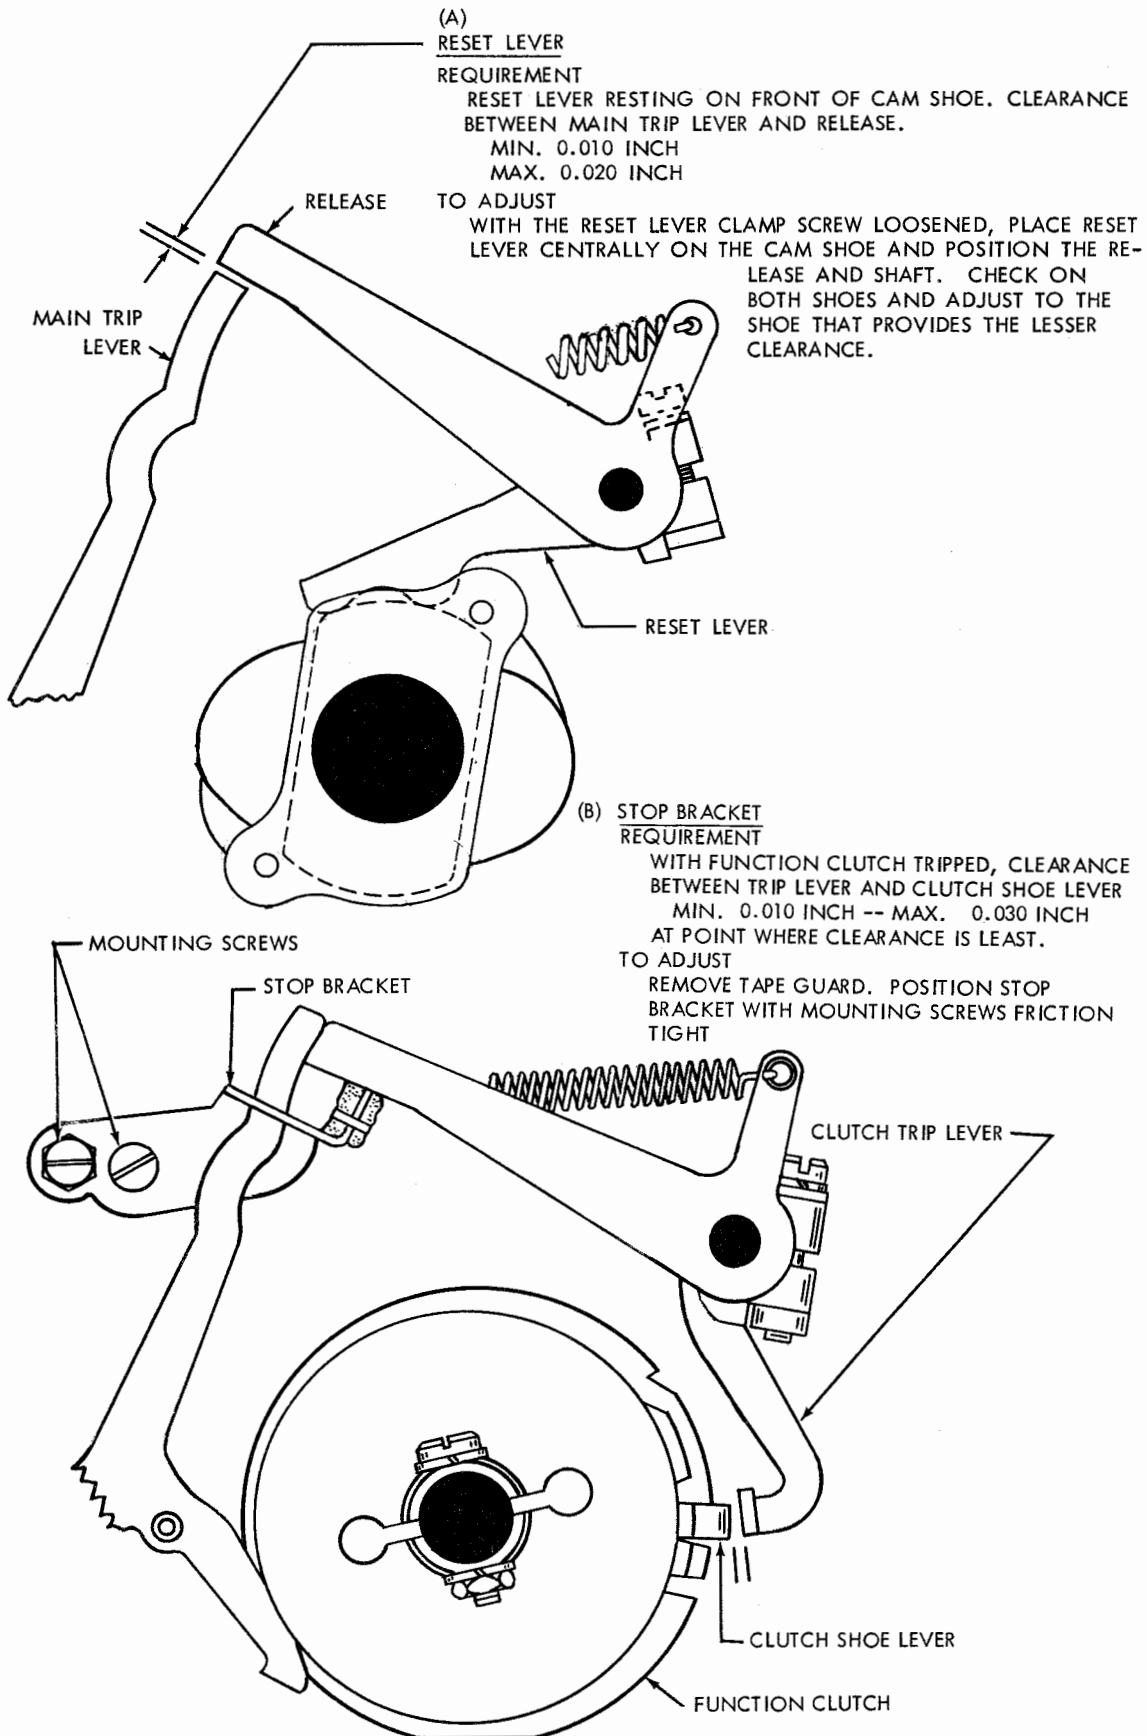

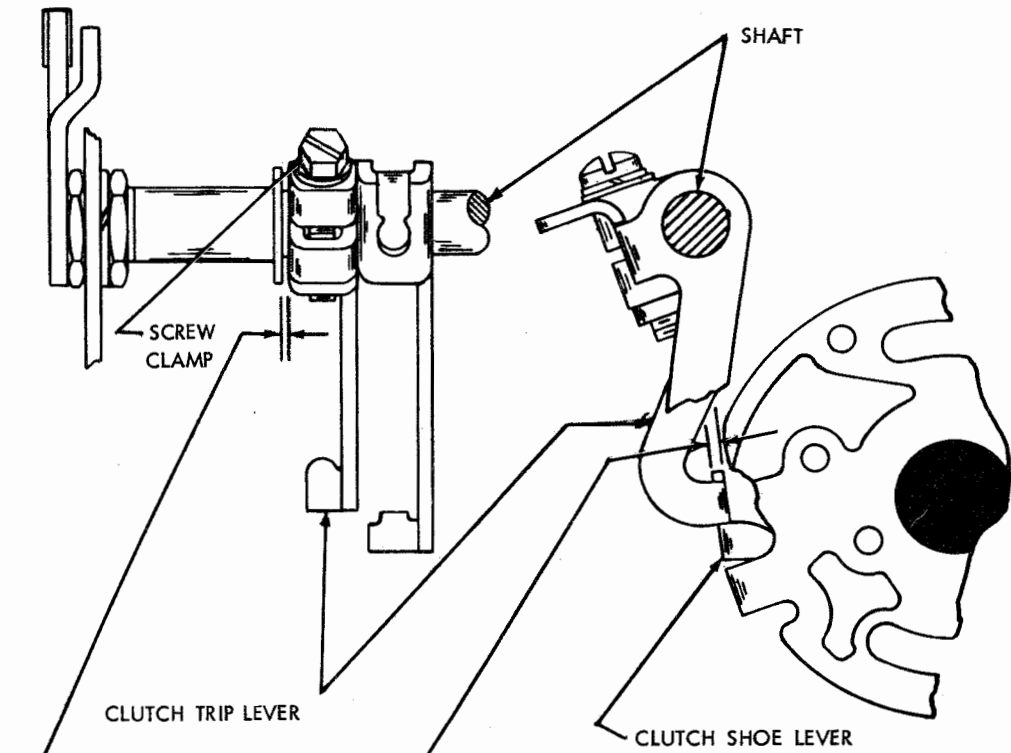

FUNCTION CLUTCH TRIP LEVER

(1) REQUIREMENT

THE FUNCTION CLUTCH TRIP LEVER SHOULD ENGAGE THE CLUTCH SHOE LEVER BY THE FULL THICKNESS OF THE SHOE LEVER.

(2) REQUIREMENT

THE END PLAY IN THE SHAFT SHOULD BE  
MIN. SOME  
MAX. 0.006 INCH

TO ADJUST

WITH THE RELEASE RESTING ON THE MAIN TRIP LEVER, POSITION THE TRIP LEVER ON ITS SHAFT WITH ITS CLAMP SCREW LOOSENED.

NOTE

CHECK AT STOP NEXT TO NOTCH IN ADJUSTING DISK

FIGURE 7. CLUTCH TRIP MECHANISM

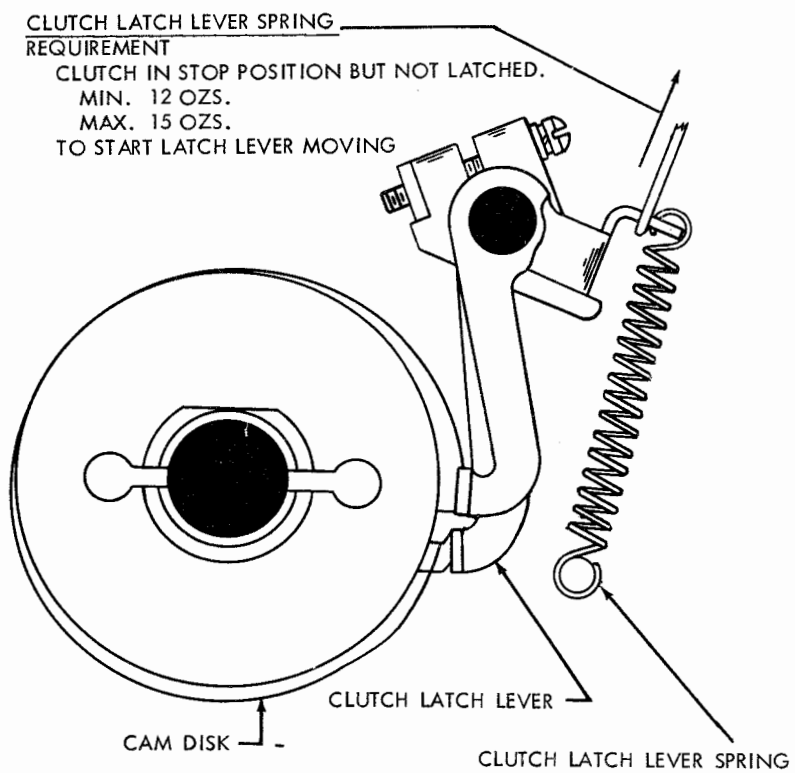


FIGURE 8. CLUTCH TRIP MECHANISM




(A)

CLUTCH DRUM

REQUIREMENT  
THE CLUTCH SHOULD  
HAVE SOME END PLAY  
MAX. 0.015 INCH

TO CHECK  
DISENGAGE THE CLUTCH AND  
TAKE UP PLAY FOR MAX.  
TO ADJUST  
POSITION THE DRUM TO  
EXTREME FRONT WITH ITS  
MOUNTING SCREWS LOOSENED.  
THEN POSITION THE COLLAR.

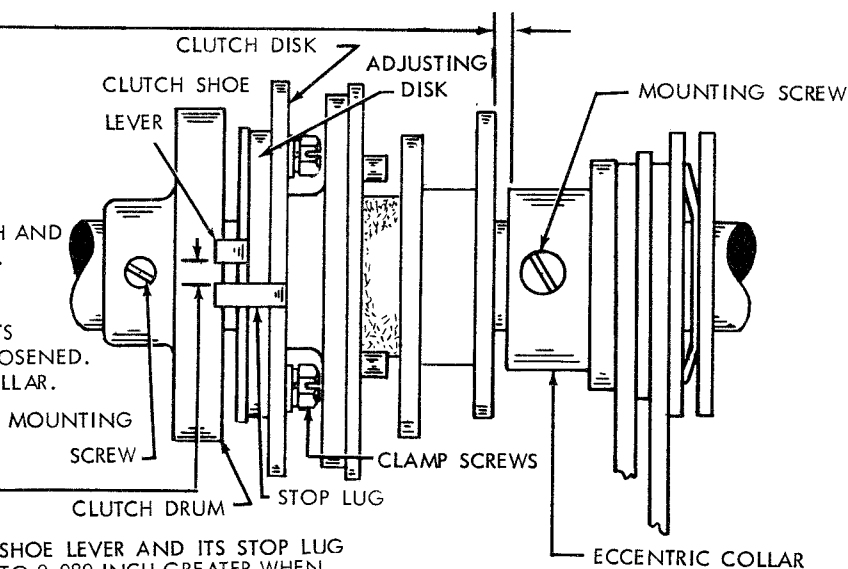

(B)

CLUTCH SHOE LEVER

REQUIREMENT  
GAP BETWEEN CLUTCH SHOE LEVER AND ITS STOP LUG  
SHOULD BE 0.055 INCH TO 0.080 INCH GREATER WHEN  
CLUTCH IS ENGAGED THAN WHEN THE CLUTCH IS DIS-  
ENGAGED.

TO CHECK  
DISENGAGE THE CLUTCH AND MEASURE THE GAP.  
TRIP THE CLUTCH AND ROTATE IT ONE RE-  
VOLUTION. AGAIN MEASURE THE GAP  
WITH THE CLUTCH THUS ENGAGED.

NOTE


CHECK AT STOP LUG NEXT TO NOTCH  
IN ADJUSTING DISK

TO ADJUST

LOOSEN THE TWO CLAMP SCREWS ON  
THE CLUTCH DISK. ENGAGE A WRENCH  
OR SCREWDRIVER ON THE LUG ON THE  
ADJUSTING DISK AND ROTATE THE DISK.

NOTE

AFTER THE ABOVE ADJUSTMENT IS MADE,  
DISENGAGE THE CLUTCH, REMOVE THE  
DRUM MOUNTING SCREW AND ROTATE  
THE DRUM IN ITS NORMAL DIRECTION  
OF ROTATION TO MAKE CERTAIN THAT  
IT DOES NOT DRAG ON THE SHOE.

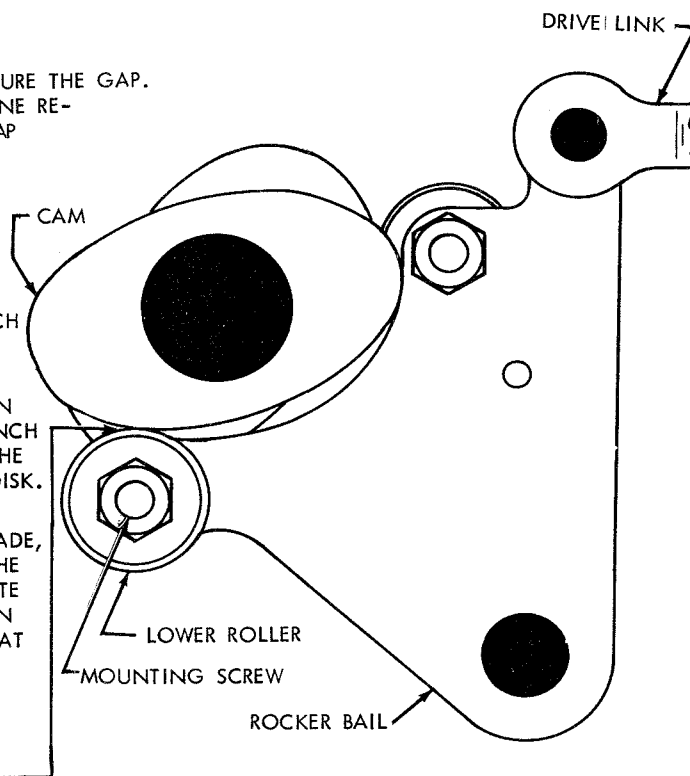

(C)

ROCKER BAIL ROLLER

REQUIREMENT  
CLEARANCE BETWEEN THE ROLLER AND  
THE CAM AT THE POINT WHERE THE  
CLEARANCE IS THE LEAST  
MIN. SOME  
MAX. 0.005 INCH

TO ADJUST  
POSITION THE LOWER ROLLER WITH ITS  
MOUNTING SCREW LOOSENED.

FIGURE 9. MAIN SHAFT AND ROCKER BAIL

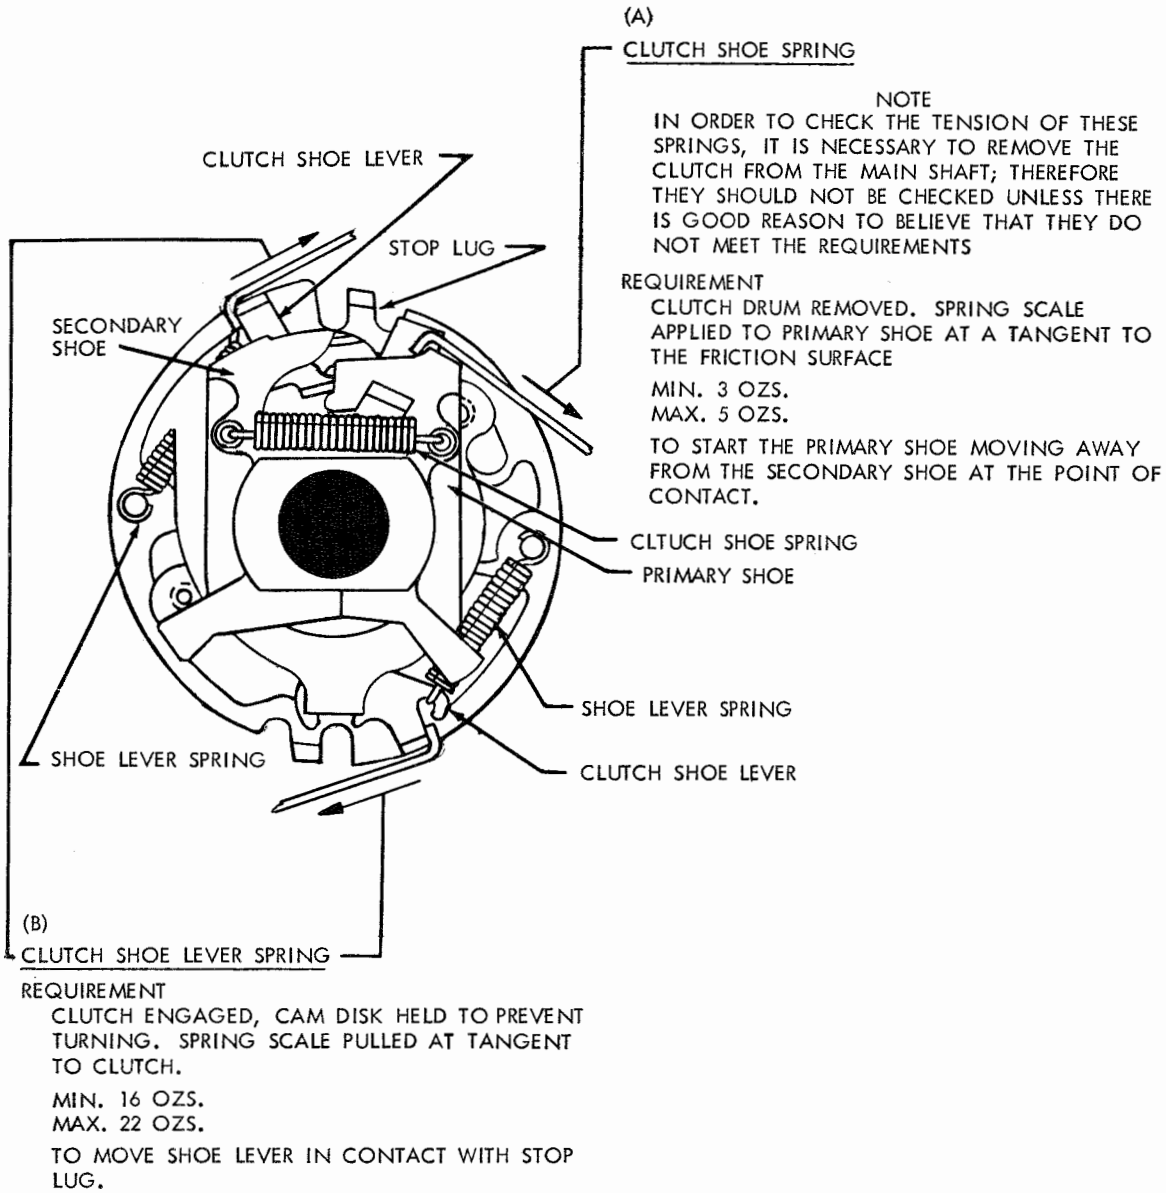


FIGURE 10. CLUTCH MECHANISM

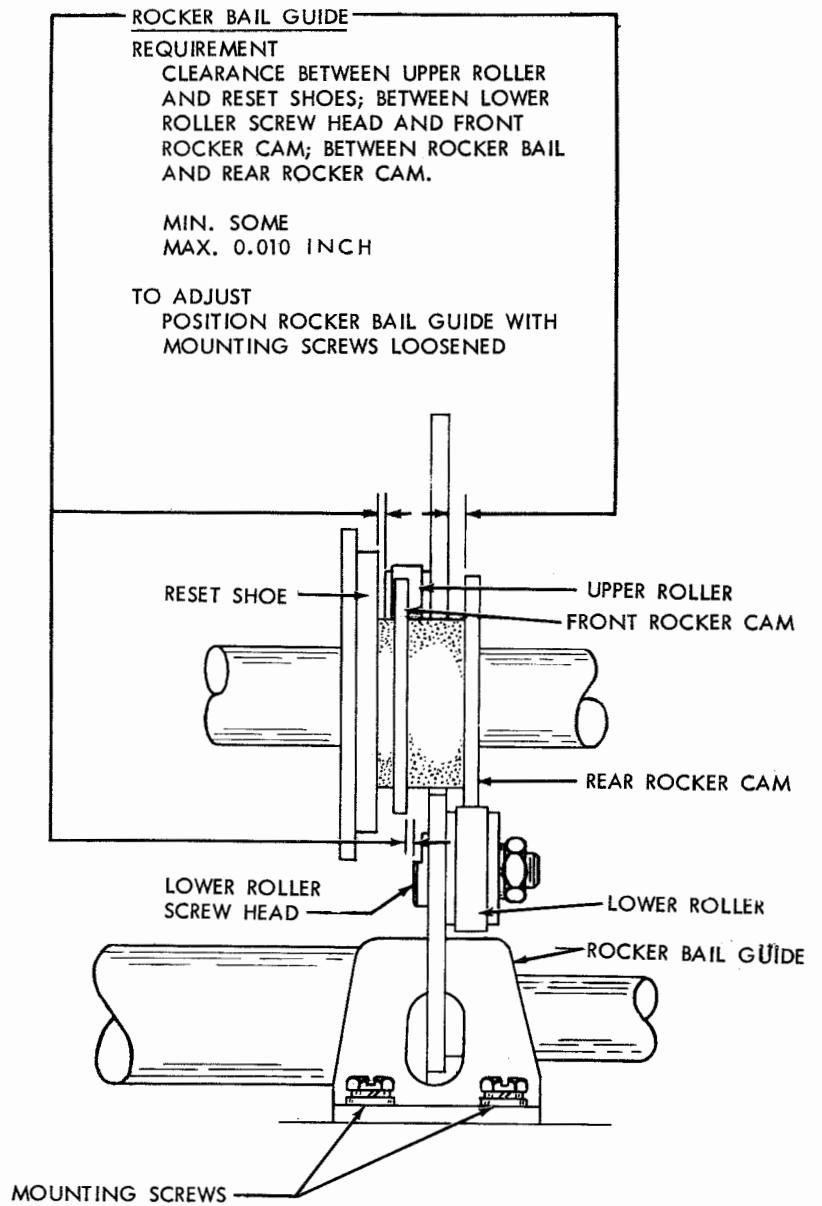


FIGURE 11. ROCKER BAIL GUIDE

**FUNCTION TRIP LEVER****REQUIREMENT**

FUNCTION ARMATURE TRIPPED AFTER THE FUNCTION CLUTCH HAS BEEN SET IN DISENGAGED POSITION. THE MAIN TRIP LEVER SHOULD CLEAR THE RELEASE

MIN. 0.010 INCH  
MAX. 0.020 INCH

**TO ADJUST**

HOLD THE FUNCTION TRIP LEVER AGAINST ARMATURE BAIL. POSITION LOWER TRIP LEVER AND ITS SHAFT WITH THE FUNCTION TRIP LEVER CLAMP SCREW LOOSENED.

**NOTE**

THE RESET LEVER MUST CLEAR FUNCTION CAM PINS WHILE THIS ADJUSTMENT IS BEING MADE

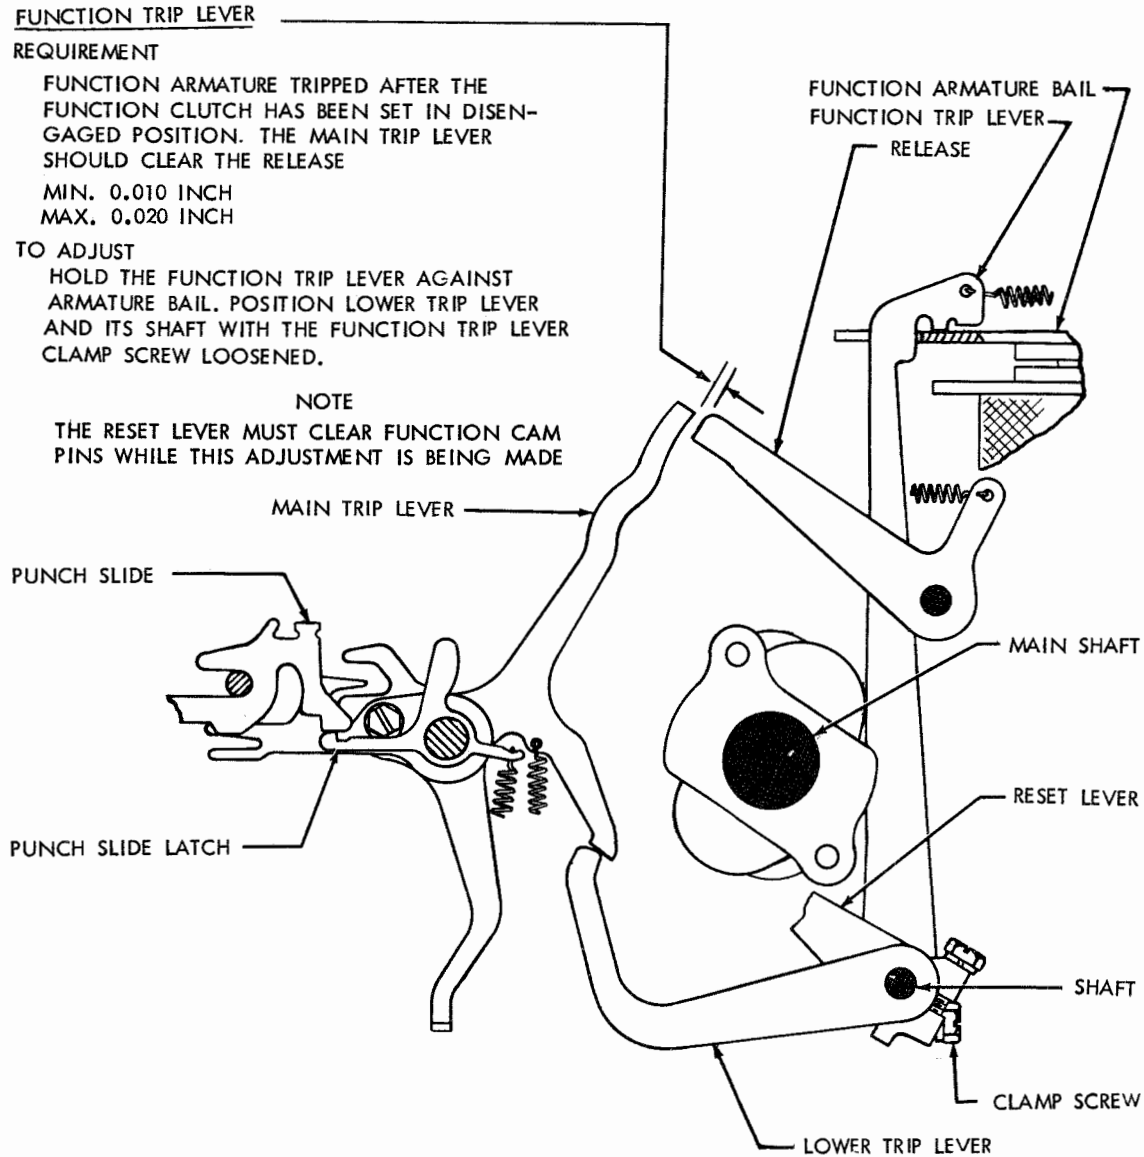


FIGURE 12. FUNCTION TRIP MECHANISM

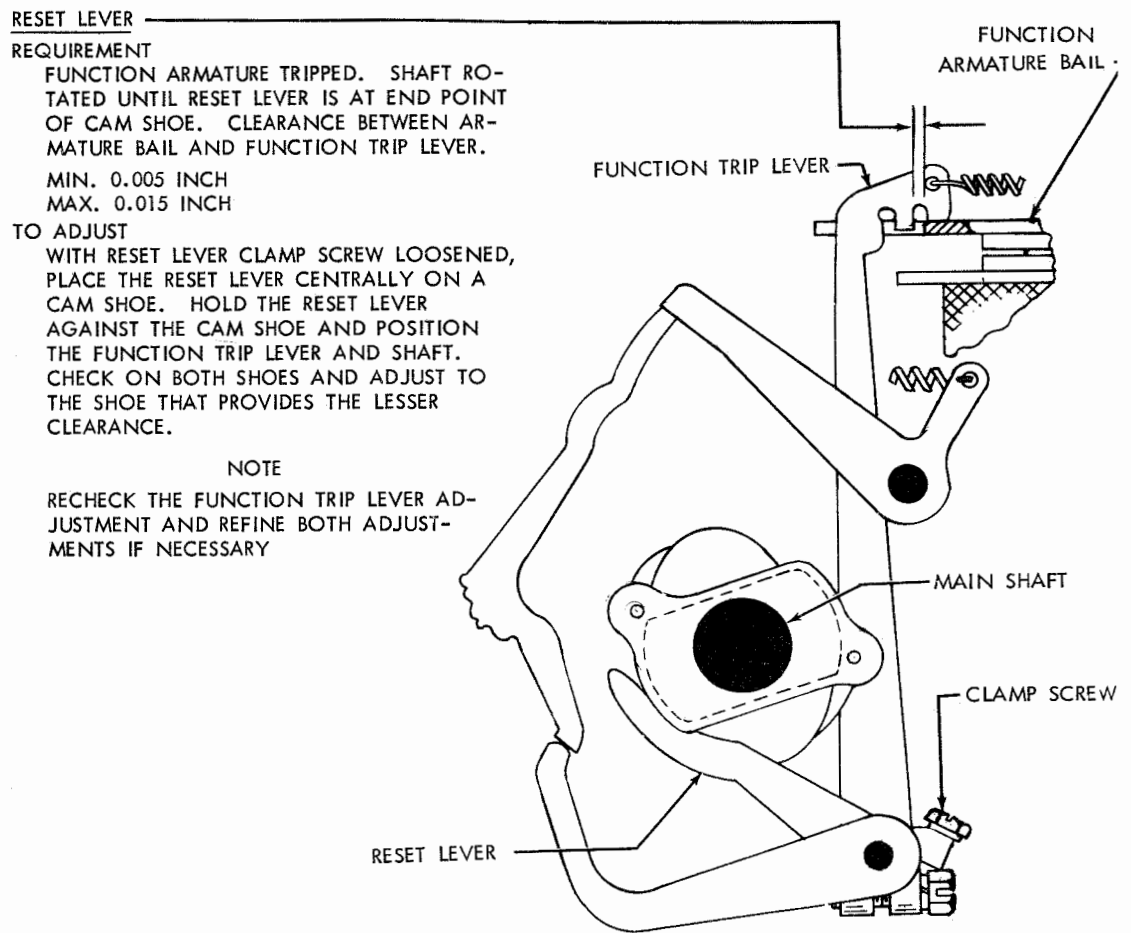


FIGURE 13. FUNCTION TRIP MECHANISM

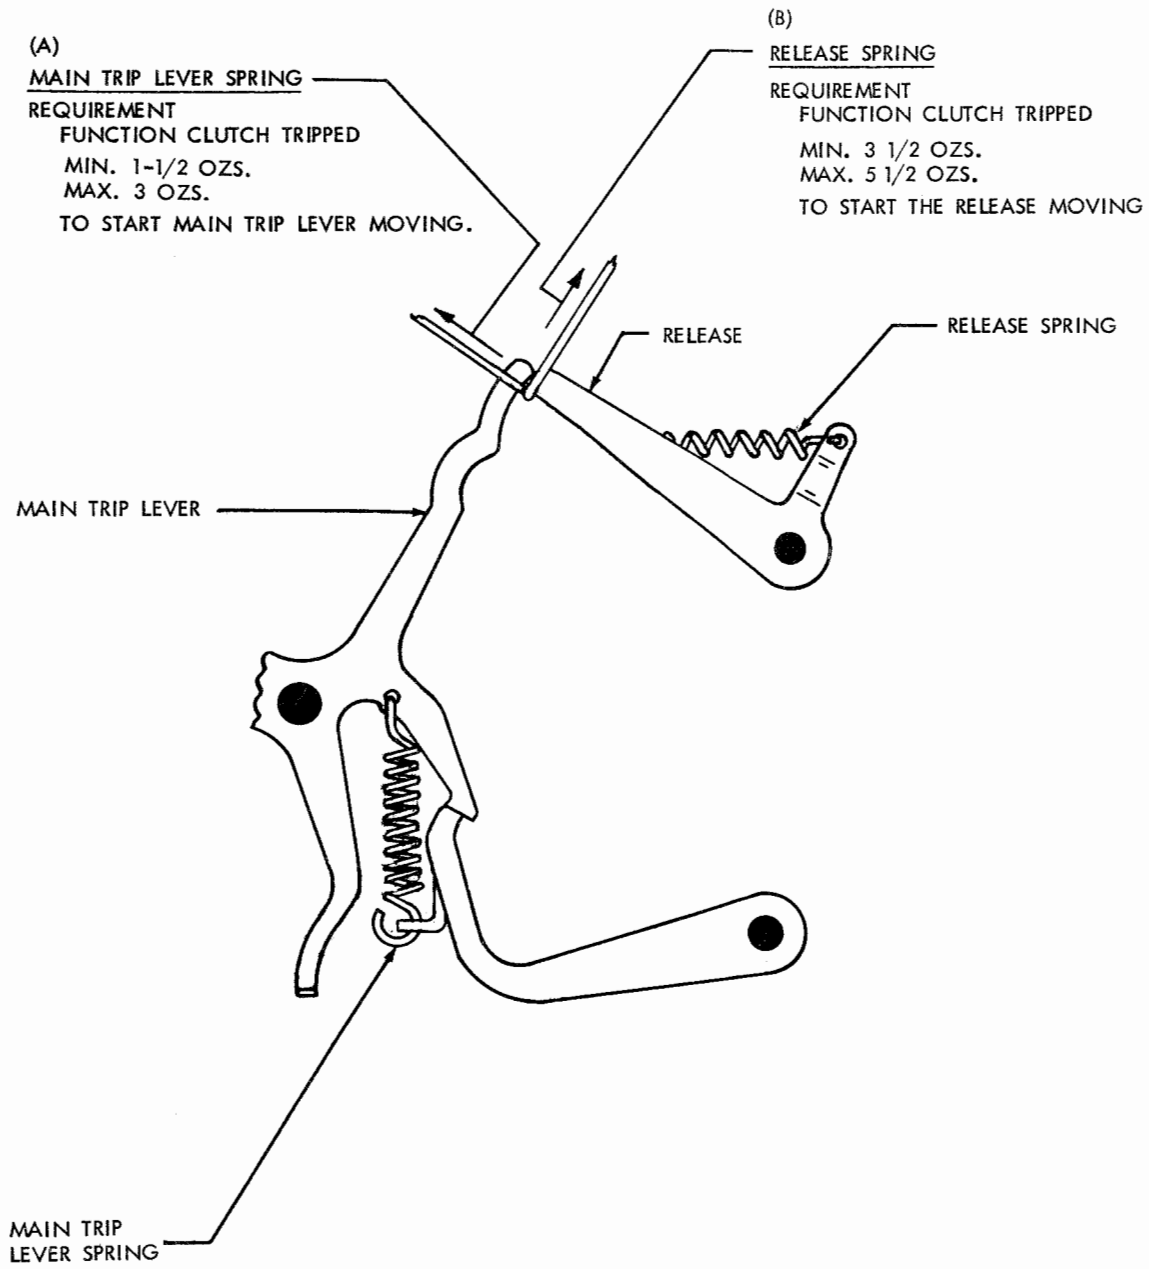


FIGURE 14. RESET MECHANISM

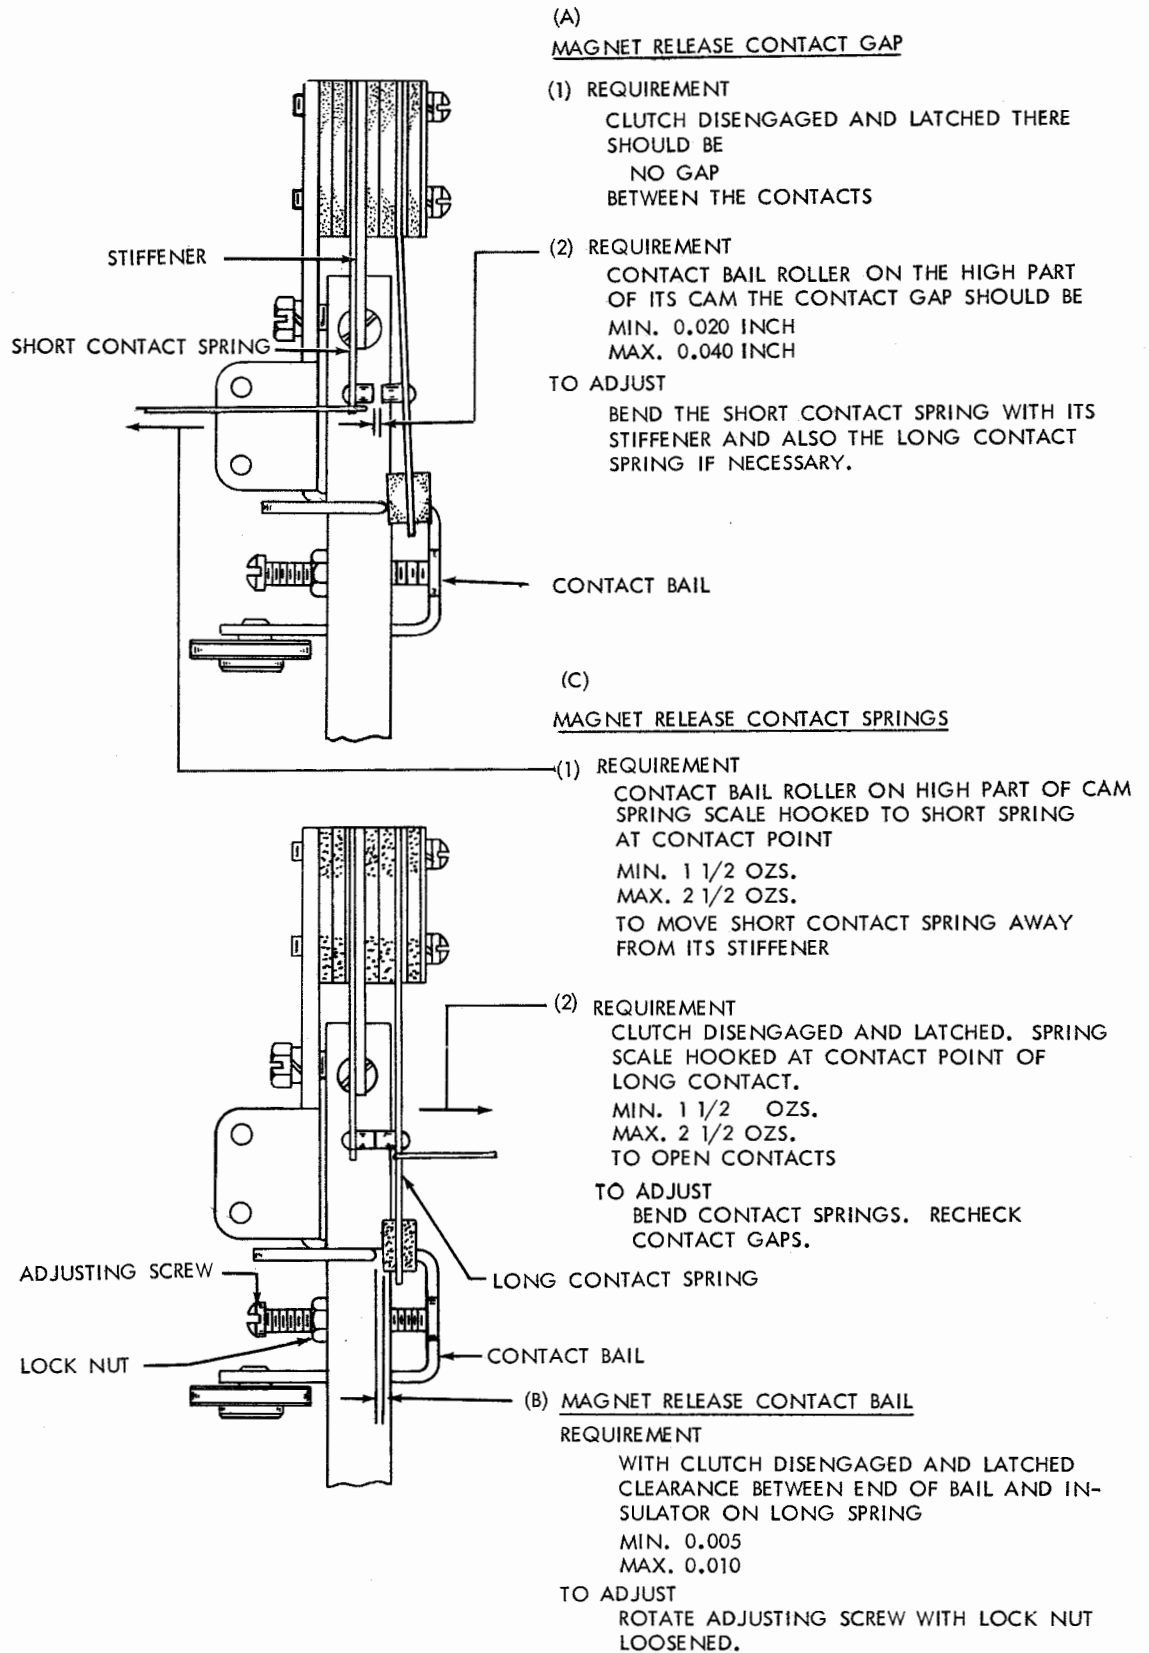


FIGURE 15. MAGNET RELEASE CONTACT

## PUNCH MECHANISM

NOTE  
BEFORE PROCEEDING WITH THE PUNCH UNIT ADJUSTMENTS, CHECK THE ROCKER BAIL ROLLER ADJUSTMENT

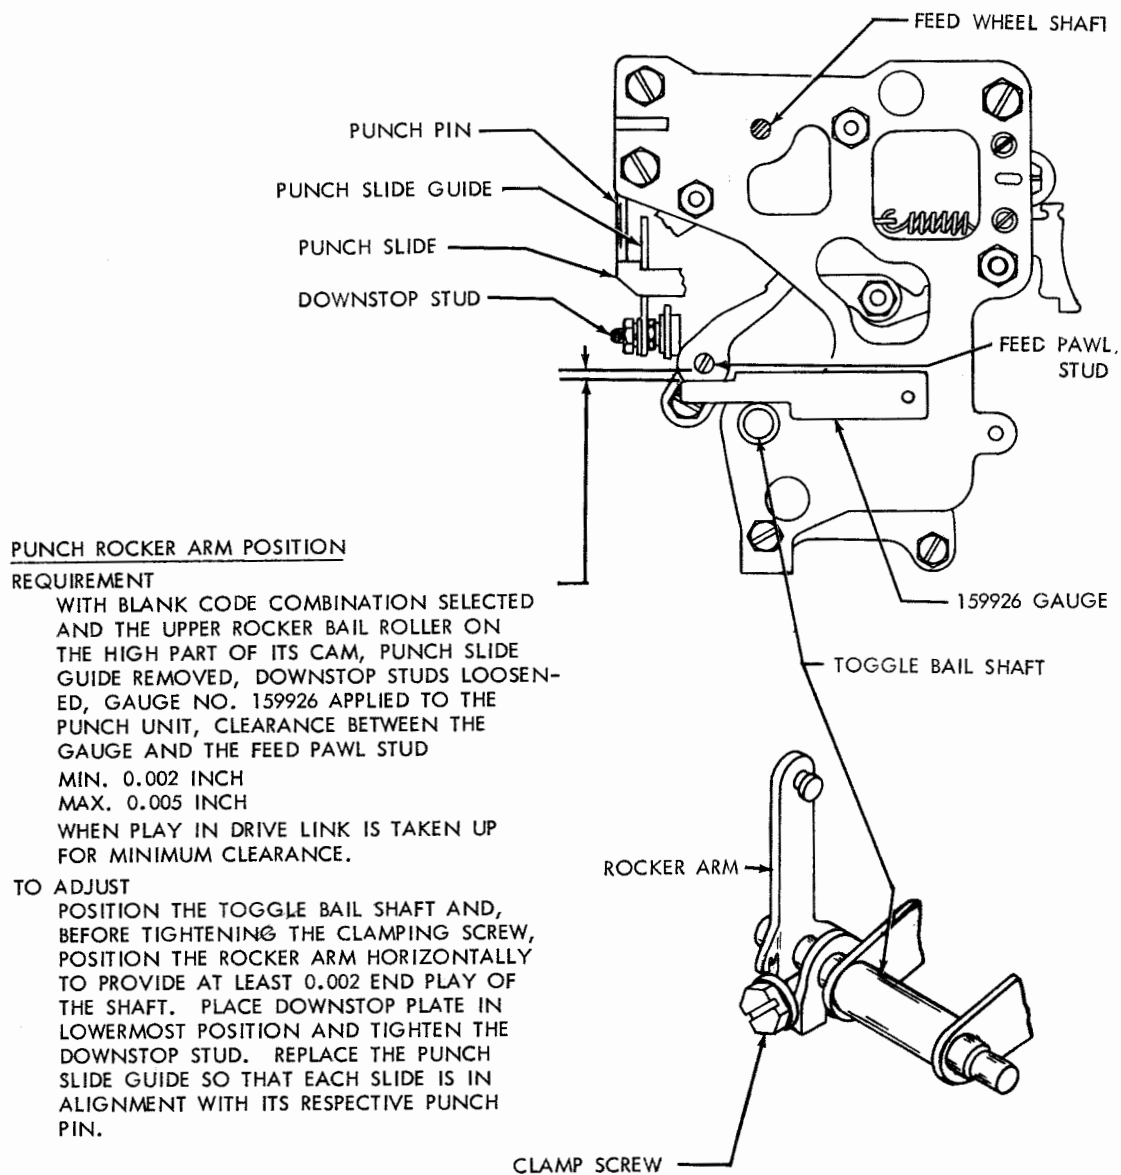


FIGURE 15. PUNCH MECHANISM







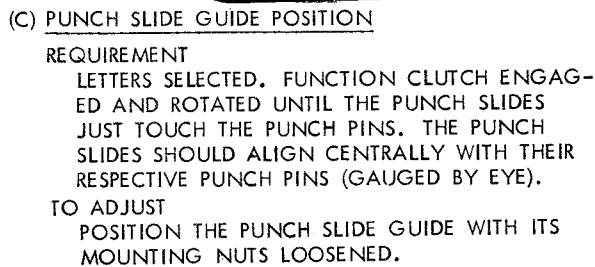


FIGURE 17. PUNCH MECHANISM

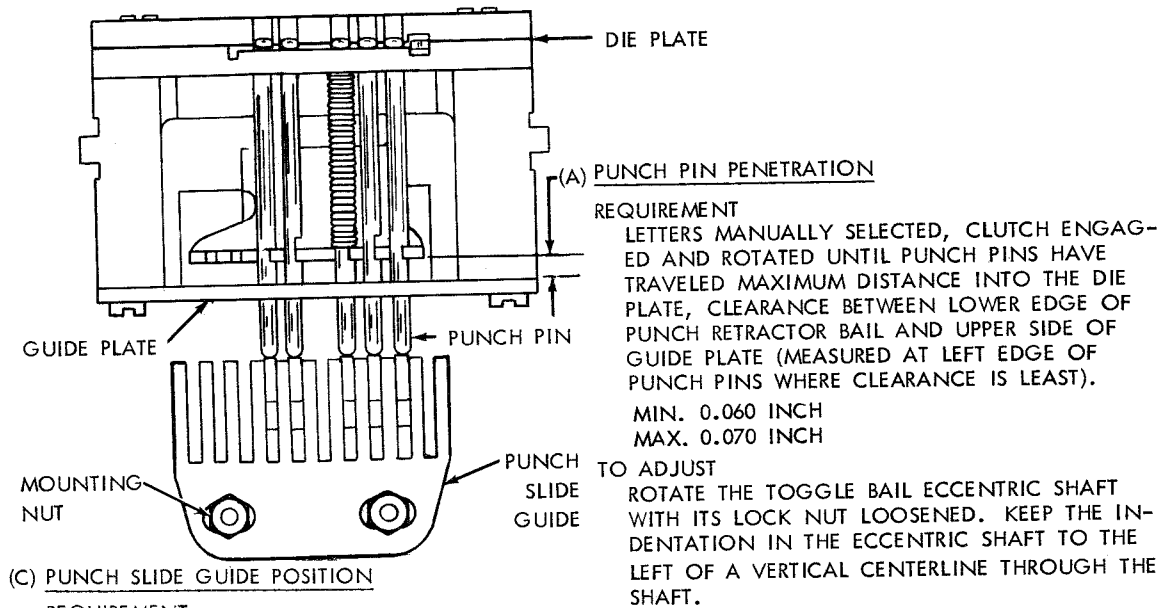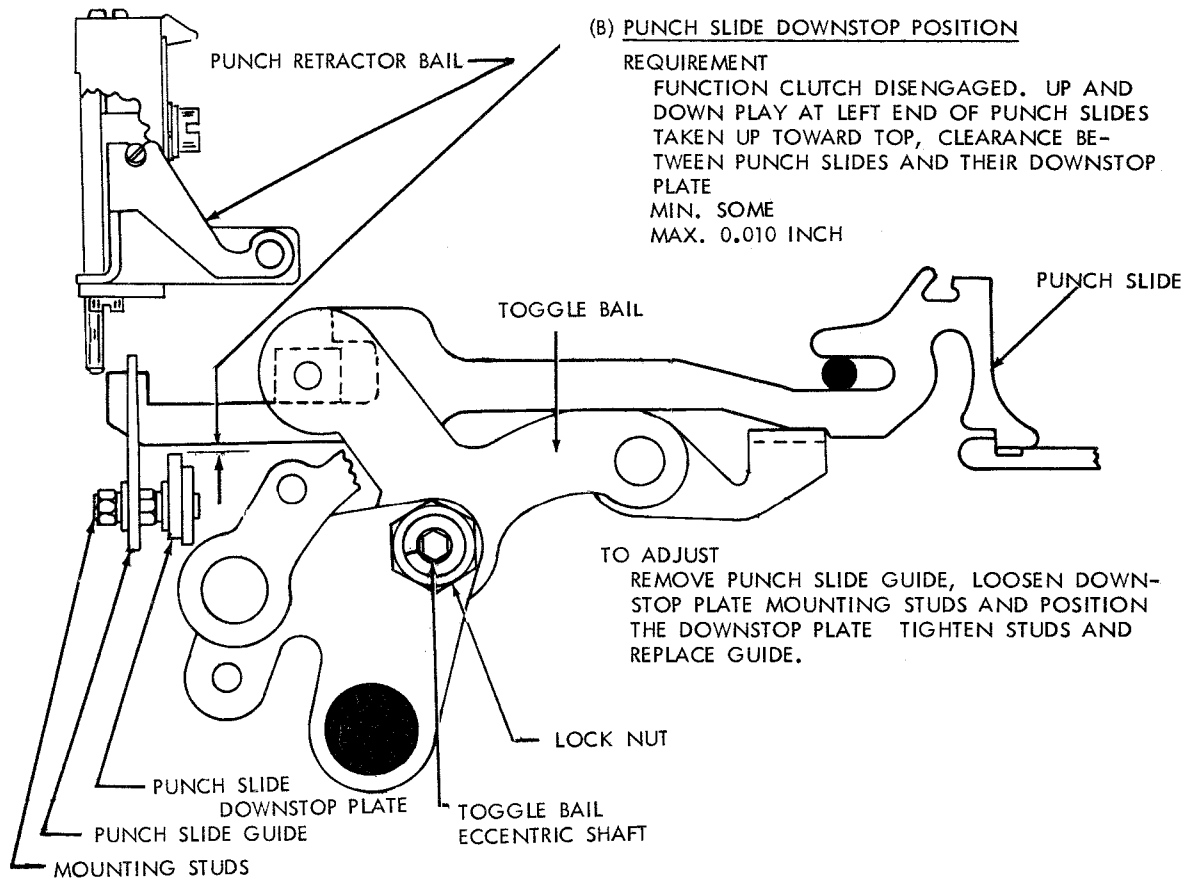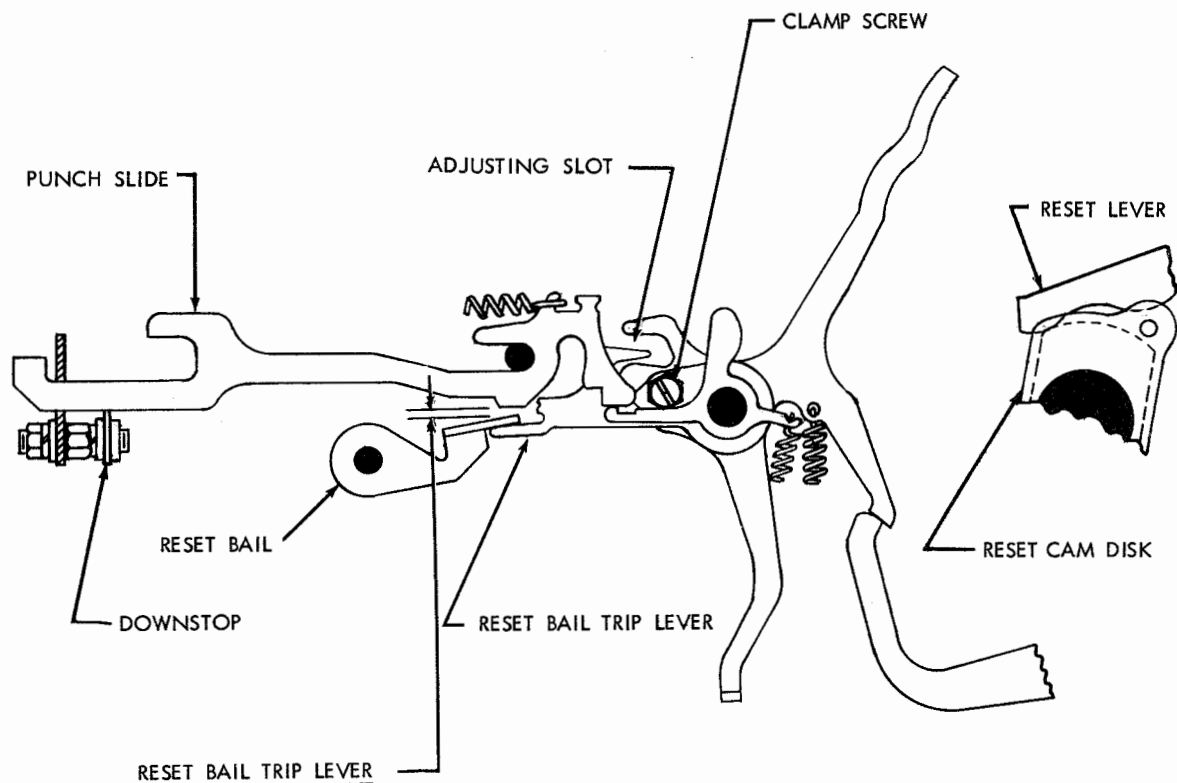


- RESET BAIL TRIP LEVER
- (1) REQUIREMENT  
 LETTERS COMBINATION SELECTED, FUNCTION CLUTCH TRIPPED, PUNCH SLIDES AGAINST THEIR DOWNSTOP. RESET LEVER AT HIGHEST POINT OF ITS TRAVEL. CLEARANCE BETWEEN LOWER EDGE OF SLIDE AND UPPER EDGE OF RESET BAIL MIN. SOME  
 MAX. 0.007 INCH  
 WHEN PLAY IS TAKEN UP FOR MINIMUM
- (2) REQUIREMENT  
 CLUTCH DISENGAGED AND LATCHED. PUNCH SLIDE RESET BAIL SHOULD FULLY ENGAGE THE NOTCHES IN THE PUNCH SLIDES.

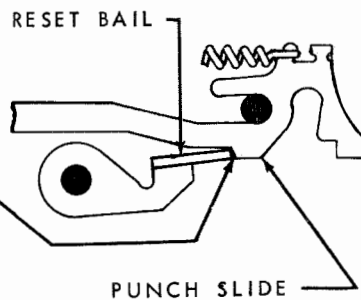

TO ADJUST  
 POSITION RESET BAIL TRIP LEVER BY MEANS OF ITS ADJUSTING SLOT, WITH ITS CLAMP SCREW LOOSENED.

FIGURE 18. PUNCH SLIDE TRIP MECHANISM

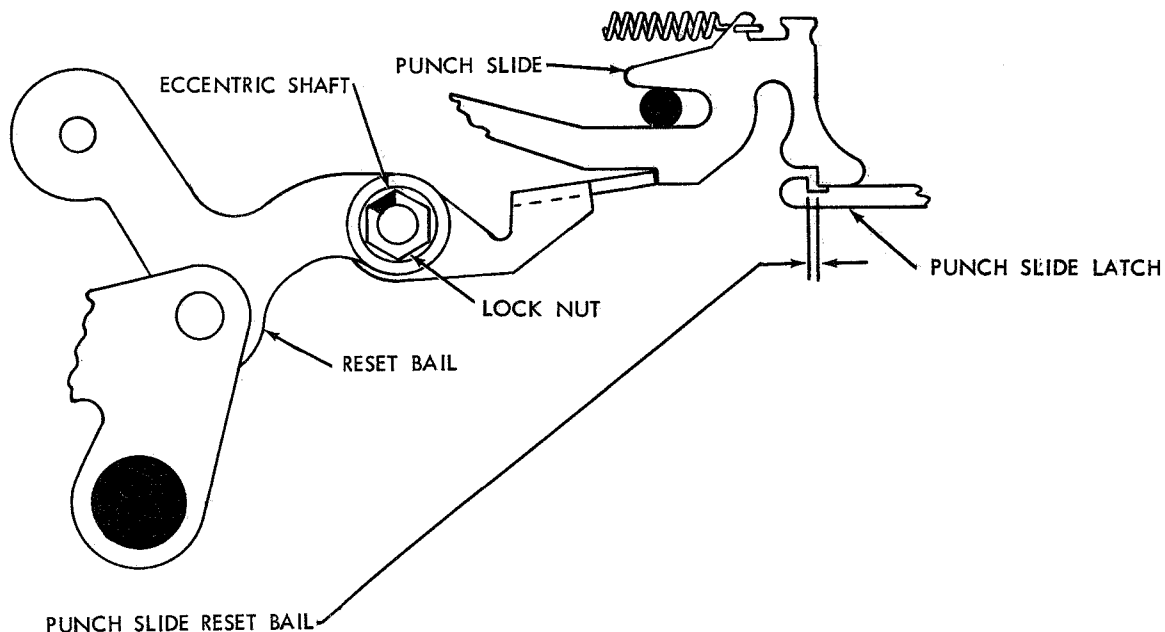


PUNCH SLIDE RESET BAIL

- (1) REQUIREMENT  
FUNCTION CLUTCH DISENGAGED AND LATCHED, CLEARANCE BETWEEN PUNCH SLIDE LATCH AND A PUNCH SLIDE  
MIN. 0.015 INCH  
MAX. 0.025 INCH
- (2) PUNCH SLIDES SELECTED AND RESET BAIL IN ITS EXTREME LEFT HAND POSITION, CLEARANCE BETWEEN THE RESET BAIL AND ITS NOTCH ON THE PUNCH SLIDES

MIN. 0.020 INCH

TO ADJUST

ROTATE THE RESET BAIL ECCENTRIC SHAFT WITH ITS LOCK NUT LOOSENED. KEEP THE INDENTATION IN THE ECCENTRIC SHAFT HIGH AND TO THE LEFT OF A VERTICAL CENTERLINE THROUGH THE SHAFT.

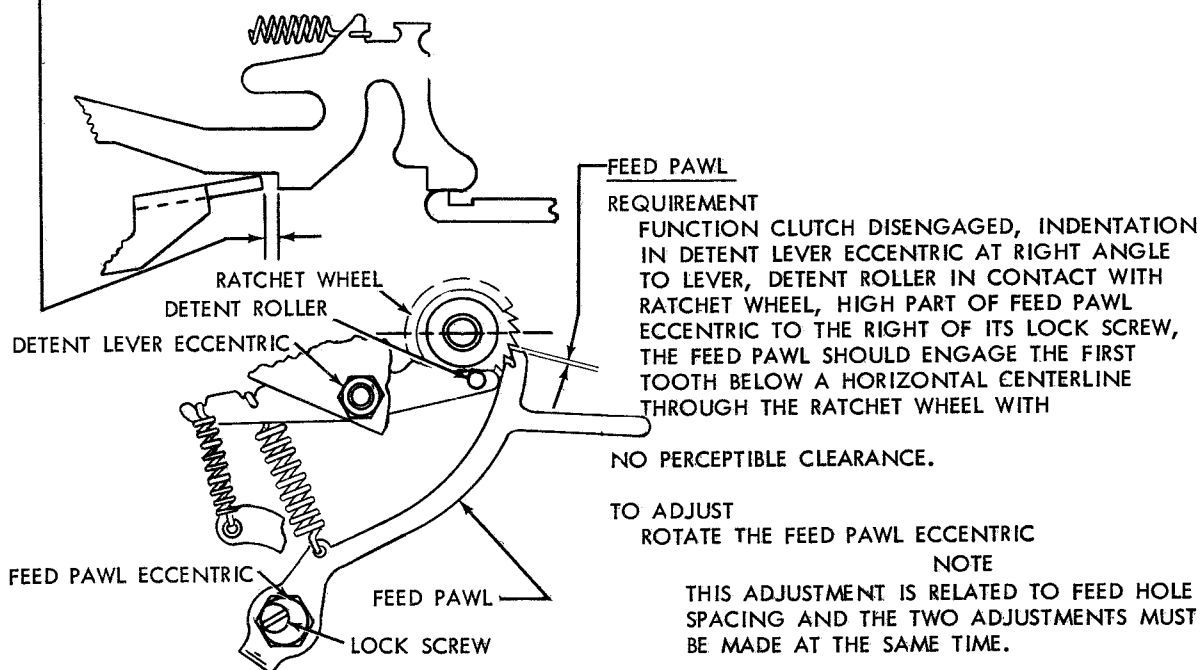

FEED PAWL

REQUIREMENT

FUNCTION CLUTCH DISENGAGED, INDENTATION IN DETENT LEVER ECCENTRIC AT RIGHT ANGLE TO LEVER, DETENT ROLLER IN CONTACT WITH RATCHET WHEEL, HIGH PART OF FEED PAWL ECCENTRIC TO THE RIGHT OF ITS LOCK SCREW, THE FEED PAWL SHOULD ENGAGE THE FIRST TOOTH BELOW A HORIZONTAL CENTERLINE THROUGH THE RATCHET WHEEL WITH

NO PERCEPTIBLE CLEARANCE.

TO ADJUST

ROTATE THE FEED PAWL ECCENTRIC

NOTE

THIS ADJUSTMENT IS RELATED TO FEED HOLE SPACING AND THE TWO ADJUSTMENTS MUST BE MADE AT THE SAME TIME.

FIGURE 19. PUNCH UNIT RESET AND FEEDING MECHANISM

FEED HOLE SPACING (PRELIMINARY)

## REQUIREMENT

WITH INDENT OF DIE WHEEL ECCENTRIC STUD POINTING DOWNWARD, CLEARANCE BETWEEN DIE WHEEL AND FEED WHEEL:

MIN. 0.002 INCH-----MAX. 0.004 INCH

## TO ADJUST

POSITION DIE WHEEL ECCENTRIC STUD WITH LOCK NUT LOOSENED.


## NOTE:

BEFORE PROCEEDING WITH THE FOLLOWING ADJUSTMENTS, CHECK BOTH TAPE GUIDE SPRING TENSIONS (FIGURE 23).

FEED HOLE SPACING (FINAL)

## (1) REQUIREMENT

WITH TAPE REMOVED, MIN. OF 0.002 INCH CLEARANCE BETWEEN FEED WHEEL AND WHEEL.

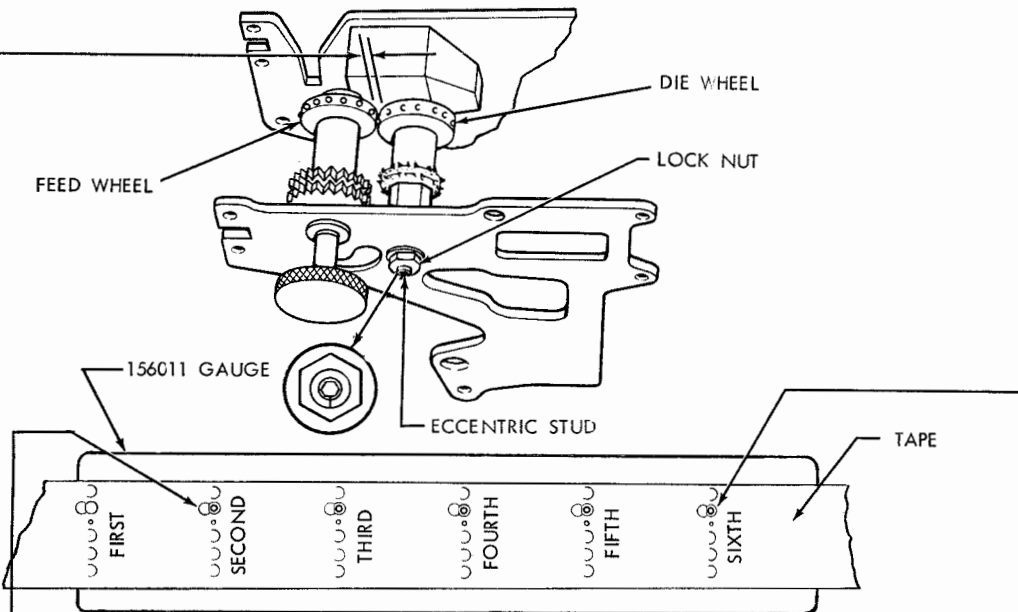

## (2) TO CHECK

PERFORATE IN ORDER SIX SEQUENCES MADE UP OF NINE BLANK CODE COMBINATIONS FOLLOWED BY A LETTERS COMBINATION. OPEN CHADS SO THAT CODE HOLES ARE VISIBLE. PLACE TAPE OVER SMOOTH SIDE OF 156011 TAPE GAUGE SO THAT FIRST NO. 2 CODE HOLE IS CONCENTRIC WITH FIRST (0.072 INCH) HOLE IN GAGE (SEE NOTE BELOW).

## REQUIREMENT

SECOND THROUGH FIFTH HOLE IN GAUGE VISIBLE THROUGH NO. 2 CODE HOLES IN TAPE. CIRCULAR PORTION OF SIXTH NO. 2 CODE HOLE ENTIRELY WITHIN CORRESPONDING (0.086 INCH) HOLE IN GAUGE.

## (3) REQUIREMENT

WITH TAPE SHOE HELD AWAY FROM FEED WHEEL, FEED PAWL AND DETENT DISENGAGED AND TAPE REMOVED, FEED WHEEL SHOULD ROTATE FREELY.

## TO ADJUST

(1) WITH TAPE REMOVED, KEEPING INDENT BELOW CENTER OF STUD, POSITION DIE WHEEL ECCENTRIC STUD WITH LOCK NUT LOOSENED SO THAT CLEARANCE BETWEEN FEED WHEEL AND DIE WHEEL IS

MIN. 0.002 INCH-----MAX. 0.004 INCH.


(2) REFINE THE ABOVE ADJUSTMENT TO MEET REQUIREMENT (2). MOVE INDENT IN ECCENTRIC STUD TOWARD FEED WHEEL TO DECREASE AND AWAY FROM FEED WHEEL TO INCREASE FEED HOLE SPACING. CAUTION: WITH TAPE REMOVED, MAKE SURE FEED WHEEL-DIE WHEEL CLEARANCE IS A MIN. OF 0.002 INCH.

(3) FAILURE TO MEET REQUIREMENT (3) INDICATES DIE WHEEL ECCENTRIC STUD HAS BEEN OVER ADJUSTED. REFINE.

## NOTE:

FIRST THROUGH FIFTH HOLES IN GAUGE ARE SAME SIZE AS CODE HOLES IN TAPE (0.072 INCH DIAMETER). BUT SIXTH HOLE IN GAUGE IS LARGER (0.086 INCH). THIS ARRANGEMENT ALLOWS 0.007 INCH VARIATION IN 5 INCHES.

FIGURE 20. TAPE FEED MECHANISM

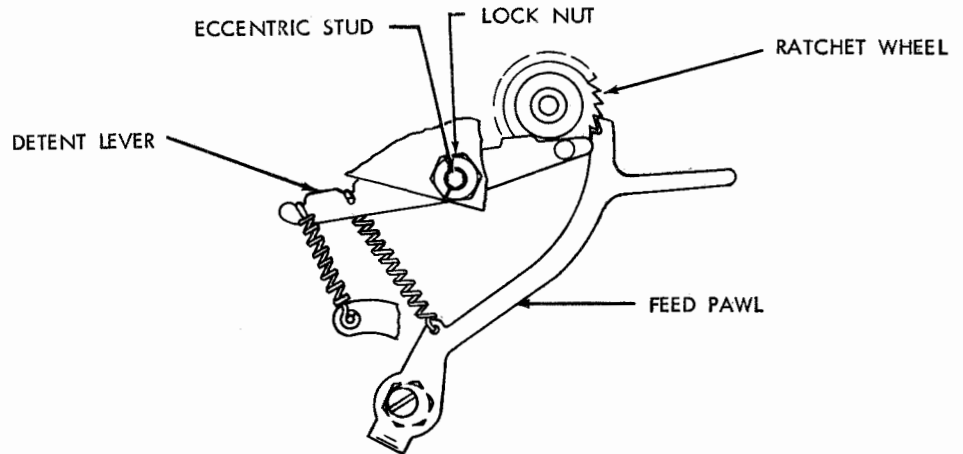DETENTREQUIREMENT

A PIECE OF TAPE CONTAINING NINE FEED HOLES FOLLOWED BY A LETTERS COMBINATION PERFORATED ON THE REPERFORATOR MUST CONFORM TO THE 156011 TAPE GAUGE.

THE LATERAL CENTERLINE THROUGH THE CODE HOLES IN THE TAPE SHOULD COINCIDE WITH A LATERAL CENTERLINE THROUGH THE HOLES IN THE GAUGE.

TO ADJUST

ROTATE THE DETENT ECCENTRIC CLOCKWISE TO MOVE THE FEED HOLES TOWARD THE HINGED EDGE OF THE CODE HOLES AND COUNTERCLOCKWISE TO MOVE THE FEED HOLES TOWARD THE TRAILING EDGE OF THE CODE HOLES. TIGHTEN THE ECCENTRIC LOCK NUT AND REFINISH THE FEED PAWL ADJUSTMENT.



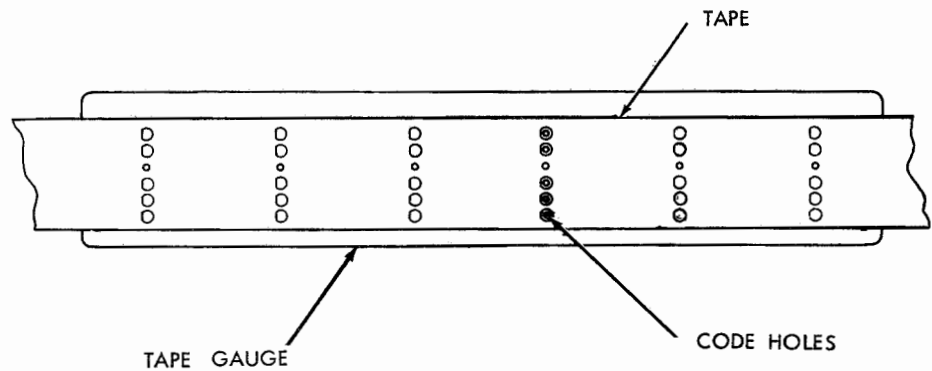
RECHECK FEED PAWL ADJUSTMENT

FIGURE 21. PUNCH DETENT

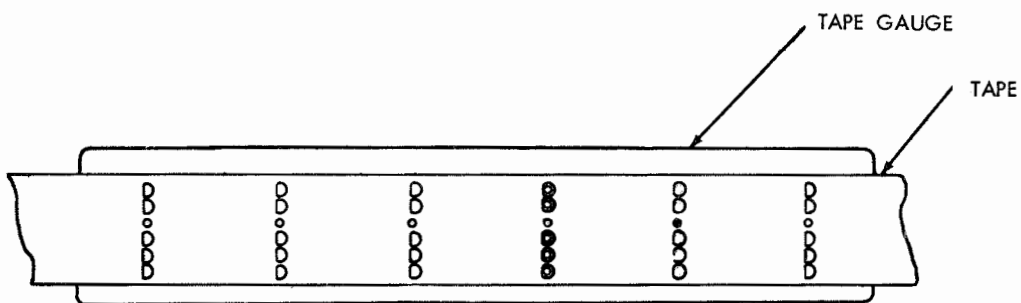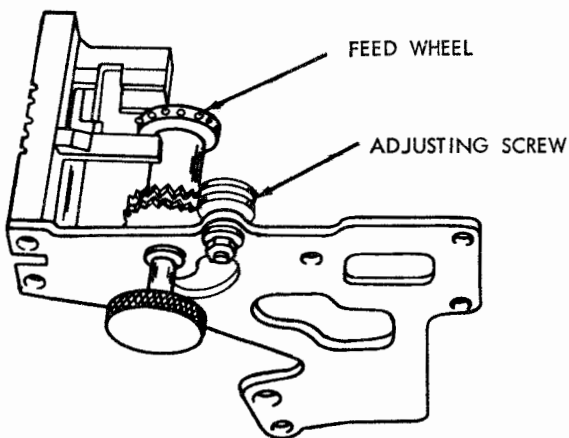

FEED HOLE LATERAL ALIGNMENT

**REQUIREMENT**

WHEN A PIECE OF TAPE CONTAINING NINE FEED HOLES FOLLOWED BY A LETTERS COMBINATION ARE PERFORATED BY THE REPERFORATOR AND CHECKED BY THE TAPE GAUGE THE CODE HOLES IN THE TAPE SHOULD BE CONCENTRIC WITH THE HOLES IN THE GAUGE

**TO ADJUST**

TURN THE FEED WHEEL ADJUSTING SCREW IN OR OUT WITH ITS LOCK NUT LOOSENED.

REFINE DETENT ADJUSTMENT IF NECESSARY.

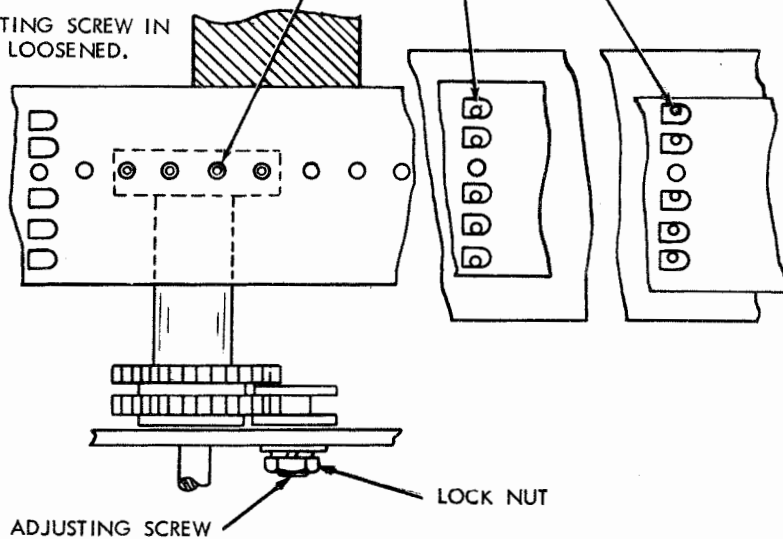


FIGURE 22. TAPE FEED MECHANISM

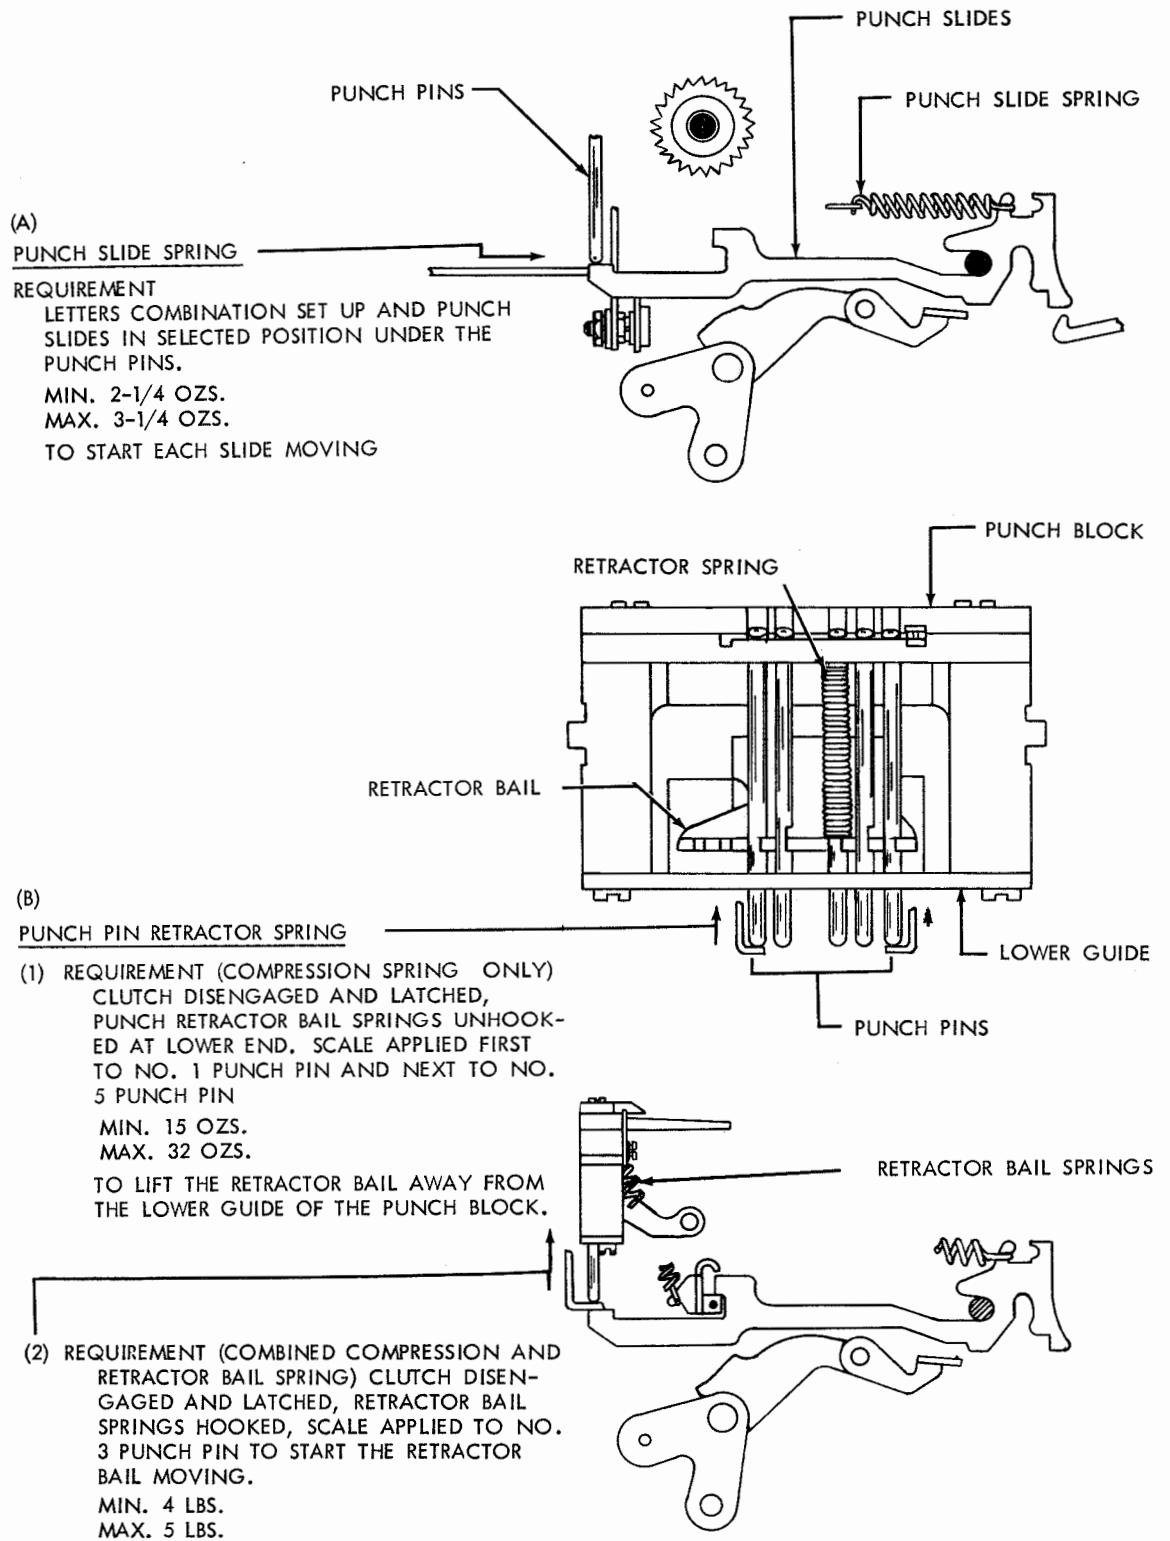


FIGURE 23. PUNCH MECHANISM

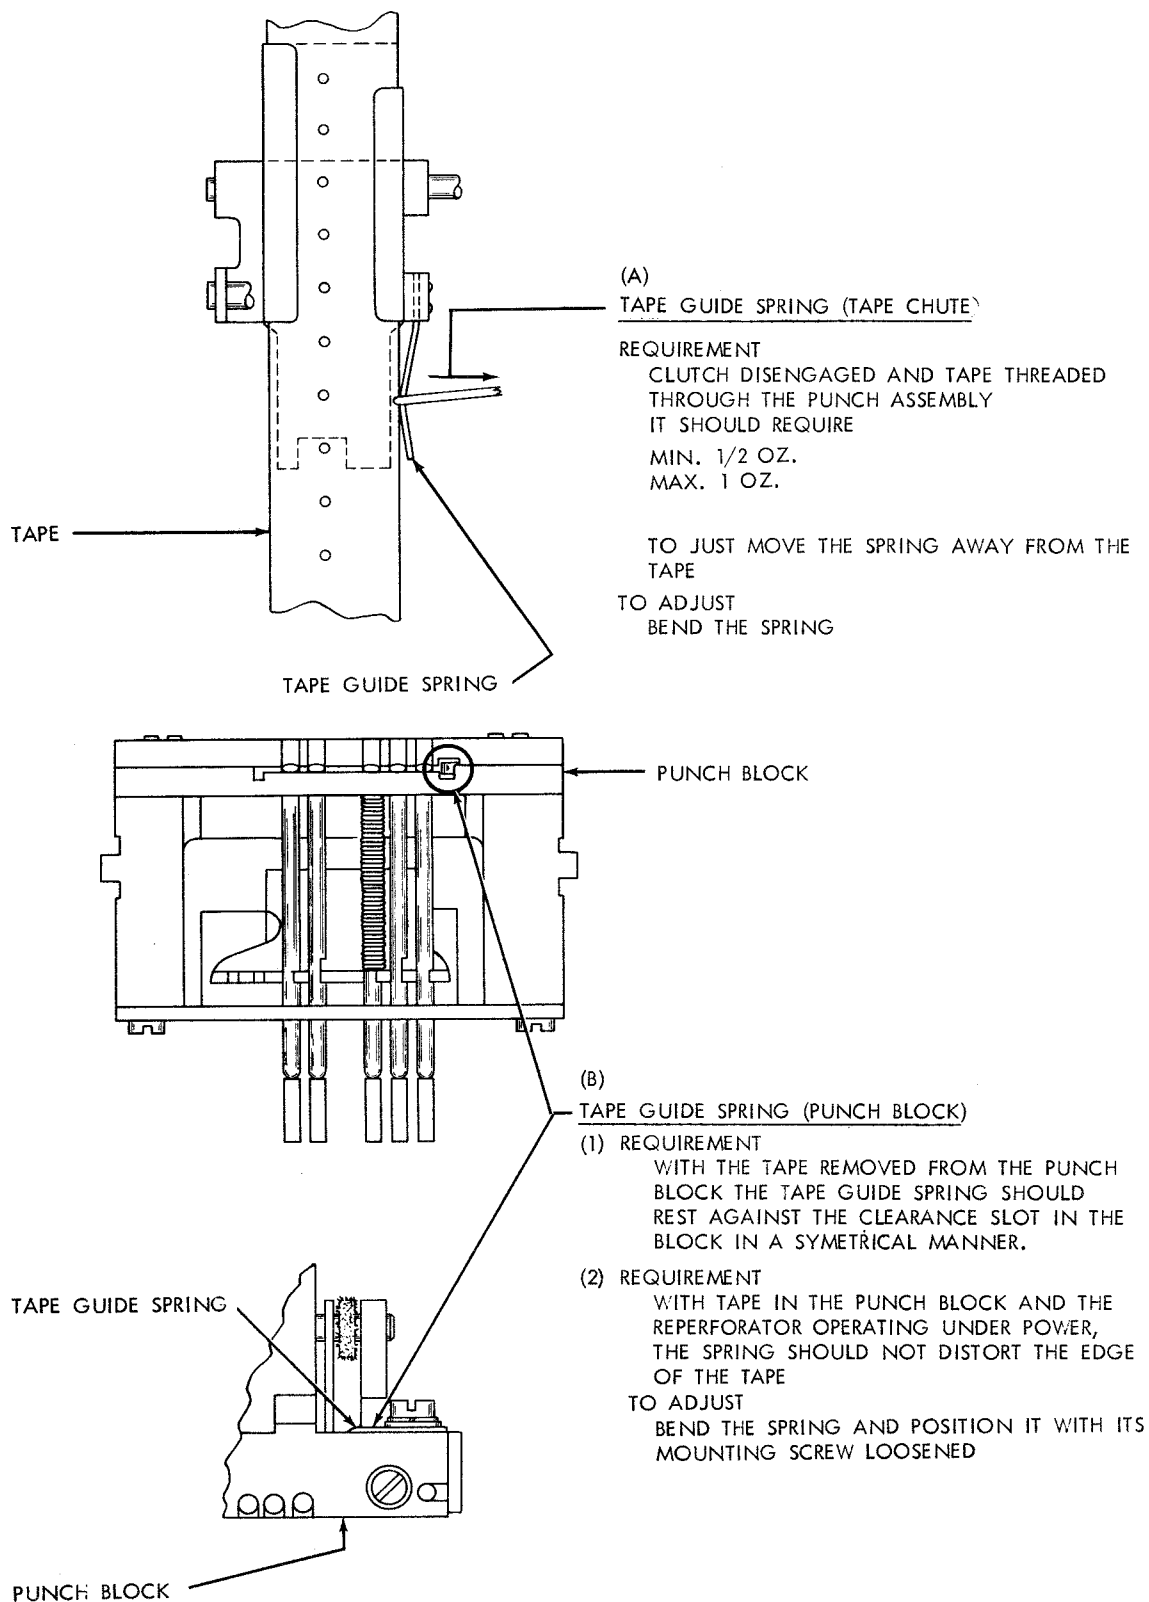


FIGURE 24. PUNCH MECHANISM



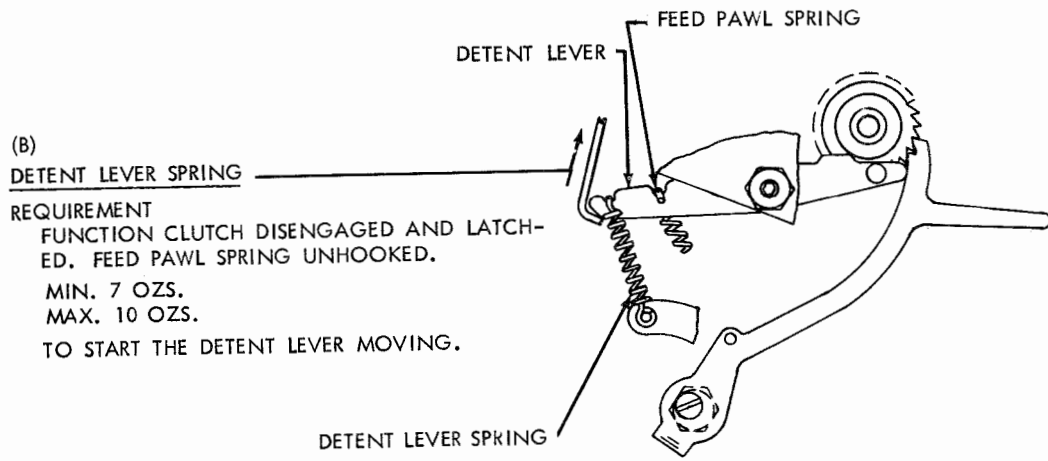
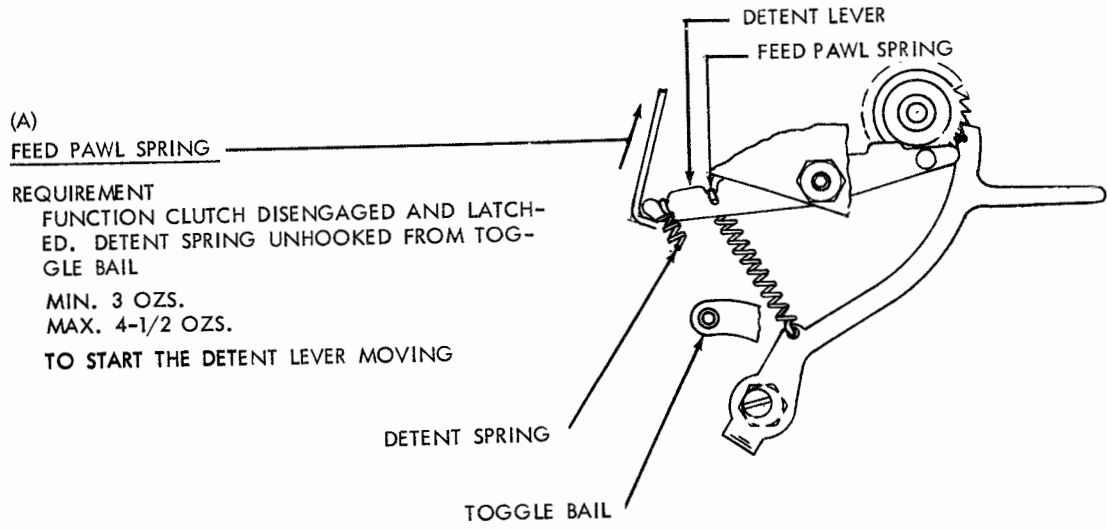


FIGURE 25. TAPE FEED MECHANISM

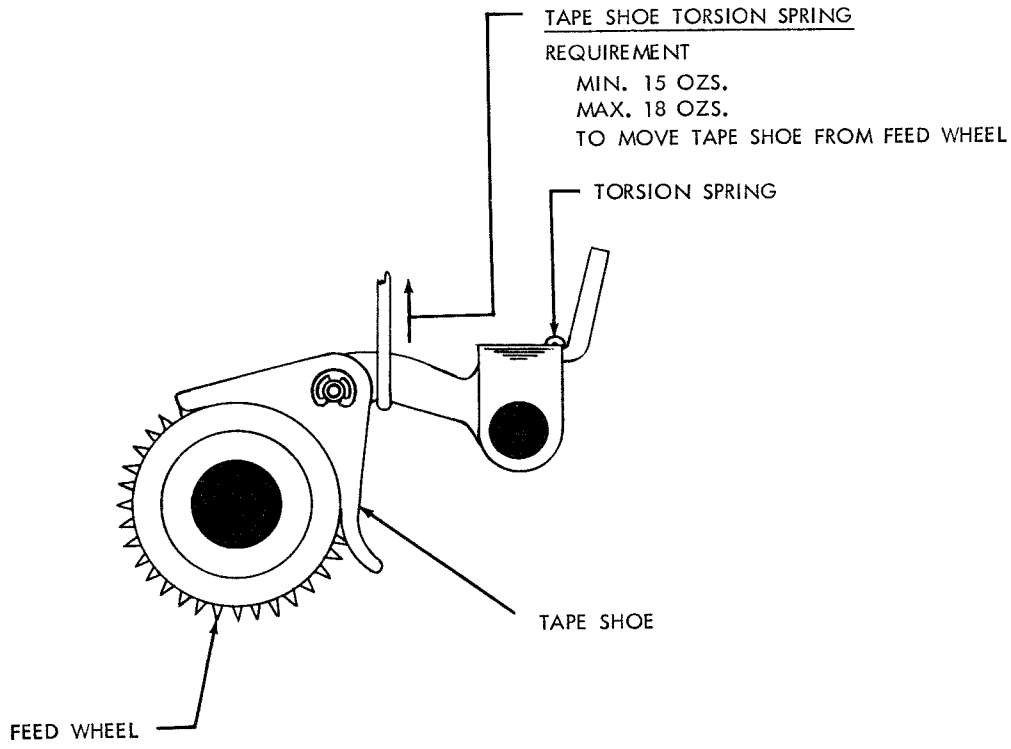


FIGURE 26. FEED WHEEL


E. VERIFYING READER

NOTE  
ALL ADJUSTMENTS SHOULD BE MADE WITH THE  
LEFT COVER PLATE REMOVED

(A) TAPE LID

REQUIREMENT  
WITH THE TAPE LID HELD DEPRESSED AGAINST  
THE TOP PLATE, THE LID SHOULD  
TOUCH THE GUIDE AT BOTH BEARING POINTS

TO ADJUST  
LOOSEN TWO SCREWS WHICH SECURE THE  
TAPE LID TO THE HINGED BRACKET. HOLD  
THE TAPE LID DEPRESSED AND TIGHTEN THE  
SCREWS.

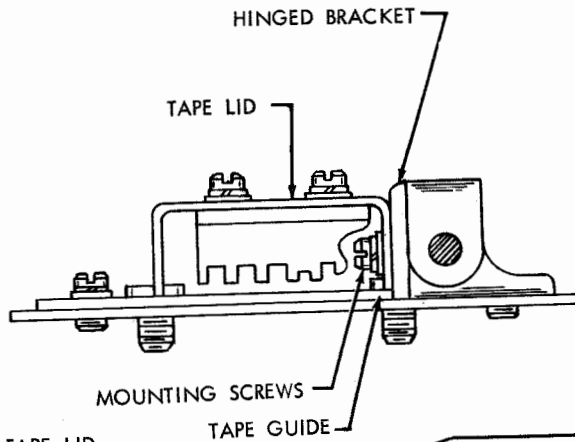

(B) TAPE LID CLEARANCE

REQUIREMENT  
WITH TAPE LID HELD CLOSED, THE LATCH  
SHOULD MOVE FREELY OVER THE LATCHING  
SURFACE WITH

MINIMUM CLEARANCE

TO ADJUST  
POSITION THE TAPE LID LATCH WITH ITS  
MOUNTING SCREW LOOSENED.

NOTE  
IT MAY BE NECESSARY TO OPERATE  
THE MECHANISM TO GAIN ACCESS  
TO THE SCREW.


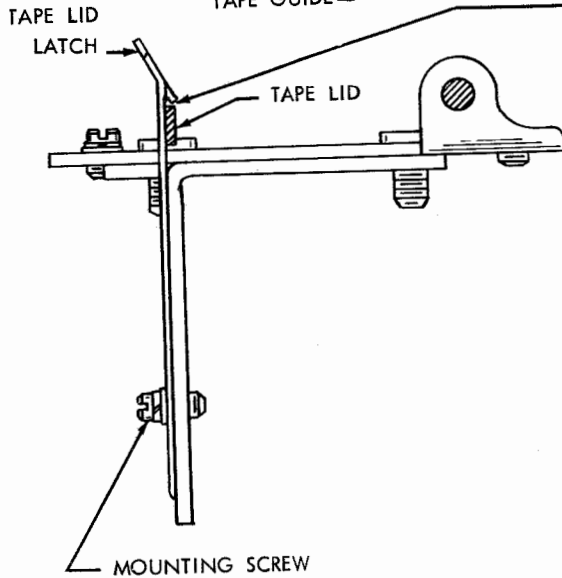



FIGURE 27. VERIFYING READER TAPE LID

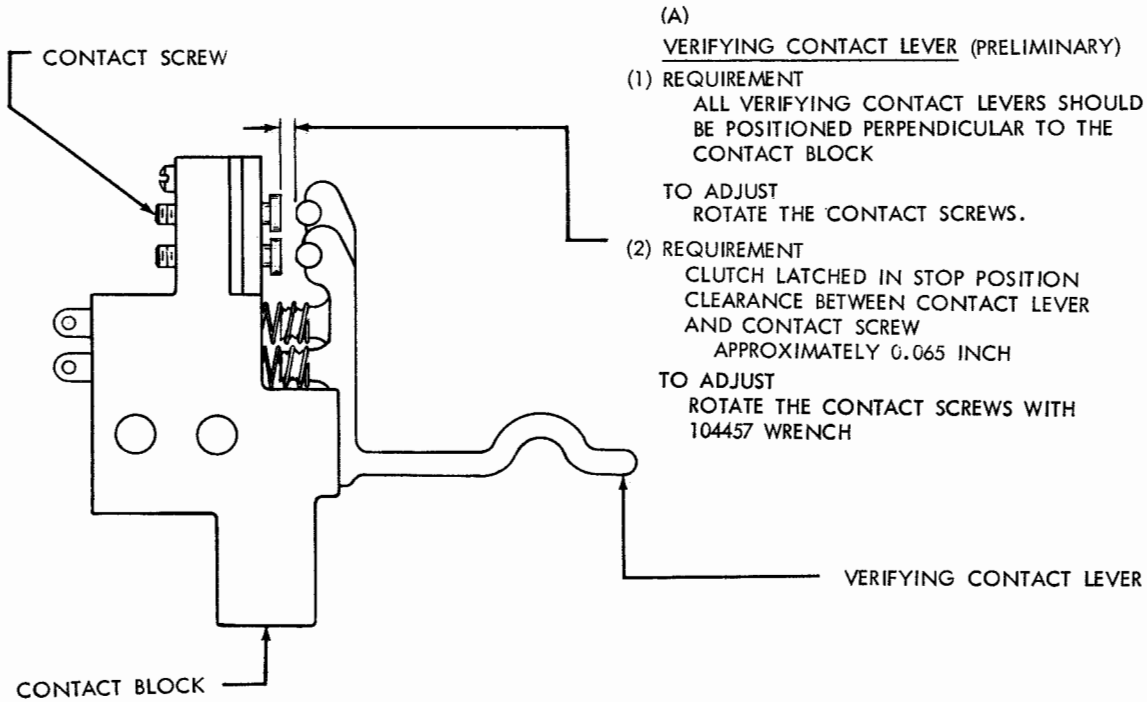

(B)  
SENSING SLIDE ALIGNMENT

REQUIREMENT  
THE SENSING SLIDES SHOULD PASS APPROXIMATELY THROUGH THE CENTER OF THE CODE HOLES IN A PERFORATED TAPE

TO ADJUST  
INSERT A PIECE OF TAPE, PERFORATED WITH LETTERS CODE COMBINATION, IN THE TAPE GUIDE. POSITION THE TAPE GUIDE WITH ITS MOUNTING SCREWS LOOSENED.

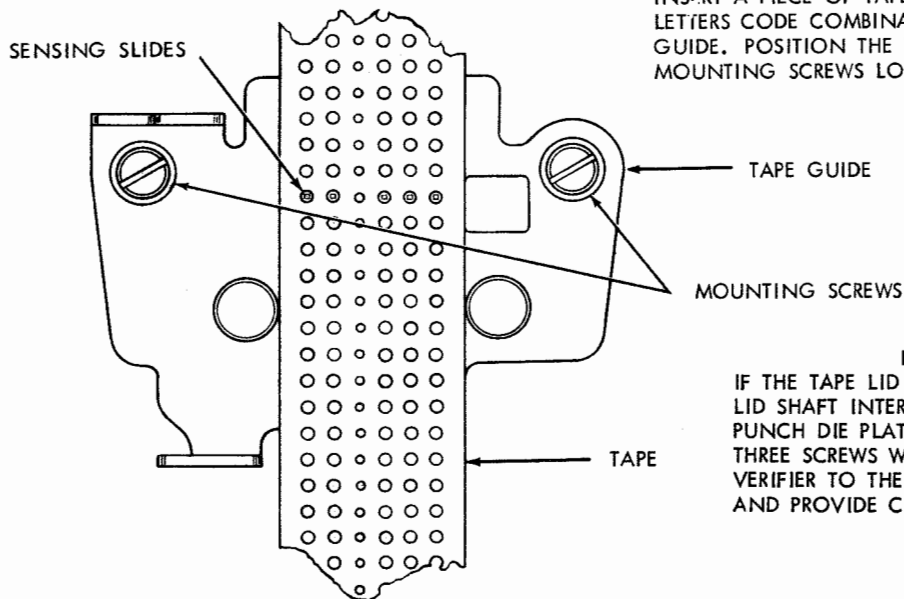

NOTE  
IF THE TAPE LID AND/ OR THE TAPE LID SHAFT INTERFERE WITH THE PUNCH DIE PLATE, LOOSEN THE THREE SCREWS WHICH ATTACH THE VERIFYER TO THE PUNCH ASSEMBLY AND PROVIDE CLEARANCE

FIGURE 28. VERIFYING CONTACTS

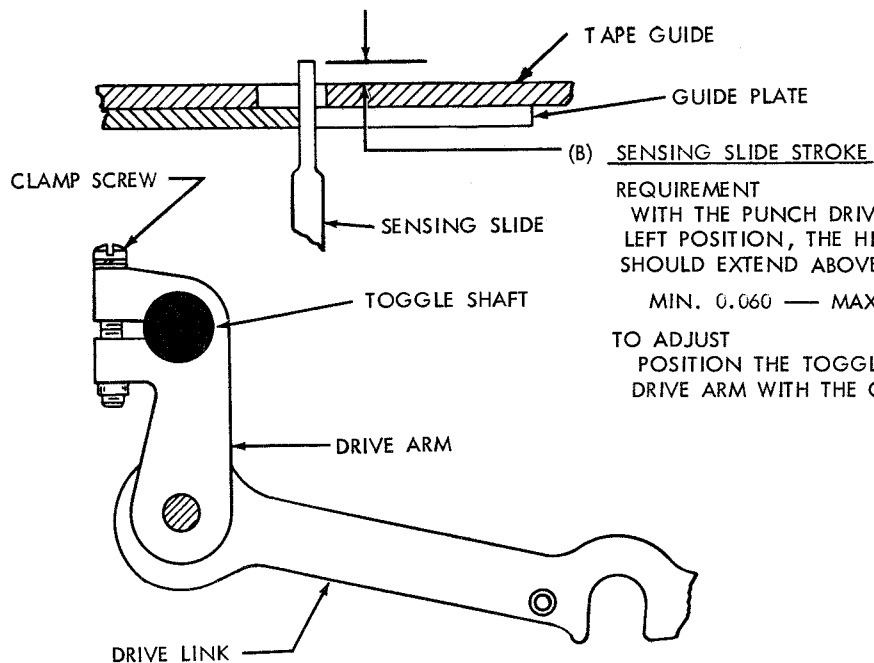
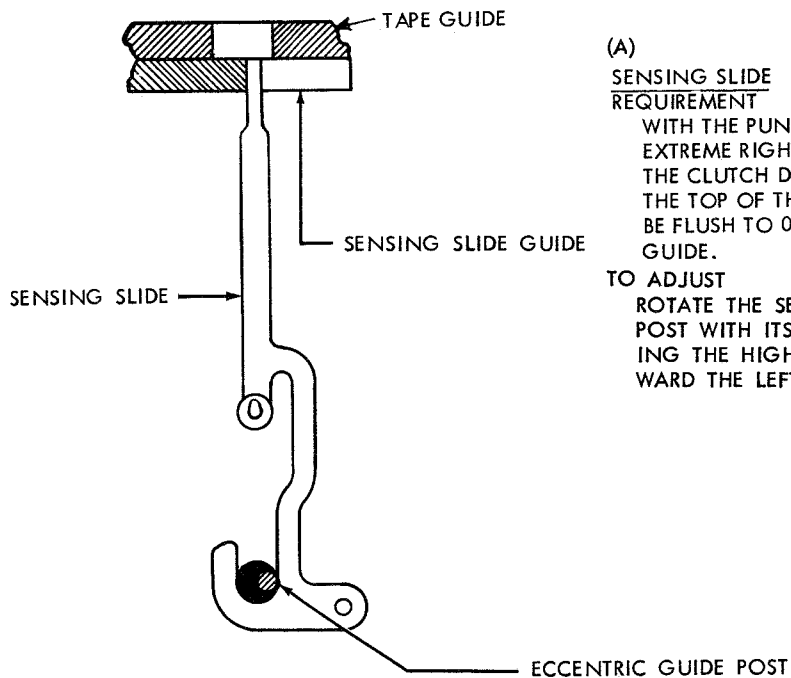


FIGURE 29. SENSING SLIDES


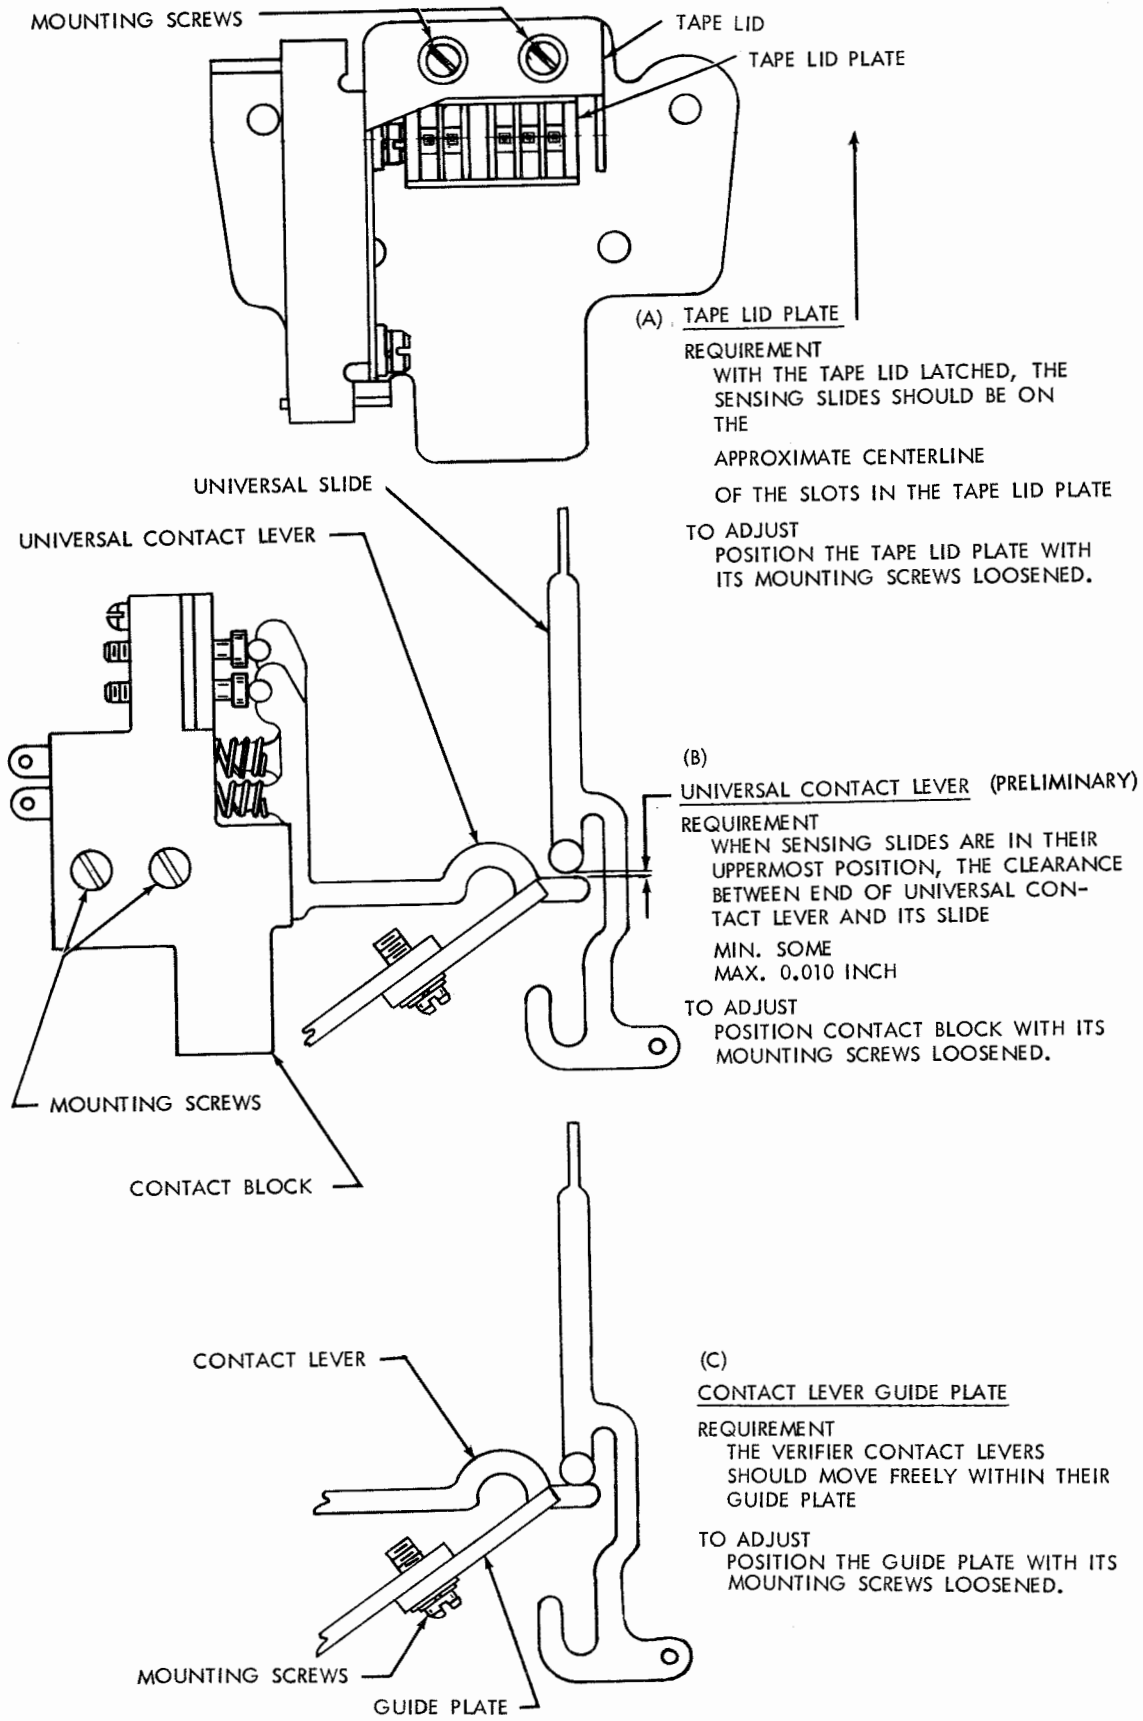


FIGURE 30. SENSING SLIDES

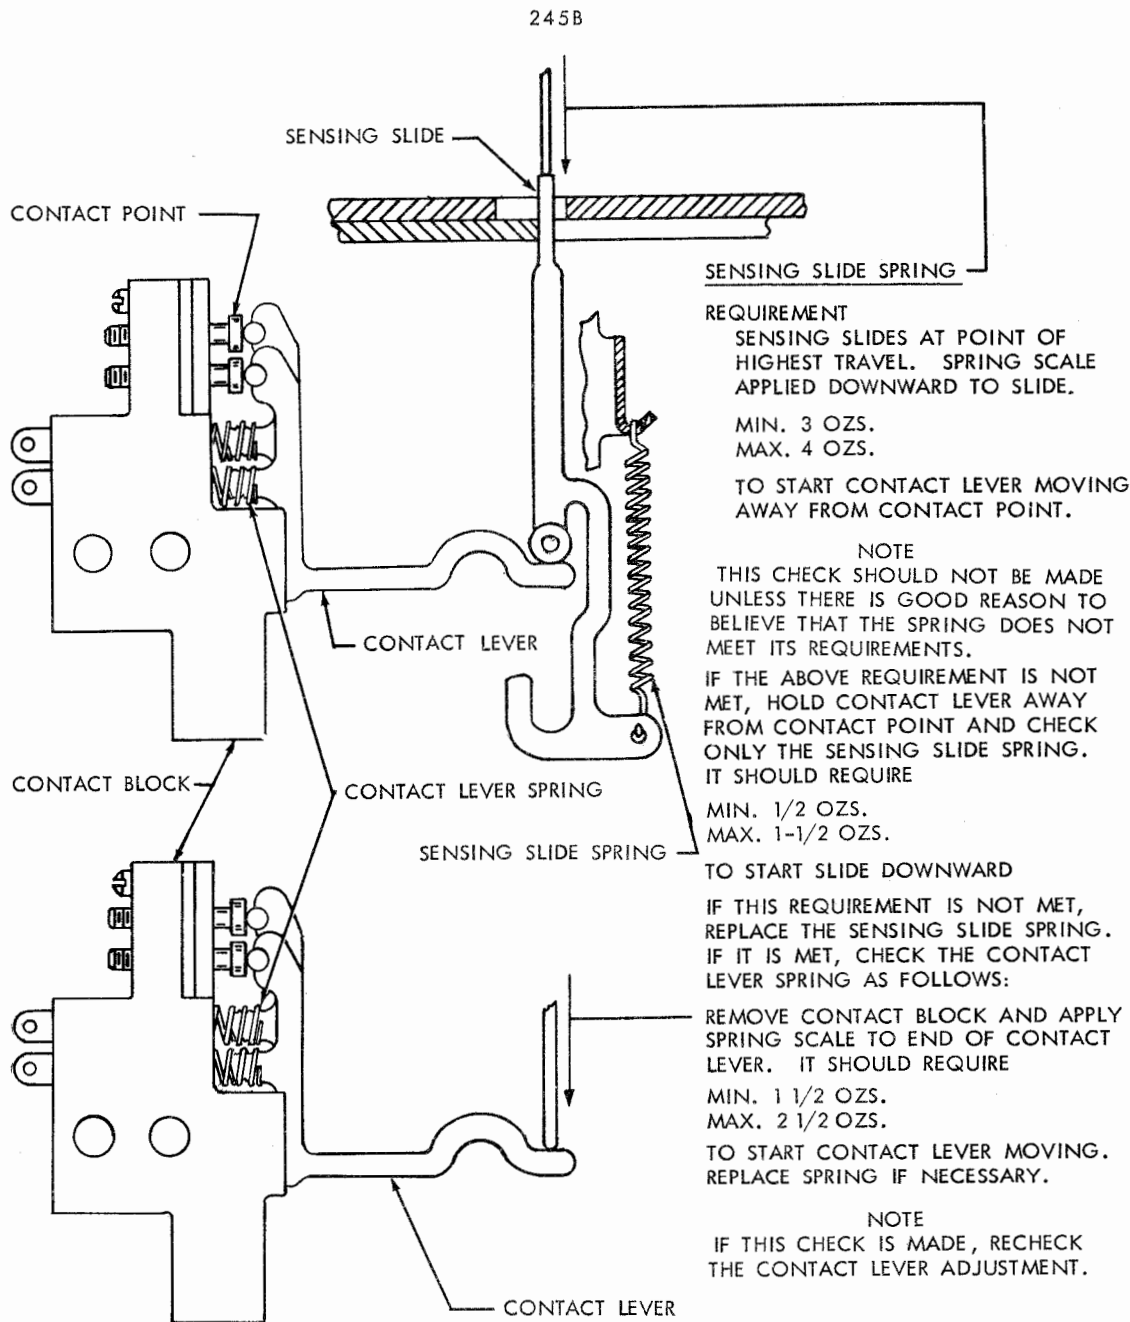

CONTACT GAP (FINAL)

REQUIREMENT

THE UNIVERSAL CONTACTS SHOULD CLOSE AFTER READING CONTACTS HAVE CLOSED AND SHOULD OPEN BEFORE THE CODE READING CONTACTS OPEN.

TO CHECK

USE A 100 WPM TYPE DISTORSION TEST SET WITH A 200 WPM TYPE SCALE. VIEW THE SHORTER SIGNALS FOR EACH CONTACT. THE UNIVERSAL CONTACT CLOSURE SHOULD BE 120 — 20 UNITS ON THE 7.42 CODE ARRANGEMENT. THE CODE READING CONTACTS SHOULD BE 155 — 15 UNITS.

TO ADJUST

TURN THE RESPECTIVE CONTACT SCREW

NOTE

THE VERIFYING READER SHOULD ACTUALLY BE READING THE LETTERS CODE COMBINATION TAPE TO ADJUST CONTACT GAP PROPERLY.

FIGURE 31. VERIFYING CONTACTS AND SENSING SLIDES



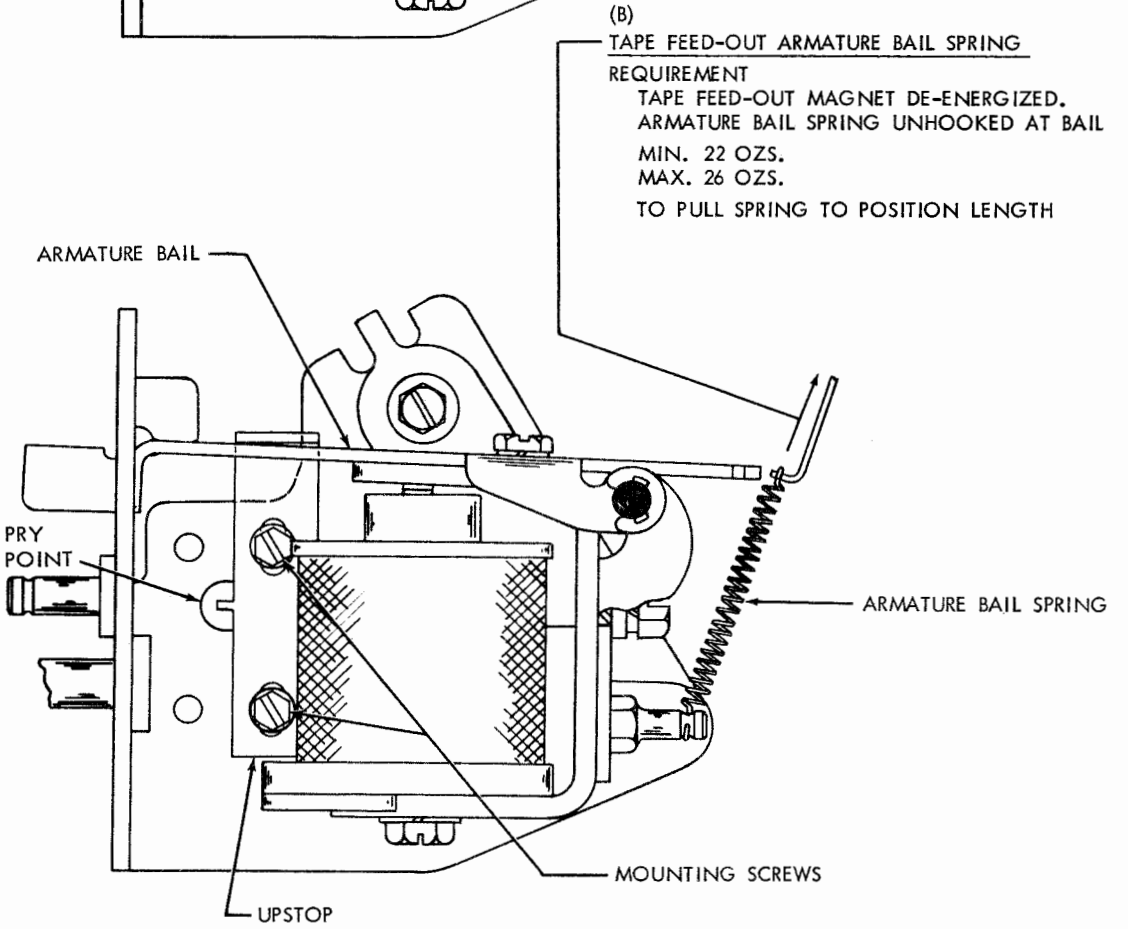


FIGURE 32. TAPE FEED-OUT MAGNE

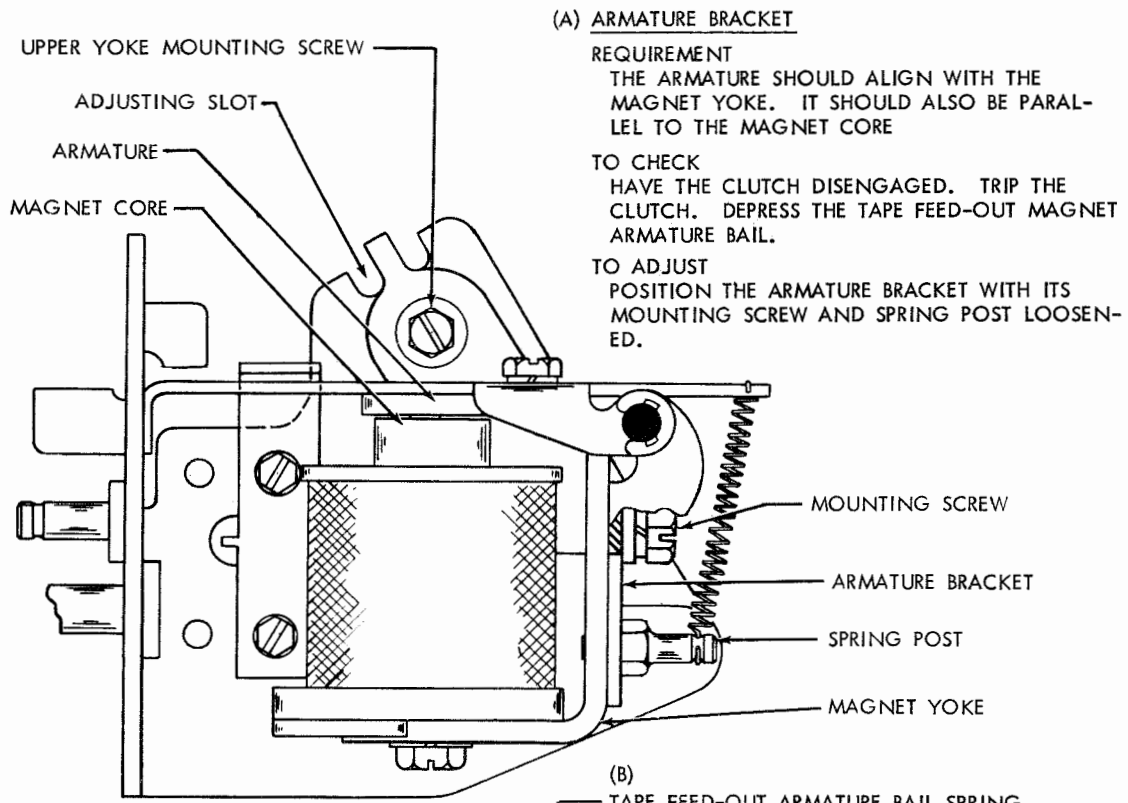

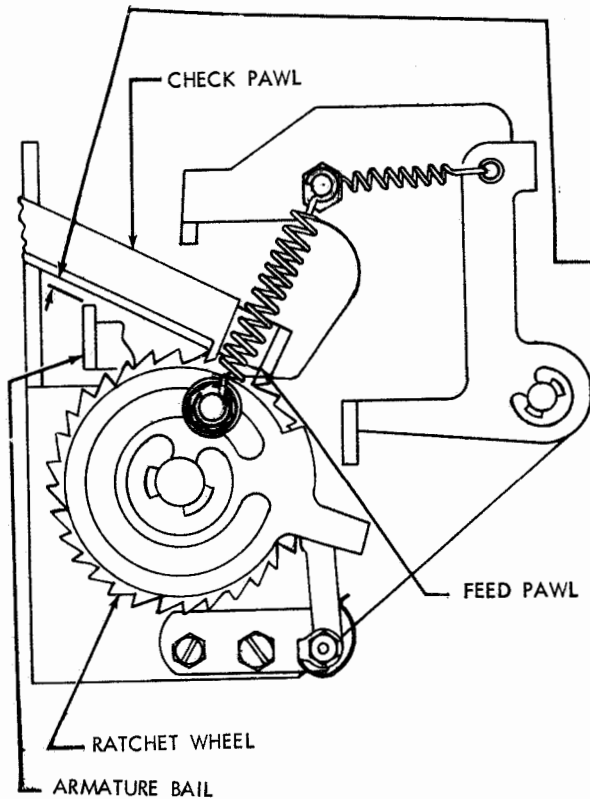

(A)  
TAPE FEED-OUT MAGNET ASSEMBLY

REQUIREMENT

ARMATURE BAIL IN ENERGIZED POSITION. THE CHECK PAWL AND FEED PAWL EACH IN DEEP NOTCH OF THEIR RESPECTIVE RATCHET WHEEL. THE ARMATURE BAIL SHOULD CLEAR EACH PAWL

MIN. 0.010 INCH

MAX. 0.020 INCH


THROUGHOUT A COMPLETE REVOLUTION OF THE MAIN SHAFT.

TO CHECK

HAVE THE CLUTCH DISENGAGED. TRIP THE CLUTCH. DEPRESS THE ARMATURE BAIL AND HOLD IT WHILE ROTATING THE MAIN SHAFT A COMPLETE REVOLUTION

TO ADJUST

POSITION THE MAGNET ASSEMBLY, BY MEANS OF ITS ADJUSTING SLOT, WITH THE UPPER AND LOWER YOKE MOUNTING SCREWS LOOSENED. SEE FIGURE 32.

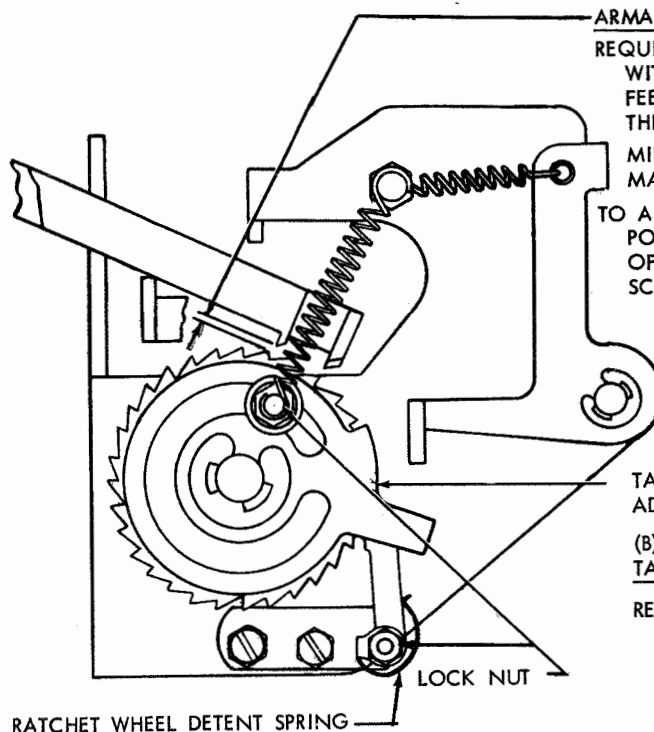

ARMATURE UPSTOP

REQUIREMENT

WITH THE ARMATURE BAIL RELEASED, BOTH THE FEED PAWL AND CHECK PAWL SHOULD CLEAR THE RATCHET WHEEL TEETH

MIN. 0.002 INCH

MAX. 0.007 INCH

TO ADJUST

POSITION THE ARMATURE UPSTOP BY MEANS OF ITS ADJUSTING SLOT WITH ITS MOUNTING SCREWS LOOSENED. SEE FIGURE 32.

TAPE FEED-OUT ADJUSTING PLATE

(B)

TAPE FEED-OUT LENGTH

REQUIREMENT

THE ADJUSTING PLATE ON THE RATCHET WHEELS SHOULD BE POSITIONED TO PERMIT THE DESIRED LENGTH OF TAPE TO BE FED OUT.

TO ADJUST

POSITION THE ADJUSTING PLATE WITH ITS LOCK NUT LOOSENED.

RATCHET WHEEL DETENT SPRING

REQUIREMENT

SCALE HOOKED NEAR UPPER END OF DETENT. PULL DETENT TO VERTICAL POSITION.

MIN. 1 OZ.

MAX. 2 OZS.

TO ADJUST

POSITION DETENT SPRING WITH LOCK NUT LOOSENED.

FIGURE 33. TAPE FEED-OUT MECHANISM

(A) TAPE FEED-OUT PAWL SPRINGS

## REQUIREMENT

TAPE FEED-OUT MAGNET DE-ENERGIZED AND  
FEED PAWL ADVANCED. SPRINGS UNHOOKED  
FROM THEIR BRACKET.

FEED PAWL

MIN. 1 1/2 OZS.


MAX. 2 1/2 OZS.

CHECK PAWL

2 OZS.

3 OZS.

TO PULL SPRINGS TO POSITION LENGTH.

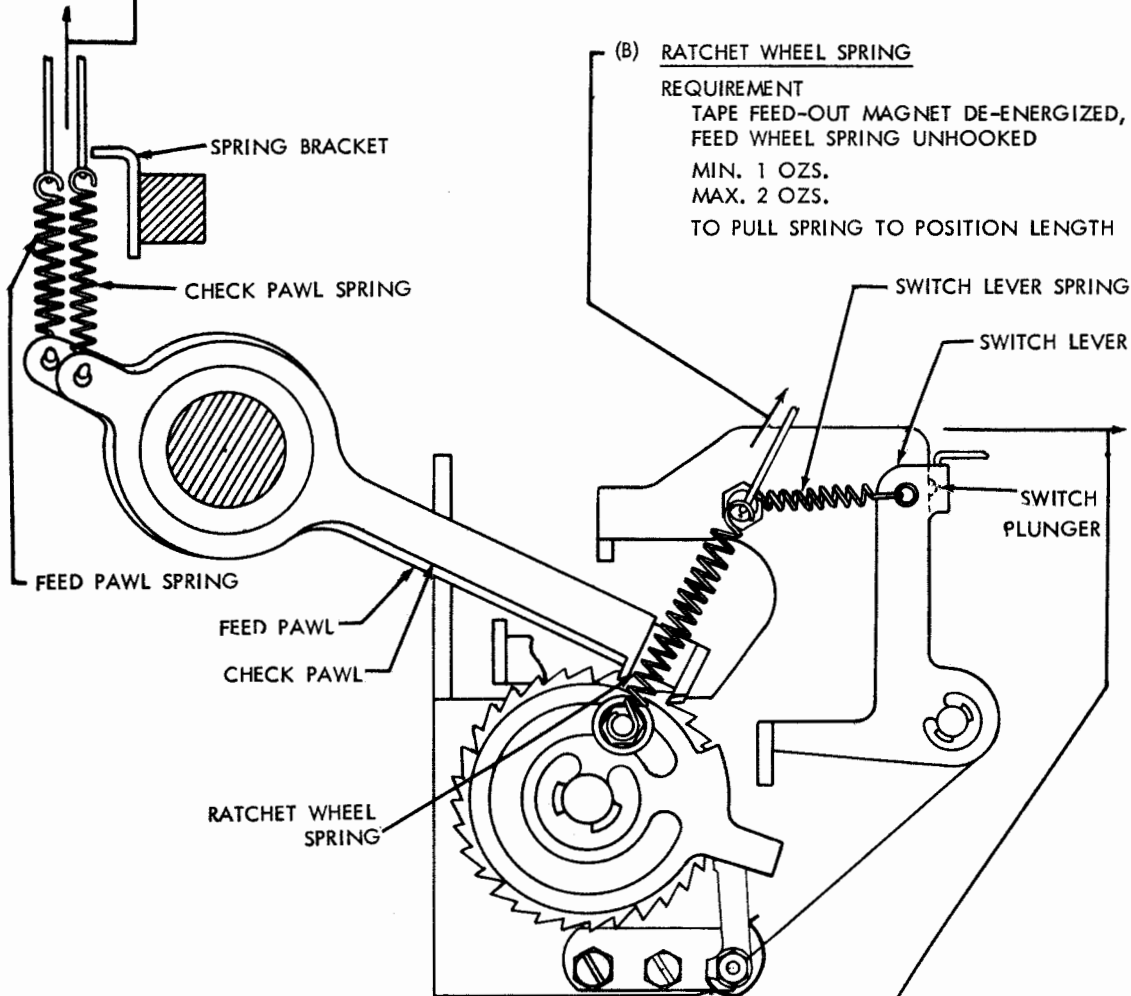(B) RATCHET WHEEL SPRING

## REQUIREMENT

TAPE FEED-OUT MAGNET DE-ENERGIZED,  
FEED WHEEL SPRING UNHOOKED

MIN. 1 OZS.

MAX. 2 OZS.

TO PULL SPRING TO POSITION LENGTH

(C) SWITCH LEVER SPRING

## REQUIREMENT

TAPE FEED-OUT MAGNET DE-ENERGIZED,  
SPRING SCALE HOOKED TO LEVER AT SPRING  
HOLE.

MIN. 4 OZS.

MAX. 6 OZS.

TO MOVE SWITCH LEVER AWAY FROM SWITCH.

## NOTE

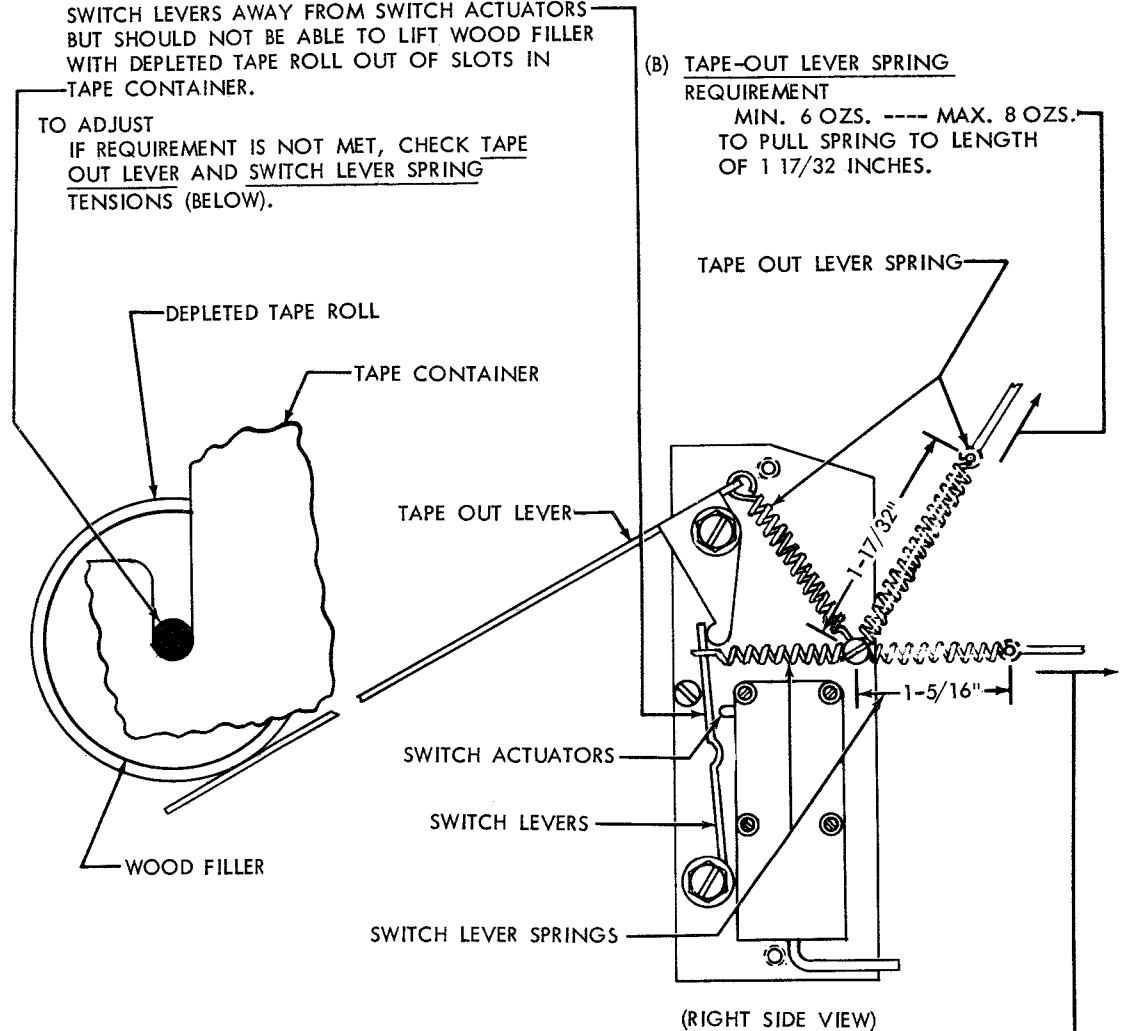
WHEN SWITCH LEVER IS HELD AWAY, IT  
SHOULD REQUIRE 2 TO 4 OZS. TO PUSH  
SWITCH PLUNGER IN.

FIGURE 34. TAPE FEED-OUT MECHANISM

(A) TAPE-OUT LEVERREQUIREMENT

TAPE-OUT LEVER SHOULD BE ABLE TO PUSH BOTH SWITCH LEVERS AWAY FROM SWITCH ACTUATORS BUT SHOULD NOT BE ABLE TO LIFT WOOD FILLER WITH DEPLETED TAPE ROLL OUT OF SLOTS IN TAPE CONTAINER.

TO ADJUST  
IF REQUIREMENT IS NOT MET, CHECK TAPE  
OUT LEVER AND SWITCH LEVER SPRING  
TENSIONS (BELOW).

(B) TAPE-OUT LEVER SPRINGREQUIREMENT

MIN. 6 OZS. ---- MAX. 8 OZS.  
TO PULL SPRING TO LENGTH  
OF 1 17/32 INCHES.


(C) SWITCH LEVER SPRINGS (2)REQUIREMENT

MIN. 1 3/4 OZS. ---- MAX. 2 1/4 OZS.  
TO PULL SPRING TO LENGTH OF 1 5/16 INCHES.

FIGURE 35. TAPE-OUT MECHANISM

## NOTE:

THE INNER ELEMENTS ARE THESE NEARER THE MOUNTING PLATE; THE OUTER ELEMENTS, THOSE FARTHER FROM THE MOUNTING PLATE.

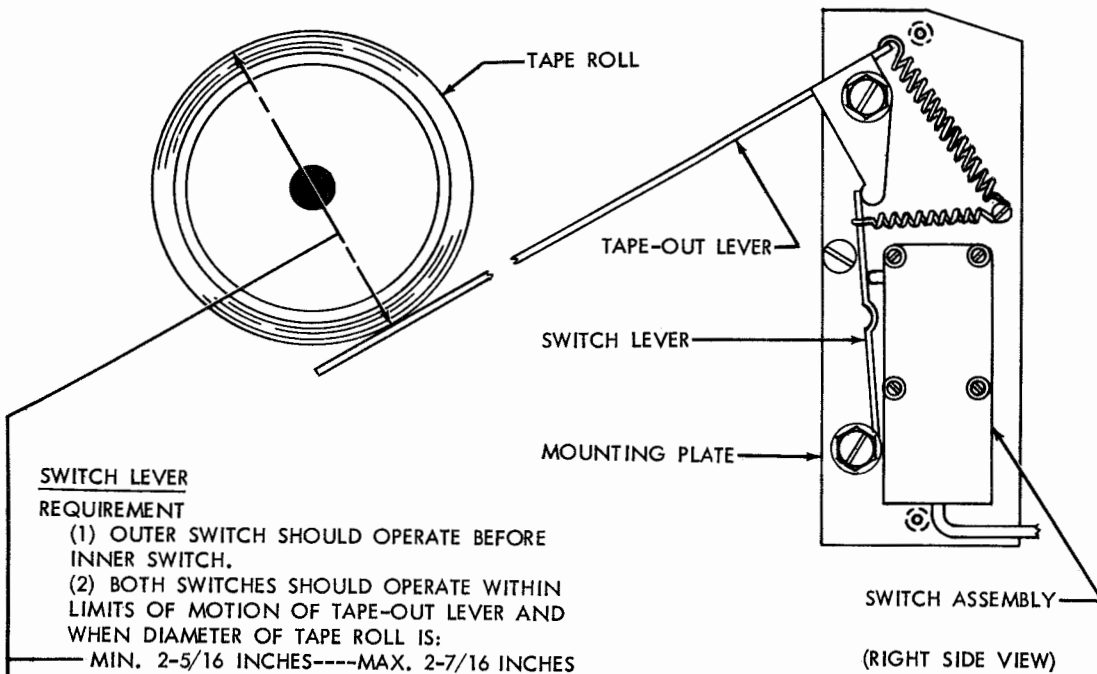SWITCH LEVER

## REQUIREMENT

- (1) OUTER SWITCH SHOULD OPERATE BEFORE INNER SWITCH.
- (2) BOTH SWITCHES SHOULD OPERATE WITHIN LIMITS OF MOTION OF TAPE-OUT LEVER AND WHEN DIAMETER OF TAPE ROLL IS:
  - MIN. 2-5/16 INCHES --- MAX. 2-7/16 INCHES
  - WHEN USING A 2-INCH DIAMETER CORE OR
  - MIN. 1-5/16 INCHES -- MAX. 1-7/16 INCHES
  - WHEN USING A 1-INCH DIAMETER CORE.

## TO ADJUST

BEND OUTER SWITCH LEVER TOWARD SWITCH ASSEMBLY.

## NOTE:

ADJUSTMENT CAN BE FACILITATED BY REMOVING SWITCH MECHANISM FROM TAPE CONTAINER.

SWITCH MECHANISM MOUNTING PLATE

## REQUIREMENT

OUTER SWITCH SHOULD JUST OPERATE WHEN DIAMETER OF TAPE ROLL IS REDUCED TO APPROXIMATELY 2-3/8 INCHES. WHEN USING A 2-INCH DIAMETER CORE OR APPROXIMATELY 1-3/8 INCHES WHEN USING A 1-INCH DIAMETER CORE.


## TO ADJUST

BEND OUTER SWITCH TOWARD SWITCH ASSEMBLY

## NOTE:

ADJUSTMENT CAN BE FACILITATED BY REMOVING SWITCH MECHANISM FROM TAPE CONTAINER.

MOUNTING PLATE

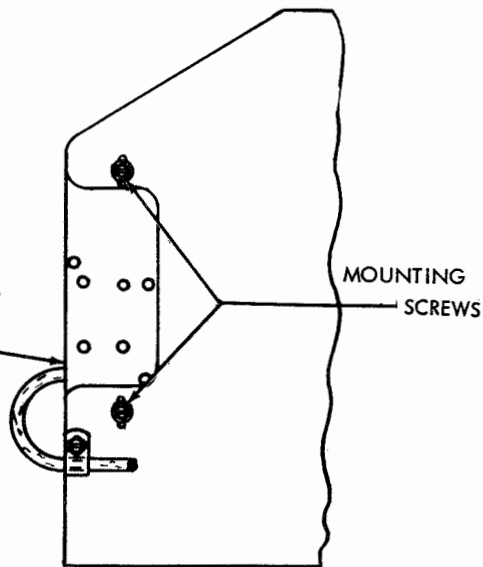

(LEFT SIDE VIEW)

FIGURE 36. TAPE-OUT MECHANISM

TAPE CONTAINER POSITION

## (1) REQUIREMENT

THERE SHOULD BE ADEQUATE CLEARANCE BETWEEN THE TAPE FEED-OUT MOUNTING BRACKET AND THE WIRE TAPE GUIDE MOUNTING SCREW.

## TO ADJUST

POSITION THE TAPE CONTAINER WITH ITS MOUNTING SCREWS LOOSENED

## (2) REQUIREMENT

THERE SHOULD BE ADEQUATE CLEARANCE BETWEEN THE TAPE CONTAINER AND THE FUNCTION MAGNET ARMATURE SPRING.

## TO ADJUST


POSITION THE REPERFORATOR CASTING WITH ITS MOUNTING SCREWS LOOSENED.

## (3) REQUIREMENT

THE TAPE SHOULD BE ALIGNED WITH THE TAPE CHUTE

## TO ADJUST

BEND THE WIRE TAPE GUIDE.

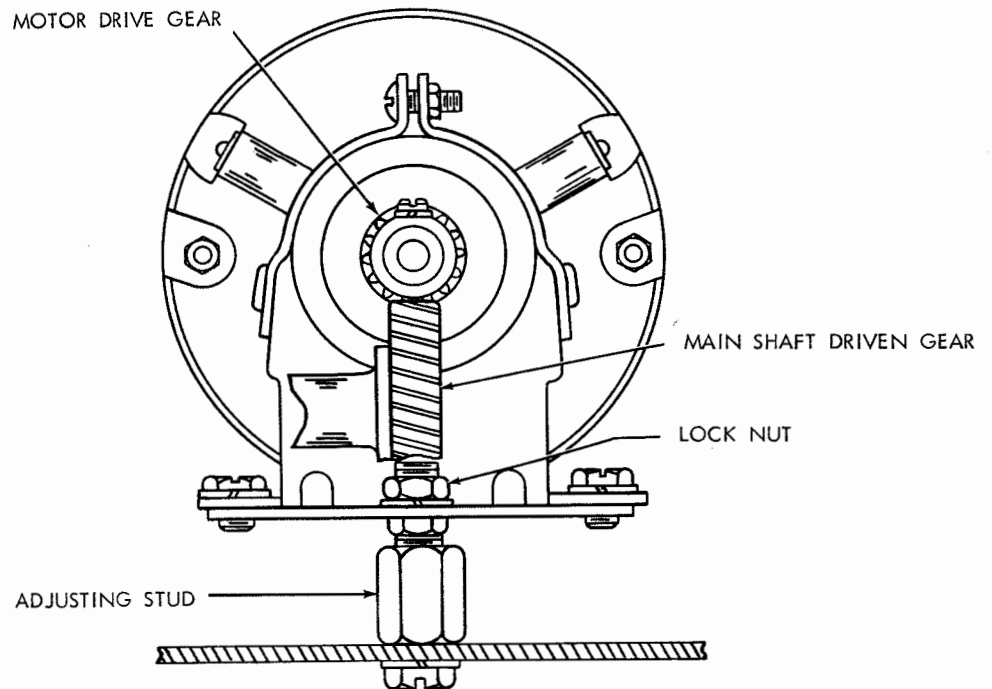MOTOR GEAR

## REQUIREMENT

THERE SHOULD BE A BARELY PERCEPTIBLE AMOUNT OF BACKLASH BETWEEN THE MOTOR DRIVE GEAR AND THE MAIN SHAFT DRIVEN GEAR AT THE POINT WHERE BACKLASH IS THE LEAST

## TO ADJUST

ROTATE THE ADJUSTING STUD WITH ITS LOCK NUT LOOSENED

CAUTION

IF THE MOTOR SHOULD BECOME BLOCKED FOR SEVERAL SECONDS, THE THERMAL CUT-OUT SWITCH WILL BREAK THE CIRCUIT. SHOULD THIS HAPPEN, ALLOW THE MOTOR TO COOL AT LEAST 5 MINUTES BEFORE MANUALLY DEPRESSING THE RED BUTTON. AVOID REPEATED DEPRESSION.

FIGURE 37. MOTOR

## SECTION 2

## DISASSEMBLY AND REASSEMBLY

## 1. GENERAL

a. For illustrations of parts referred to herein, see Teletype Multi-Magnet Reperforator Parts Bulletin 1166B.

## NOTE

When removing a part which is mounted on shims, the number of shims used at each mounting screw should be noted so that the same shim pile-ups can be replaced when the part is re-mounted. Retaining rings (tru-arc) are of spring steel and have a tendency to release suddenly. Loss of these can be minimized as follows: Hold retaining ring with the left hand to prevent rotation. Place the blade of a suitable screwdriver in one of the slots of the retaining ring. Rotate the screwdriver in a direction to increase the diameter of the retaining ring. It will come off easily without flying.

## b. Reperforator

(1) To remove the reperforator from the base, proceed as follows:

(a) Remove the two cable clamps that retain the reperforator cable on the base.

(b) Disconnect the reperforator cable from the three terminal blocks on the base.

(c) Remove the 151631 screw, 2191 lock washer and 7002 washers that anchor the reperforator to the base plate.

(d) Remove the three 156887 screws, 2669 lock washers and 3438 flat washers (Figure 3) from the base and remove the reperforator.

(e) To replace the reperforator, reverse the procedure followed in removing it. Route and connect the cables to the terminal blocks on the base as shown on Wiring Diagram 3258WD.

## (2) Verifying Reader

(a) Remove the two cable clamps from the reader cable.

(b) Disconnect the reader cable leads from the middle terminal block at the rear of the base.

(c) Remove the 151722 screw and 2191 lock

washer that secure the lower mounting extension of the rear plate of the reader to the rear plate of the perforator unit (Figure 4).

(d) Remove the two lower 152893 screws and 3640 lock washers from the front and rear plates supporting the punch block (Figure 4). Replace the screws and lock washers after detaching the reader.

(e) Disengage the 159039 toggle shaft arm from the drive link slot and remove the reader.

(f) To replace the reader, reverse the procedure followed in removing it. Connect the cable to the middle terminal block as shown on Wiring Diagram 3258WD.

## (3) Tape Feed-Out Assembly

(a) Remove the cable clamp that retains the cable on the base.

(b) Disconnect the cable leads from the lower terminal block at the rear of the base.

(c) Remove the two 151630 screws and 2191 lock washers which mount the feed-out assembly to the main frame (Figure 15).

(d) To replace the assembly, reverse the procedure followed in removing it.

## (4) Perforator Unit

(a) Unhook the 74701 rocker arm spring (Figure 11).

(b) Remove the 151630 screw, 2191 lock washer and 7002 washer that anchor the perforator unit to the base plate (Figure 3).

(c) Remove the two 151630 screws and 2191 lock washers; the 151632 screw, 2191 lock washer and 7002 flat washer that secure the unit to the main plate (Figure 4).

(d) Disengage the rocker arm from its slot in the drive link and remove the unit.

(e) To replace the unit, reverse the procedure followed in removing it. Make certain that the 156-059 slide bar reset bail (Figure 6) engages the 159430 trip lever (Figure 13).

## (5) Magnet Release Contact Assembly

(a) Unhook, at the upper end, the 110437 springs (Figure 14) attached to the tape feed-out pawl and the check pawl (Figure 12).

(b) Unsolder the wires of the cable at the contact terminals.

(c) Remove the cable clamp holding the cable to the frame.

(d) Remove the two 151631 screws and 2191 lock washers that secure the contact assembly (Figure 14) and remove the contact assembly.

(e) To replace the contact assembly, reverse the procedure followed in removing it.

## (6) Function Magnet Assembly

(a) Unsolder the wires from the function magnet (Figure 16).

(b) Remove the 82725 function trip lever spring and the 74962 armature spring.

(c) Remove the two 151632 screws and 2191 lock washers (Figure 16) which secure the magnet assembly and remove it.

(d) To replace the assembly, reverse the procedure followed in removing it.

## (7) Code Selector Mechanism

(a) Disconnect the code magnet cable from the upper terminal block on the base.

(b) Remove the cable clamp holding the cable to the base.

(c) Remove the two 3598 nuts, 151632 screws and 2191 lock washers that secure the code selector mechanism plate to the main plate (Figure 10) and remove the mechanism.

(d) To replace the mechanism, reverse the procedure followed in removing it. Make certain that the 112631 spring is hooked to the 156472 spring post and that the rods associated with the code magnet armatures are in position.

## (8) Rocker Bail Assembly

(a) Unhook the 74701 spring from the drive link (Figure 11).

(b) Remove the retaining ring from the 156366 rocker bail shaft at the rear of the rocker bail (Figure

11).

(c) Remove the nut, lock washer and flat washer from the outer end of the rocker bail shaft and pull the shaft from the main casting.

(d) To replace the assembly, reverse the procedure followed in removing it. Make certain to position the two 95814 spacers as shown on Figure 11.

## (9) Function Trip Shaft Assembly (159025)

(a) Unhook the 82725 spring from the 159023 function trip lever (Figure 13).

(b) Unclamp and remove the 159023 function trip lever.

(c) Unclamp and remove the 159033 lower reset lever.

(d) Remove the 74547 collar.

(e) Withdraw the 159025 shaft assembly.

(f) To replace the assembly, reverse the procedure followed in removing it.

## (10) Clutch Trip Shaft Assembly (159544)

(a) Remove the 90573 spring from the release (Figure 13).

(b) Remove the 112631 spring (Figure 10) from the 150355 clutch latch lever (Figure 13).

(c) Unclamp and remove the 158173 clutch lever reset cam.

(d) Remove the 150355 clutch latch lever.

(e) Unclamp and remove the 150356 clutch trip lever.

(f) Withdraw the clutch trip shaft assembly.

(g) To replace the clutch trip shaft assembly, reverse the procedure followed in removing it.

(11) 156474 Bar and 158934 Stop Bracket (Figure 13).

(a) Remove the code selector mechanism as described in paragraph 1.b.(7).

(b) Remove the 151630 screw and 2191 lock washer that secure the 158934 stop bracket (Figure 13).

(c) Remove the 151693 screw and 2191 lock

washer that secure the 156474 bar to the main casting and remove the bar.

(d) To replace the bar and stop bracket reverse the procedure followed in removing it.

#### (12) Main Shaft Assembly

(a) Remove the code selector mechanism as described in paragraph 1.b.(7).

(b) Remove the gear hub with the gear from the rear end of the shaft.

(c) Remove the 156403 bearing retainer (Figure 11) at the front end of the shaft.

(d) Remove the 119655 retainer ring, 151639 washer and 151638 spring washer (Figure 11) from the outer side of both front and rear bearings.

(e) Remove the 119656 retainer ring associated with the feed out metering mechanism (Figure 12).

(f) Remove the 151632 screw and 2191 lock washer that secures the 156153 eccentric collar to the main shaft (Figure 12).

(g) Remove the 150040 screw and 2191 lock

washer that secures the 150000 clutch drum to the main shaft.

(h) Slide the front and rear bearings off the shaft.

(i) Push the shaft toward the front so that the rear end of the assembly can be pivoted out of the rear bearing mounting hole and then withdraw it from the front bearing mounting hole.

(j) Replace the hardware removed in steps (f) and (g).

(k) To replace the main shaft, reverse the procedure followed in removing it.

#### (13) Transfer Mechanism

(a) Remove the three 151632 screws, 2191 lock washers and one 7002 flat washer that secure the 159-473 main plate (Figure 13) and remove the main plate assembly.

(b) Remove the two 151737 screws and 110743 lock washers that secure the 159011 spring bracket (Figure 13) to the main plate and remove the bracket.

(c) To replace the transfer mechanism, reverse the procedure followed in removing it.



## SECTION 3

### LUBRICATION

#### 1. GENERAL

a. The Reperator should be lubricated before being stored or placed in service. After a few weeks of service, relubricate to make certain that all points receive lubrication. Thereafter relubricate every 1500 hours of operation or every six months, whichever comes first.

b. Use Teletype KS-7470 oil at all locations where the use of oil is indicated. Use KS-7471 grease on all surfaces where grease is indicated, except the motor bearings. Apply two drops of KS-7470 oil to motor bearings every four months (depress oiler with metal object). If the motor is disassembled at any time, repack the bearings with KS-7471 grease. Do

not repack bearings otherwise.

c. Apply a thin film of grease to all gears. Apply oil to all cams, including the camming surfaces of each clutch disk. All sliding surfaces are to be lubricated to prevent wear. All pivot points, spring ends and felt washers are to be lubricated with oil.

d. Unless otherwise specified, one or two drops of oil at each of the places indicated will be sufficient. Oil both loops of all helical springs that exert a nominal tension of less than 2-1/2 pounds. Apply grease to both loops of all helical springs that exert a nominal tension of 2-1/2 pounds or more. Use oil for lubrication at all the places listed in the following paragraphs, except where grease is specified.

#### 2. LUBRICATION POINTS

<u>Part</u>	<u>Lubricate At</u>	<u>Lubricant</u>
a. Multi-Magnet Code Selector		
(1) Code Armature	Pivot	Oil Lightly
(2) Armature Bracket Spring	Contact With Armature	Oil Lightly
(3) Rod	Bearing Surfaces	Oil Lightly
(4) Punch Slide Latch	Pivot, Armature Rod, Punch Slide	Oil Oil
b. Function Mechanism		
(1) Function Magnet Armature	Pivot	Oil
	Function Trip Lever	Grease
(2) Reset Cam	Pins On Reset Disk	Grease
(3) Rest Lever	Pins On Reset Disk	Grease
(4) Main Trip Lever	Pivot	Oil
	Release	Grease
	Lower Trip Lever	Grease
	Reset Bail Trip Lever Fork	Grease
(5) Clutch Trip Lever	Clutch Shoe Lever	Grease
(6) Clutch Latch Lever	Clutch Disk	Grease
(7) Clutch Trip Shaft	Pivots	Oil
(8) Rocker Bail Rollers	Cam Surfaces	Grease
(9) Shaft	Pivots	Oil
(10) Drive Link	Rocker Bail	Oil
c. Main Shaft Assembly		
(1) Clutch Disk	Latch Lever	Grease
(2) Clutch Shoe Lever	Clutch Trip Lever	Grease
(3) Clutch Mechanism	Internal Components	Oil
(4) Cam Assembly	Disk Pins	Grease
	Rollers	Grease
(5) Main Shaft	Bearings	Oil & Grease
(6) Magnet Release Contact Bail Assembly	Pivot Roller	Oil Grease

<u>Part</u>	<u>Lubricate At</u>	<u>Lubricant</u>
(7) Feed Pawl And Check Pawl	Eccentric Collar	Oil
d. Punch Mechanism		
(1) Rocker Arm	Pivot And Spring Wick	Oil
(2) Drive Link	Pivots	Oil
(3) Toggle Bail	Bearing Felt Oilers	Oil
(4) Toggle Links (2)	Bearing Felt Oilers	Oil
(5) Punch Slide Reset Bail	Bearing Felt Oilers	Oil
(6) Punch Slide Post	Felt Oiler	Oil
(7) Punch Slides	Pivot And Sliding Surfaces	Oil
(8) Punch Slide Guide	Slots	Oil
(9) Punch Slide Springs	Hooks	Oil
(10) Detent	Pivot, Roller, Spring Hooks	Oil
(11) Feed Pawl	Pivot, Spring Hooks	Oil
(12) Detent Spring	Wick	Oil
(13) Feed Pawl	Wick	Oil
(14) Feed Wheel	Felt Oiler Ratchet Wheel Teeth	Oil
(15) Die Wheel	Felt Washer	Oil
(16) Tape Shoe Arm	Pivot	Oil
(17) Tape Shoe	Pivot	Oil
(18) Feed Wheel Shaft	Bearing (Knob-end)	Oil
(19) Punch Retractor Bail (2)	Pivot And Felt Oiler	Oil
(20) Punch Pin	Guides (2), Retractor Notches	Oil
(21) Retractor Springs	Spring Hooks And Compression Springs	Oil
e. Verifying Reader		
(1) Toggle	Pivots	Oil
(2) Tape Lid	Pivots	Oil
(3) Sensing Slides	Bearing Surfaces	Oil
(4) Slide Guides	Slots	Oil
(5) Contact Lever Guide	Slots	Oil
(6) Drive Link	Rocker Arm Pivots	Grease
(7) Contact Lever	Pivots, Sensing Slides	Grease
f. Tape Feed-Out Mechanism		
(1) Armature Bail	Pivots	Oil
(2) Armature Spring	Feed Pawl And Check Pawl	Grease
(3) Switch Lever	Hooks	Oil
(4) Ratchet Wheel	Pivot, Spring Hooks	Oil
(5) Feed Pawl And Check Pawl	Plunger	Grease
(6) Feed Pawl And Check Pawl Springs	Bearing, Teeth, Spring Hooks	Oil
(7) Felt Oilers	Eccentric Pivot	Oil
	Hooks	Oil
	All	Oil
g. Base		
(1) Tape-Out Lever	Pivot, Spring Hooks	Oil
(2) Tape-Out Switch Lever	Pivot, Spring Hooks	Oil
h. Motor Oilers	Each End	Oil
i. Gears	Teeth	Grease