	MC SPECIFICA	TION	No. s 1250
REV:			
COMPILED: NAB	CHECKED:	APPD:	SHEET OF
TITLE:		•	

TEST PROCEDURE

FOR

CHG-()4

TMC F RM SPEÇ 1

	TM	C S	PEC	ΊFI	CA.	TIC	N			NO. S	12	250		
REV:														
COMPILED:		CHECK	KED:	-	-		APPD:		 	SHEE.	г	1	OF	
TITLE: TEST P	OCEDUR	E FOR	CHG-()4				 						

1. Equipment Used

- A. Signal Generator H.P. Model 606A.
- B. Scope Tektronix Model 541A, or equivalent.
- C. Spectrum Analyzer Lavoie Laboratories Inc. Model LA-40A
- D. Audio Generator H.P. 200CD, or equivalent.
- E. Ballantine VTVM Model 314, or equivalent.
- F. 0-10V, DC Power Supply.
- G. Telonic D-550 Attenuator, or equivalent.
- H. Millivolt Meter, Millivac MV-28B, or equivalent.
- I. VIVM Hewlett-Packard Model 410B.
- J. CMR-4 or 1.75MHz source.

2. Preliminary Test (1MC Oscillator Inserted)

- A. With AC line cord removed, no cards inserted and power switch to "ON" position, measure resistance from Pin 1 J101 to ground. (150 ohms minimum).
- B. Measure resistance from J115 Pin F to ground. (5K ohms minimum).
- C. Measure resistance from J114 Pin 9 to ground. (14K ohms minimum)
- D. Turn power switch to "STANDBY" position and insert PC-329 and PC-330 into unit. (Before inserting PC-330, turn R3 and R12 fully cw).
- E. Check for any visible shorts.
- F. Plug in AC line cord. The standby lamp should light.
- G. Turn power switch to "ON" position. The red "POWER" lamp should light.
- H. Measure DC voltage at Pin 6 at J304 (approximately 45V).
- I. Allow fifteen (15) minutes warm-up.

NOTE: In Test Procedure all pin numbers refer to their respective connectors.

TMC FORM SPEC 1

PEC 1 2M 9-65-AINS

					TI	MC	•	SP	EC	:IF	7	A	TI	<u> 10</u>	1			N	0. s	1:	250), ,,		-	
REV:																									
COMPIL	ED:					c	HEC	KEC):					AP	PD:			SI	HEET	•	2	0	F		
TITLE:		TE	ST	PR	OCE:	DUR	E F	OR (CHG-	-() 4							 							

- I. PC-329 POWER SUPPLY BOARD "A"
 - A. Using Simpson 260A, measure DC voltage level at J304 Pin A (approximately +40V).
 - B. Measure DC voltage level at Pin E. (approximately +20V)
- II. PC-330 POWER SUPPLY BOARD "B"
 - A. Measure DC voltage level at J303 Pin E (approximately +20V)
 - B. Measure DC voltage level at Pin A (approximately +40V). Turn R3 and R12 fully CW.
 - C. Measure DC voltage at Pin F. Adjust R8 for exactly 12.0V (All cards tested and inserted*). Connect scope to Pin F. Maximum AC ripple should be 5mv. Adjust R3 until voltage level just starts to drop. Back off slightly to full voltage.
 - D. Measure DC voltage at Pin 4. Adjust R18 for exactly 24.0V. Connect scope to Pin 4. Maximum AC ripple should be 2mv. Adjust R12 until voltage level just starts to drop. Back off slightly to full voltage.
 - E. Measure DC voltage at J301 Pin E (30V ±1V).
 - F. Turn power switch to standby position and meter switch to Ql position. Adjust R106 meter adjust control (located at rear of meter switch) for equal readings on front panel meter and Simpson Model 260, in following set-up:

	SIMPSON		
J115	0-500ma	30	30
Pin 9	SCALE	low	10W

* Do not insert RF output card PC-306 until, XVI of test procedure has been followed.

			TMC SPECIFICATION	NO. S	7.	250	-	_
REV:		T	THE STEEN ICATION		1	230		ſ
COMPI	l l l LED:		CHECKED: APPD:	SHEE	 T	3	OF	L
TITLE	· TEST	PRO	CEDURE FOR CHG-()4	<u> </u>		<u> </u>		_
			SEPORE FOR GIVE ()					_
								_
	III.	PC-	383 (J101) SPECTRUM GENERATOR CARD		Ÿ.			
1	MC	Α.	Set lmc switch (S108) on rear panel to internal process of place scope between Pin A and ground and adjust Transmum output. (Place cards PC-304, PC-300 and into unit for lmc load).	ll for	•			
1	MC	В.	Place scope between Pin 3 and ground and adjust F 0.6vpp output.	R60 fc	r			
		C.	Measure level at collector of Q3 with scope (lmc of 1.5vpp).	spec	tru	m		
		D.	Measure level at Pin D of J101 (100Kc spectrum o	of 1.0)vpp).		
12	MC	E.	Place scope to TP3 and ground. Adjust T2 and Cl2 output. (PC-324 inserted and 10mc switch of from to position 3. All other switches on front panel positions).	nt par	nel	set		
12	MC	F.	Place scope to Pin 8 and ground lead to Pin J. maximum output. (approximately 0.4vpp).	Adjust	: T3	for		
13	MC	G.	Place scope between TP6 and ground. Adjust C50 a maximum signal.	and T	3 fc	r		
13	MC	Н.	Place scope between Pin P and ground lead to Pin T9 for maximum output. (approximately .75vpp).	R. /	ldji	ıst		
8	MC	I.	Place scope between TP9 and ground. Adjust C73 a maximum output.	and T	10 1	for		
8	MC	J.	Place scope between Pin S and ground lead to Pin Tll for maximum output. Output should be approxi	15. imate	Ad.	just 1.5vp	p.	
14	MC	К.	Place scope between TP5 and ground. Adjust C36 maximum output. (PC-301 inserted and 10mc switch panel set to Position "0").	and T	5 fo from	or nt		
14	MC	L.	Place scope between Pin 13 and ground lead to Pin T7 for maximum output. Output level should be a .75vpp.	n 12. pprox	Ad imat	djust tely	•	
40	MC	М.	Place Millivac MV-28B meter between Pin 11 and g Pin 10. Set analyzer to read 40mc. Adjust C86 maximum output. Output should be approximately (PC-323 inserted).	and C	89 :	for)	

				TI	NC	?	P	EC	IF	CA	\TI	10	1				N	10. s	12	250		
REV:			<u> </u>																			
COMPILE	ED:				C	HEC	KED	:		*		AP	PD:	·	 	<u> </u>	 s	HEET	1	4	OF	
TITLE:	TES	T P	ROCI	EDUE	Æ F	OR	CHG	i- ()4								 				 -	<u> </u>

- IV. PC-304, COMB FILTER A (J102) ALL FOLLOWING FRONT PANEL SWITCHES IN BLANK POSITION (100Hz, 1KHz, 10KHz and 100KHz). COMB FILTER B REMOVED FROM UNIT.
- .8 MC A. Place scope on TP11 and ground lead on ground. Adjust C54 and T11 for maximum output.
- .8 MC B. Place scope on Pin S and ground lead on Pin (15). Adjust Tl2 for maximum output. Adjust R42 for 0.7vpp output.
- 1.0 MC C. Place scope on TP9. Adjust C43 and T9 for maximum output.
- 1.0 MC D. Place scope on Pin J. Adjust T10 for maximum output. Adjust R35 for 0.7vpp.
- 1.2 MC E. Place scope on TP7. Adjust C32 and T7 for maximum output.
- 1.2 MC F. Place scope on Pin P. Adjust T8 for maximum output. Adjust R28 for 0.7 vpp.
- 1.4 MC G. Place scope on TP5. Adjust T5 and C22 for maximum output.
- 1.4 MC H. Place scope on Pin F. Adjust T6 for maximum output. Adjust R21 for 0.7vpp.
- 1.6 MC I. Place scope on TP4. Adjust T3 and C11 for maximum output.
- 1.6 MC J. Place scope on Pin L. Adjust T4 for maximum output.
 Adjust R14 for 0.7vpp.
- 1.8 MC K. Place scope on TP1. Adjust Cl0 and T2 for maximum output.
- 1.8 MC L. Place scope on Pin 4. Adjust Tl for maximum output. Adjust R3 for 0.7 vpp.
 - V. PC-304 COMB FILTER B (J103) SET 100Hz, 1KHz, 10KHz and 100KHz SWITCHES IN BLANK POSITION. COMB FILTER A REMOVED FROM UNIT.
 - .9 MC A. Follow same procedure as IV A and B. Substitute 0.9Mc.
- 1.1 MC B. Follow same procedure as VI C and D. Substitute 1.1Mc.
- 1.3 MC C. Follow same procedure as IV E and F. Substitute 1.3Mc.

	·			0.05														_
	г	- T -	IM	IC SP	<u>ECII</u>	<u>-ICA</u>	110	Or	1						NO. S	12	50	_
REV:							1	<u> </u>						<u>L</u>				_
COMPIL	ED:			CHECKE) :			AP	PD:					1	SHEE	T	5	_
TITLE:	TES	ST PR	OCEDU	JRE FOR	CHG-()4												_
																		_
						_						.	• 4 . 4	. 7	- CM-			
1.5	MC	D.	Fol.	Low same	proce	dure a	s i	V G	anc	1 H.	อน	wst	ıtute	∋ T	r • DIVIC			
1.7	MC			Low same														
1.9	MC	F.	Foll	low same	proce	dure a	s IV	V K	and	l L.	Su	ibst	itute	∍]	L.9Mc	Э.		
	VI.	PC-	336 ((J104) ;	SINGLE	MIXER	DI	VID	ER									
8	MC	Α.	Adju Jum out	ce scope ust T1 f per Pin 1 put. Lev ove PC-3	or max B of J el at	imum o 104 to cathod	utpi gra le o	ut. ound f C	P] d. Rl s	lace Adju shou	sco ust ld b	pe R7 e 0	probe for s .5vp	e c mir o n	on TI nimur	n		
9.0	MC	В.	inpotent T4, and to	ce scope ut from minate g T5 and adjust 10mv rms ove shor	TP1 to enerat T6 for R23 fo , the	groun or inp maxim or mini output	id. out i num mum sh	Ad wit out ou oul	just h 47 put tput d be	t gen 7 ohr Co t. V	nera ms. onne With	ator Ad ect n ge	to just scop nera	9.0 Tz e t to:	05mc 2, Ti to Ti r se	9 3 P6 t		
10-1	0.9Mc	C.	Pla	ce gener ce the g 4mc.	ator i round	nput t lead t	hro o g	ugh rou	a nd.	220 Ad	ohn just	n re t ge	sist	or to	to ' r to	IP6.		
			1.	Place t ground. output. minimum	Shor Remo	t TP7	to sh	gro ort	und	. A	djus	st I	'7 fo	r 1	maxi	num		
10-1	0.9Mc		2.	Place s to grou short f at TP8.	nd. A	Adjust	T9	for	ma	ximu	m oi	utpi	it.	Rer	move			
10.1	0.9Mc		3.	Place soutput.output	With should	n a ger 1 be 0;	nera	tor	in	put	of	10m	7 mms	1	n, t	m he		
1-1.	09Mc		D•	Disconr Place s Pin R. 9. Out variati	scope p Turn put sl	orobe of 100Hz nould b	on F swi oe m	'in .tch iini	15 fr mum	and om p of	the osi	gro tion	ound n 0 t	le o	ad t posi	o .t io i	n y	

OF

					T		~	_	פי	E	<u> </u>		17	• A	Ti	$\overline{\wedge}$	A				·							0.		
DE1/4	T			_	1 1	71	4		<u> </u>	<u> </u>	<u> မျ</u>		1	<u> </u>	TI	$\frac{Y}{Y}$	1		Ι	T	T	Т	_		T^{\perp}		. s]	.Z;	00	
REV:	ᆜ	<u> </u>				Ц				<u></u>				<u> </u>	<u> </u>	+		D:	<u> </u>	1_		1_	_		Ц			_1	<u> </u>	
COMPI			om r	200	OED	1			KE		7 (- \	1				PP	יט:								SHE	EET		-	
TITLE	. :	TEA	ST F	-RU	CED	TUP	"	FU		٦nc	3- (+								-									
									_																					
	1	VII.	P	7– 3	00	(J	J1(05)	I	00	UBL	ΕI	VII.)	ŒR	DI	ΛΤΙ	ŒI	K (CAR	DS										
8	MC		Α.	•	Pla	ce	9 8	sco	pe	Ţ	rot	e :	fro	om (catl	noc	de	si	ide	of	CF	1 1	to	gr	OL	ınd	•			
															to Pla															
					R9	fo	or	mi	nir	nu	m o	ut	pul	5.	Out	tpi	ut.	at	opc C	ath	ode	01	f	CRI	Ls	sho	uld			
					be	0.	•5	vpp	m	in	imu	m.																		
9-9.	09M	C	В	•	Pla	ıce	e t	the	e so	20	ре	pr	obe	e 01	n c	atl	ho	de	si	de	of	CR:	3	and	1 8	gro	und			
																											dju	st		
															n 5 Pla															
																											oul			
					be	U,	•り	vpr	m	ın	ımu	m .	ın	10	UHZ	SI	MT.	CCI	пр	OSI	LLC	n .	LT	Om	U	CII	rou	311		
			_																	• 4	•		T	٠ . .				1		
10-1	0.9	9MC	С	•	Rot	at	te rai	10 tor)OH: • t.)	Z hr	SW1 Oug	tc: h	hii a 2	to 220	the oh	b. m:	re:	nk si:	po sto	sıt r t	:10r :0]	1. P5	۲.	Tac Ac	ce Liu	sı ust	gna	L		
					ger	nei	ra	tor	. O	ut	put	f	or	10	.4m	c	an	d ·	ter	mir	ate	g	ĕn	era	ato	or	lin	е		
					wit	h	а	47	7 ol	hm	re	si	st	or.																
					1.	1	Pla	ace	e s	co	pe	pr	ob	e a	t T	P5	•	G	rou	nd	lea	ıd	to	gı	roi	und	l.			
						1	Sho	ort	t T	P6	to	g	ro	und " "	an PK	d a	ad a	ju ad	st	Т7 + п	foi R 1	יוט. ש	ax	im. ini	um i m	OU ım	tpu out	t. nu	t	
						1	1 JC1		ve i	911	OI-C	, 1	10	111 1	10	an I	u ·	au	j uo		.0 1	OI	11.			Cuii	ouo,	μu		
					2.																						ınde Yo	d		
						1	ne: fo:	ar r 1	tn nax	ıs im	. po ium	ou	to	ut.	hor R	em	OV	o e :	uo shc	rt	fro	om '	H TF	.8 s	us an	d a	.g idju	st		
															put															
					3.]	Pla	ace	e s	co	рe	pr	ob	e b	etw	ee	n	TP	9 a	nd	gr	oun	d.	. 1	A.d.	jus	st			
					J •	1	Tl	1 1	for	n	axi	mu	m	ind	ica	ti	on		Wi	th	a g	gen	er	ato	or	ir	nput			
															put o 1				d b	e (),21	/ pp	n	נמנו	ım	um	for			
										_																				
1-1.	.099	MC	D	•																							tio ro		te	
					the	e :	1K	Ηz	SW	it	ch	fr															out			
					sho	ou	ld	be	e 0	.6	vpr	٠.																		
8	MC	!	E	•	Ro	ta	te	ti	he	1,	Ηz	SW	rit	ch	to	a	bl	an	k ŗ	osi	ltic	on.		Pla	ac	e t	the			
					SCO	op iii	e st	pr T	obe 12	fo fo	etv or r	vee na x	n im	the um	ca out	ונס: נוס:	iod it.	æ	eno Pla	io: ice	c Ci	rio Ope	ar : r	ia (gr be	our	ia.			
					TP:	10	•	A	dju	ıst	R	54	fo	r n	ini	.mu	m	ou	tpı	it.	0	utp	ut	; a	t	cat	thod	е	٠	
					of	C	R6	S	hou	uld	l be	e C	•5	vpp	mi	ni	.mu	m.												

OF

			TM	IC	SF	PEC	:IF	IC	AT	101	1			NO.	s]	L25()		
REV:																			
COMPILED:				СН	CKE	D:				AF	PD:			SHEE	T	7		OF	
TITLE:	TEST	PRO	CEDU	JRE I	7OR	CHG-	-()	4											

- 9-9.099MC
- F. Place scope probe between cathode side of CR8 and ground. Rotate the 1KHz switch to position 5. Adjust T13, T14, T15, T16 and T17 for maximum output. With the 1KHz switch in position 5, place the scope probe between TP14 and ground. Adjust R69 for minimum indication. Output at cathode of CR8 should be 0.5vpp minimum with the 1KHz switch in positions 0 through 9.
- 10-10.999MC G. Rotate the lKHz switch to the blank position. Connect the signal generator through 220 ohm resistor to TP14 and connect the ground lead to ground. Make sure the signal generator lead is terminated with 47 ohms.
 - 1. Place scope probe between TP14 and ground. Adjust signal generator for 10.4mc. Short TP15 to ground. Adjust T18 for maximum output. Remove short from TP15 and adjust T19 for minimum output.
 - 2. Place scope probe between TP16 and ground. Short TP17 to ground. Adjust T20 for maximum output. Remove short from TP17. Adjust T21 for minimum output.
 - 3. Place scope probe between TP18 and ground. Adjust T22 for maximum output. With a generator input of 10mv rms in, the output should be 0.2vpp minimum for the range of 10mc to 11mc.
- 1.0-1.0999MC H. Disconnect generator and rotate lKHz switch to position 5. Place scope probe at Pin 15 and ground lead to Pin R. Rotate 10KHz switch from position 0 through position 9. Output should be 0.6vpp over a frequency variation from 1.0 to 1.0999mc.

VIII. PC-302 (J106) FINAL MIXER CARD

8 MC A. Place scope probe from cathode end of CR2 to ground. Rotate 10KHz switch to the blank position. Rotate the 100KHz switch to position 5. Adjust Tl for maximum output. Place short between Pin H and Pin E. Output at cathode of CR2 should be 0.5vpp minimum.

			TM	CS	SPI	EC	IFI	CA	TI	<u> 1</u> C				N	0. s	12	50		
REV:																			
COMPILED:				CHE	CKED	:				API	PD:			s	HEET		8	OF	
TITLE:	TEST	PRO	OCEDU	JRE F	OR C	HG-(()4				<u>-</u>								

- 9-9.0999MC B. Rotate the 1KHz and 10KHz switches to position 5. Place the scope probe between the cathode of CR3 and ground.

 Adjust T2, T3, T4, T5, T6 and T13 for maximum output.


 Place scope probe between junction CR4 and CR3 and ground.


 Adjust R18 for minimum output. Output at cathode of CR3 should be 0.5vpp minimum.
- 10-10.9999MC C. Rotate 10KHz switch to a blank position. Connect generator through a 220 ohm resistor to TP5. Connect ground lead to ground. Adjust signal generator for 10.4mc. Rotate 100KHz switch to position 4.
 - 1. Connect probe to TP5. Short TP7 to ground. Adjust T7 for maximum output. Remove short from TP7 and adjust T8 for minimum output.
 - 2. Place scope probe between TP8 and ground. Short TP9 to ground. Adjust T9 for maximum output. Remove short from TP9 and adjust T10 for minimum output.
 - 3. Remove PC-323, the translator card, from unit.
 Place a 47 ohm resistor between Pin 12 and 13 of
 J106. Place scope probe on TP10. Place short
 across secondary of T12. Rotate the 100KHz switch
 to position 5. Adjust generator for a frequency of
 10.75mc. Adjust T11 for maximum output. Remove
 short from T12 and adjust T12 for minimum output.
 - 4. Rotate 100KHz switch to position 4. Adjust generator frequency for 10.1mc. Short secondary of T12. Adjust C36 for maximum output. Remove short from T12 and adjust C48 for minimum output.
- 10-10.9999MC
- 5. Place scope across 47 ohm resistor. Set generator for 10.5mc 100mv rms out. With 100KHz, switch in position 4 output should be at least 0.2vpp with generator frequency of 10mc to 10.5mc. With the 100KHz switch in position 5, output should be at least 0.2vpp with a frequency input of 10.5mc to 11mc.
- 10-10.9999MC D. Remove generator input and set 10KHz switch to position 5. Remove short from Pin H and E. Rotate 100KHz switch from position 0 to position 9. Output should be a minimum of 0.2vpp. Remove 47 ohm resistor from Pin 12 and 13. Replace PC-323 the translator card to J112.

REV:		
	<u> </u>	
COMPILED: CHECKED:	APPD:	SHEET 9 OF
TITLE: TEST PROCEDURE FOR CHG-()4		

IX. PC-339 (J109) CARRIER GENERATOR CARD

Interconnect an aligned CMR-4 and the CHG-()4 under test as shown below:



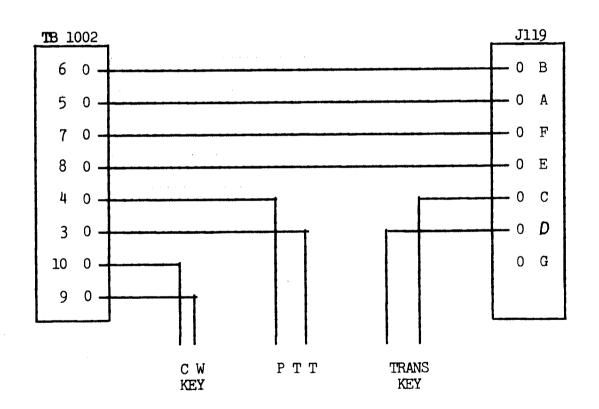

- A. Turn mode switch S1005 on CMR-()4 to norm. carrier suppression switch to "0". Turn RF gain (R103) on CHG-()4 fully CCW.
- B. Monitor TP-1 on PC-339 with scope probe voltage should be 10vp/p.

			TN	JC	SP	EC	IF	TC	AT	101	I			N	0. s	1	2 50)	
REV:												Ī							
COMPILED:				СН	ECKE	D:				AP	PD:			s	HEET	г]	10	0	
TITLE:	TEST	r PR	OCE	DURE	FOR	CHG	-()) 4					 						

- C. Adjust R20 fully CW. Monitor TP2 with scope probe and adjust Tl for maximum level. (approximately .66Vp/p.)
- D. Monitor TP3 with scope probe. Adjust T2 for maximum level. Adjust R20 for 70 MVp/p.
- X. NOT USED
- XI. PC -338 (J108) 3MHz BALANCED MIXER CARD
 - A. Remove PC-338 from unit. Adjust R20 fully CCW. With card still removed, measure 1.25MHz at Pin "C" of J108, 70MVp/p. Measure 1.75MHz at Pin 2 of J108, 20MVp/p. Insert PC-338.
 - B. Monitor Pin 7 of J108 with scope probe. Adjust T1 and T2 for maximum level. (approximately .4vp/p.)

XII. PC-301 STEP GENERATOR "A".

- A. Remove both PC-304 cards (comb filters) from unit and set frequency selector switches on front panel to 03.0000mc.
- B. Place scope on collector of Ql and adjust Rl for maximum level.
- C. Place scope at junction of CR1 and T1. Adjust T1 for maximum level.
- D. Place scope on collector of Q1 and adjust R1 for a level of 2vpp.
- E. Place scope at junction of CR1 and CR2. Adjust R7 for minimum level.
- F. Connect Hewlett-Packard Model 606A signal generator to Pin N of J110. Set frequency to 1.05mc and output level to .4vpp. Use following set-up:

FREQUENCY COUNTER

H.P. 606A

> DD550 TOGGLE SWITCH ATTENUATOR

J110 PIN N

G. Place scope at Pin R of J110 and adjust R28 for a level of .4vpp.

TMC F RM SPEC 1

					TN	ИC	S	P	E C	IF	TC	A	TI		1				NC). s	1	2 5	0		
REV:																									
COMPIL	ED:					c	HEC	KED	:					AP	PD:				sн	EE.	Т	11		OF	
TITLE:	7	ES]	. Pl	ROCI	EDUF	E F	ΌR	CHG	- ()4						•									

- H. Connect short jumper across secondary of T3 and place Millivac Model MV-28B millivolt at junction of R8 and C8.
- I. Adjust T2 for maximum level indication on meter.
- J. Remove jumper and adjust T3 for dip or minimum indication on meter.
- K. Repeat Steps H thru J using:
 - 1. T5 and Q2 collector for Step H.
 - 2. T4 for Step I.
 - 3. T5 for Step J.
- L. Repeat Steps H thru J using:
 - 1. T7 and Q3 collector for Step H.
 - 2. To for Step I.
 - 3. T7 for Step J.
- M. Place scope at Pin 5 of J110 and adjust T8 for maximum level indication.
- N. Vary frequency of 606A generator from .8mc to 1.2mc. Output level on scope should be .5vpp minimum at frequency of 13.2mc to 12.8mc correspondingly.
- O. Adjust 606A generator to 1.55mc and change frequency selector on front panel to 07.0000mc.
- P. Repeat Steps H thru J using:
 - 1. Tll and junction of R9 and C9 for Step H.
 - 2. TlO for Step I.
 - 3. The for Step J.
- Q. Repeat Steps H thru J using:
 - 1. Tl3 and Q6 collector for Step H.
 - 2. Tl2 for Step I.
 - 3. Tl3 for Step J.
- R. Repeat Steps H thru J using:
 - 1. T15 and Q7 collector for Step H.
 - 2. Tl4 for Step I.
 - 3. Tl5 for Step J.

					T	MC	: S	P	EC	:IF	-10	A.	TI	10	I			 NO. S	12	250			
REV:																							
COMPILI	ED	:				С	HEC	KEC):			•	•	AP	PD:			SHEE	т :	12	OF		
TITLE:		TES	T F	PROC	EDU	RE I	7OR	CHO]- () 4												.,.	

- S. Repeat Steps M and N using:
 - 1. Tl6 for Step M.
 - 2. 1.3mc to 1.7mc and 12.7mc to 11.3mc for Step N.
- T. Remove 606A generator from Pin N of J110 and adjust frequency selector switches on front panel to 13.0000mc.
- U. Repeat Steps B thru F using:
 - 1. R61 and Q9 collector Step B.
 - 2. CR3 and T17 for Step C.
 - 3. R61 and Q9 collector for Step D.
 - 4. CR3 and CR4 junction and R67 for Step E.
- V. Repeat Steps H thru J using:
 - T19 and junction of R68 and C80 for Step H.
 - 2. T18 for Step I.
 - 3. Tl9 for Step J.
- W. Repeat Steps H thru J using:
 - 1. T21 and Q10 collector for Step H.
 - 2. T20 for Step I.
 - 3. T21 for Step J.
- X. Repeat Steps H thru J using:
 - T23 and Q11 collector for Step H.
 - 2. T22 for Step I.
 - 3. T23 for Step J.
- Y. Repeat Steps M and N using:
 - 1. Pin 4 of J110 and T24 for Step M.
 - 2. .8mc to 1.2mc and 12.2mc to 11.8mc for Step N.
- Z. Repeat Step 0 using 17.0000mc.
- AA. Repeat Steps H thru J using:
 - 1. T26 and junction of R69 and C81 for Step H.
 - 2. T25 for Step I.
 - 3. T26 for Step J.

					TI	M(3	SP	EC	:IF	7	X.	TIC	<u> 10</u>	1			1	10. 9	•]	25	0		
REV:																								
COMPIL	REV: CHECKED:														PD:			 s	HEE	Т	13	3	OF	
TITLE:		TE	ST	PRO	CED	URE	FO	R C	HG-	()	4													

- BB. Repeat Steps H thru J using:
 - 1. T28 and Q13 collector for Step H.
 - 2. T27 for Step I.
 - 3. T28 for Step J.
- CC. Repeat Steps H thru J using:
 - 1. T30 and Q14 collector for Step H.
 - 2. T29 for Step I.
 - 3. T30 for Step J.
- DD. Repeat Steps M and N using:
 - 1. Pin 4 of J110 and T31 for Step M.
 - 2. 1.3mc to 1.7mc and 11.7mc and 11.3mc for Step N.
- EE. Replace PC-304 cards into unit.
- XIII. PC-322 STEP GENERATOR "B" AND PC-324 STEP GENERATOR "C"

PC-324 Part I

- A. Remove both PC-304 cards (comb filters) from unit and set frequency selector switches on front panel to 28.0000mc.
- B. Place scope at collector of Q14 and adjust R78 for maximum level.
- C. Place scope at junction of Tll and CRl and adjust Tll for maximum level.
- D. Place scope at junction of Cl04 and R88 and adjust Cl01 and R84 alternately until minimum level is obtained.
- E. Place scope at collector of Q14 and adjust R78 for 2vpp level.
- F. Connect Hewlett-Packard Model 606A signal generator to Pin N of J110. Set frequency to 1.6mc and output level to .4vpp. Use following set-up:

FREQUENCY COUNTER

H.P. 606A

DD550 TOGGLE SWITCH ATTENUATOR

J110 PIN N

					TN	<u> IC</u>	S	P	EC	IF	TC	A:	TIC	<u>1C</u>	l		 	NO.	s 12	50		P	
REV:																							
COMPIL	ED:					C	HEC	KED	1:					API	PD:	 		 SHEE	ΞT	-	14 c	F	
TITLE:		TES	T P	ROC	EDU	RE	FOR	CH	[G-()4			-										 ,

- G. Connect short jumper across secondary of T13 and place Millivac Model MV-28B millivolt meter at junction of R88 and C104.
- H. Adjust T12 for maximum level indication on meter.
- I. Remove jumper and adjust Tl3 for dip or minimum indication on meter.
- J. Repeat Steps G thru I using:
 - 1. T15 and Q15 collector for Step G.
 - 2. Tl4 for Step H.
 - 3. Tl5 for Step I.
- K. Repeat Steps G thru I using:
 - 1. T17 and Q16 collector for Step G.
 - 2. Tl6 for Step H.
 - 3. Tl7 for Step I.
- L. Place scope at Pin N of J113 and adjust T18 for maximum level indication.
- M. Vary frequency of 606A generator from 1.4mc to 1.8mc. Output level on scope should be .5vpp minimum at frequency of 10.6mc to 10.2mc correspondingly.
- N. Adjust 606A generator to 1.075mc with output level set at .4vpp and change frequency selector switches on front panel to 23.0000mc.
- O. Repeat Steps G thru I using:
 - 1. T20 and junction of R87 and Cl03 for Step G.
 - 2. Tl9 for Step H.
 - 3. T20 for Step I.
- P. Repeat Steps G thru I using:
 - 1. T22 and Q18 collector for Step G.
 - 2. T21 for Step H.
 - 3. T22 for Step I.

					TI	ИC	S	P	EC	IF	TC	A	TIC	N				NO.	s	125	50		
REV:																							
COMPIL	ED:					С	HEC	KED	:					APP	D:	 	 	SHEE	T	1	5	OF	
TITLE:		TES	T P	ROC	EDU	RE	FOR	CH	G-() 4								 					

- R. Repeat Steps L and M using:
 - 1. T25 for Step L.
 - 2. .8mc to 1.3mc and 11.2mc to 10.7mc for Step M.
- S. Replace PC-304 cards into unit.
- XIV. PC-322 STEP GENERATOR "B" AND PC-324 STEP GENERATOR "C"

PC-322

- A. Set frequency selector switches on front panel to 25.0000mc and place millivac Model MV-28B millivolt meter on Pin 1 of J111.
- B. Adjust C3, C9 and C19 for maximum level on meter.
- C. Vary frequency selector switches on front panel from 21.0000mc to 31.0000mc in lmc steps. Minimum level indication on meter should be .04v rms. If necessary, stagger tune capacitors in Step B.
- D. Repeat Steps A thru C using:
 - 1. 15.0000mc and Pin 2 of Jlll for Step A.
 - 2. C25. C30 and C41 for Step B.
 - 3. 11.0000mc to 20.0000mc for Step C.
- E. Repeat Steps A thru C using:
 - 1. 05.0000mc and Pin 3 of Jlll for Step A.
 - 2. C45, C49 and C62 for Step B.
 - 3. 01.0000mc to 10.0000mc for Step C.

PC-324 Part II

- F. Repeat Steps A and B using:
 - 1. 25.0000mc and Pin 1 of J113 for Step A.
 - 2. C10, C16, C22 and C28 for Step B.
- G. There should be a minimum of .4v rms on meter.
- H. Repeat Steps A and B using:
 - 1. 15.0000mc and Pin 1 of J113 for Step A.
 - 2. C39, C45, C51 and C56 for Step B.

					TI	MC	S	P	EC	:IF	TC	A	TIC	10				N). s	125	0		
REV:																							
COMPII	LED	:				С	HEC	KED	:					AP	PD:			SH	EET	16		OF	
TITLE	:	TE	ST	PRO	CEDI	JRE	FOR	CTH	G-()4								 					

- I. Repeat Step G.
- J. Repeat Steps A and B using:
 - 1. 0.50000mc and Pin 1 of J113 for Step A.
 - 2. C68, C75, C81 and C87 for Step B.
- K. Repeat Step G.

XV. PC-323 (J112) TRANSLATOR CARD

- A. Remove RF output card PC-306 from unit. Set all frequency dials on front panel to blank positions and remove PC-324 step generator "C" card from unit. (Mode switch on CMR()4 to VOX).
- B. Connect Signal Generator 606A between junction of R73 and R75 and ground. Set-up as indicated below:

SIGNAL HP606A GENERATOR

TO JUNCTION OF R73 &R75

TELONIC D550 ATTENUATOR FREQUENCY COUNTER

- C. With full attenuation on the toggle switch attenuator, adjust generator for 1 volt output at frequency of 13.3000mc. Set 100KHz switch on front panel to position 3.
- D. Connect short jumper across secondary of T15 and Millivac MV-28B across primary of T13 observing proper ground. Set meter to .01 volt range.
- E. Remove attenuation from telonic attenuator until midscale reading is observed on meter. (Maintain reading on .01 scale of meter using attenuator for the following steps).
- F. Adjust T13 for peak indication on meter.
- G. Remove jumper from T15 and adjust T15 for dip on meter.
- H. Connect short jumper across secondary of T17 and re-connect millivac meter across secondary of T16 observing proper ground.

					TI	ИC	S	P	EC	IF	TC	Ä	TIC	NC		 		NO.	s]	250)		
REV:																							
COMPIL	ED:					c	HEC	KED):					AP	PD:			SHE	ET	17	(OF	
TITLE:		TE	ST I	PRO	CEDU	JRE	FOF	CH	[G-() 4													

- I. Change attenuation of telonic attenuator for mid-scale reading on meter and adjust T16 for peak reading on meter.
- J. Remove jumper from T17 and adjust T17 for dip on meter.
- K. Reconnect meter to TP7 and adjust for maximum indication on meter.
- L. Repeat Steps C thru K using:
 - 1. 13.8000mc and position 8 for Step C.
 - 2. T20 and T19 respectively for Step D.
 - 3. Tl9 for Step F.
 - 4. T20 for Step G.
 - 5. T22 and T21 respectively for Step H.
 - 6. T21 for Step I.
 - 7. T22 for Step J.
 - 8. TP9 for Step K.
- M. Remove 606A generator and turn mode switch on CMR-()4 to normal. Set frequency dials on front panel to 05.5000mc.
- N. Using scope check for 10.5mc signal at level of .2vpp minimum on J112 Pin H and for 3mc signal of approximately 90mvpp on J112 Pin D.
- O. Adjust R71 to mid-position tune T12 for maximum indication on meter. (meter still on TP7 or TP9.)
- P. Remove PC-338 frequency shift card from unit and connect Millivac meter to junction of R73 and R75 observing proper ground.
- Q. Adjust R71, for minimum indication on meter, and return all frequency dials on front panel to blank position.
- R. Using millivac meter, check for 40mc signal at approximately 50mv rms level on J112 Pin B.
- S. Connect meter to T3 secondary, observing proper ground and tune T1. T2 and T3 for maximum indication.
- T. Connect Lavoie LA-40 Spectrum Analyzer to TP7 and adjust R36 to one extreme position. Tune C20, C26 and C31 for maximum 120mc indication on analyzer.

					TI	VIC	: 5	P	EC	:IF	TC	A:	TIC	AC	1					NO.	s 1	250				
REV:																										
COMPIL	.ED:					C	HEC	KEC):			•		API	PD:	•	•		·	SHE	ET	18	(OF	A	
TITLE:	-	TES	ST I	PROC	EDU	JRE	FOF	? CI⊦	IG-() 4																

- U. Connect Lavoie LA-40 analyzer to TP3 and adjust R36 for minimum 120mc indication. Plug-PC-338 frequency shift card into unit and adjust frequency dials on front panel to 05.5000mc.
- V. Adjust C37 and C42 for maximum 133.5mc indication on analyzer.
- W. Connect analyzer to TP4 and adjust C48, C42 and C37 for maximum 133.5mc indication. Connect analyzer to TP5 and adjust C54, C48, C42 and C37 for maximum 133.5mc indication. Connect analyzer to TP6 and adjust C60, C54, C48, C42 and C37 for maximum 133.5mc indication.
- X. Replace PC-324 step generator "C" card and connect scope to J112 Pin R. There should be an output level of .2v minimum at a frequency corresponding to the front panel frequency controls.
- Y. Connect a 0-10 volt power supply between J112 Pin 10 (+) and ground (-). Increase the voltage from 0 to 10 volts. The output level indication on scope should drop to zero as the voltage increases from 6.5 to 8.5 volts.

XVI. PC-306 RF OUTPUT CARD*

- A. Before inserting card into unit, adjust Rl, R2 and R4 for maximum resistance. Turn RF output control on front panel fully ccw. Insert RF card into units. Re-check power supply voltages and readjust as per section II of test procedure.
- B. Turn meter switch to Q1 position. On RF output card, adjust R4 until meter on front panel reads in the center of the green region marked Q1.
- C. Turn meter switch on front panel to Q2 and adjust R2 until meter on front panel reads in the center of the green region marked Q2.
- D. Turn meter switch on front panel to Q3 and adjust R1 until meter on front panel reads in the center of the green region marked Q3.
- E. Connect 50 ohm load to RF output connector on rear panel of unit and a Hewlett-Packard Model 410B VTVM across the load. Turn ALDC control on rear panel fully ccw and set frequency of unit to 29.9999mc. Place short jumper from Pin S of J115 to Pin B of J114.

*NOTE: Do not attempt to adjust RF card without first having followed Section II F. of test procedure.

			T	MC	: 5	PE	CI	FI(CA	TIC	ON				NO. 5	12	250		
REV:																			
COMPILE	D:			7	HEC	KED:		•			API	PD:	•		SHEE	Т	19	OF	
TITLE:	TES	T PF	ROCEDI	JRE	FOF	R CHO	- ()) 4											

- F. Connect scope to Pin B of Jll5. Turn RF control on front paneluntil scope reads 220mvpp. Hewlett-Packard meter should read 3.55v rms. Remove jumper and insert PC-325 into Jll4. Output should not change more than 0.2v.
- G. Using Simpson Model 260 meter, measure the DC voltage on Pin 12 of J115. It should vary from 0-12VDC with the ALDC adjust control on rear panel of unit. Return ALDC control fully ccw.

XVII. PC-325 OUTPUT FILTER CARD (OPTIONAL EQUIPMENT)

This card cannot be aligned in the unit. Use appropriate test jig.

- A. Plug filter card into test jig for PC-325.
- B. Connect 30VDC to test jig terminals and rotate selector switch to 20-33 position.
- C. Connect 608E HF signal generator to input connector and the 50 ohm termination for the millivac MV28B, to the output connector of the test jig.
- D. Set signal generator output to 1.0 volt level and adjust millivac to 1 volt range. Connect millivac to its 50 ohm termination.
- E. Set signal generator to 31mc and tune C60 for lowest dip indication on Millivac meter.
- F. Set signal generator to 54mc and tune C61 for lowest dip indication on Millivac meter.
- G. Repeat Steps E and F twice. Replace 608E HF signal generator with 606A signal generator.
- H. Rotate selector switch to 12-20 position.
- I. Leaving 50 ohm termination on test jig output connector, connect millivac meter (using probe tip) to junction of C49 and C50.
- J. Set signal generator 44.5mc and tune C54 for lowest dip on millivac meter.
- K. Connect millivac meter to its 50 ohm termination and set signal signal generator to 24.5mc. Tune C51 for lowest dip on millivac meter.
- L. Set signal generator to 28mc and tune C48 for lowest dip on millivac meter.

					TN	1C	<u>S</u>	PE	EC	IF	TC	A	TIC	<u> 1C</u>	Ī			NO.	s <u>1</u>	2 50			
REV:																							
COMPIL	ED:					CI	HECK	(ED:				,		API	PD:			SHE	ΕT	20	()F	
TITLE:		TES	T P	ROC	EDU	RE I	FOR	CHC	}- ()4													

- M. Repeat Steps I thru L twice.
- N. Repeat Steps H thru M using:
 - 1. (7-12) position for Step H.
 - 2. C38 and C39 for Step I.
 - 3. 25.5mc and C43 for Step J.
 - 4. 14.5mc and C40 for Step K.
 - 5. 16mc and C37 for Step L.
- O. Repeat Steps H thru M using:
 - 1. (4-7) position for Step H.
 - 2. C27 and C28 for Step I.
 - 3. 14mc and C32 for Step J.
 - 4. 8mc and C29 for Step K.
 - 5. 9mc and C26 for Step L.
- P. Rotate selector switch to 1-2.5 position. Set generator to 1.5mc. Note db level on Millivac.
- Q. Set generator to 3.0mc. Level should drop a minimum of 25db.
- R. Set generator to 5.0mc level should have dropped a minimum of 30db.
- S. Repeat Steps P thru R using:
 - 1. (2.5-4) position and 2.5mc for Step P.
 - 2. 5.0mc and 30db for Step Q.
 - 3. 8.0mc and 18db for Step R.
- T. Repeat Steps P thru R using:
 - 1. (4-7) position and 4mc for Step P.
 - 2. 8mc and 25db for Step Q.
 - 3. 14mc and 30db for Step R.
- U. Repeat Steps P thru R using:
 - 1. (7-12) position and 7mc for Step P.
 - 2. 14mc and 25db for Step Q.
 - 3. 24mc and 30db for Step R.
- V. Repeat Steps P thru R using:
 - 1. (12-20) position and 12mc for Step, P.
 - 2. 24mc and 25db for Step Q.
 - 3. 40mc and 25db for Step R.

					TN	1C	S	SP	EC	:IF	7	Ä	TIC					NO. S	1	2 50		
REV:																						
COMPIL	ED:					C	HEC	KE	D :					AP	PD:			SHEE	Т	21	OF	
TITLE:		TES	T P	ROC	EDUI	RE	FOR	CI	IG-()4												

- W. Repeat Steps P thru R using:
 - (20-33) position and 20mc for Step P.
 40mc and 1db for Step Q.
 65mc and 8db for Step R.

				<u>TN</u>	<u> 1C</u>	S	SP	<u>EC</u>	<u>: F</u>	<u> </u>	<u>`A'</u>	<u>TI</u>	<u> 10</u>							N	o. s	12	250		
REV:																									
COMPILED: CHECKED:														PD:						SI	IEE.	т 2	22)F	
TITLE:	TES	ΤP	ROC	EDU	RE	CHG	- ()4			-	С	HG-	()	4]	FINA	/L	TES	T S	PEC.				 	

Connect CHG-()4 and CMR-()4 as shown in test procedure Part IX, Page 9.

PRELIMINARY SETTINGS:

- 1. Check power supply voltages and readjust if necessary as per Part II of test procedure.
- 2. All cards aligned and inserted.
- 3. RF gain (R103) fully ccw.
- 4. Output frequency selector controls set to 29.9999MHz.
- 5. Mode switch on CMR-()4 to PTT.
- 6. Carrier suppression on CMR-()4 to "0".
- 7. All four (4) priority controls on CMR-()4 fully ccw.
- 8. Two tone generator connected to all four (4) channels on rear panel of CMR-()4.
- 9. Meter switch on front panel of CHG-()4 to Q1.
- 10. ALDC control on rear panel of CHG-()4 fully ccw.
- PART I With Lavoie Analyzer, neutralize spectrum generator card and comb filter cards as follows:
 - A. Place PC-383 (J101) on extender card and connect Lavoie Model LA-40 spectrum analyzer to J101 Pin 8 and ground lead to Pin J. Adjust analyzer for 12mc display. Adjust C56 so that 11mc and 13mc are at least -80db from 12mc level.
 - B. Set frequency on front panel to 0.99999mc and connect analyzer to J101 Pin P and ground lead to Pin R. Display 13mc. Adjust C80 so that 12mc and 14mc are at least -80db from 13mc level. Return frequency to 1.99999mc.
 - C. Connect analyzer to J101 Pin S and ground lead to Pin 15. Display &mc. Adjust C64 so that 7mc and 9mc are at least -80db from &mc level.

	TMC SPECIFICATION															NO. S 1250										
REV:																										
COMPILED: CHECKED:										AP	PD:						SHE	ET	2	3	OF					
TITLE: TEST PROCEDURE FOR CHG-()4										C	HG-	()	4 F	'INA	LJ	EST	SPEC									

- D. Place PC-383 into unit and place PC-304 comb filter "A" on extender card. Remove PC-304 comb filter "B" from unit. Connect analyzer to J102 Pin J and ground lead to Pin 8. Display lmc. Adjust C68 so that 100Kc spurs above and below lmc are at least -80db from lmc level.
- E. Repeat Step D using:
 - 1.2mc, Pin P and ground lead to Pin 13 and C69.
- F. Repeat Step D. Using:
 - 1.4mc, Pin F and ground lead to Pin 5, and C70.
- G. Repeat Step D using:
 - 1.6mc, Pin L and ground lead to Pin 10 and C71.
- H. Repeat Step D using:
 - 1.8mc, Pin 4 and ground lead to Pin D and C72.
- I. Place PC-304 comb filter "B" on extender card and remove comb filter "A" from unit. Connect analyzer to J103' Pin J and ground lead to Pin 8. Display 1.lmc. Adjust C68 so that 100Kc spurs above and below 1.lmc are at least -80db from 1.lmc level.
- J. Repeat Step I using:
 - 1.3mc, Pin P and ground lead to Pin 13 and C69.
- K. Repeat Step I using:
 - 1.5mc, Pin F and ground lead to Pin 5 and C70.
- L. Repeat Step I using:
 - 1.7mc, Pin L and ground lead to Pin 10 and C71.
- M. Repeat Step I using:
 - 1.9mc, Pin 4 and ground lead to Pin D and C72.
- N. Front panel meter should read in the green region marked Ql.
- O. Turn meter switch to Q2 position. Front panel meter should read in the green region marked Q2.

TMC FORM SPEC 1

	TMC SPECIFICATION																NO. S 1250									
REV:																					T			T		
COMPILED: CHECKED:							<u> </u>	APPD: SHEET 24 OF																		
TITLE:	TITLE: TEST PROCEDURE FOR CHG-()4											CHG-()4 FINAL TEST SPEC.														

- P. Turn meter switch to Q3 position. Front panel meter should read in the green region marked Q3.
- Q. Connect dummy load to J124 of CHG-()4 monitor with AC VTVM.
- R. Connect signal analyzer to J125 of CHG-()4.
- S. Select two tone on two tone generator. Increase level until channel activity lights, light on CMR-()4.
- T. Turn carrier suppression on CMR-()4 to full. Channel Al priority control to full cw. Adjust signal analyzer for a two tone presentation at the frequency selected on CHG-()4. RF gain control should be set to give 3.5v indication on AC VTVM that is monitoring dummy load. Distortion should be -45db. This method is used to check distortion at all frequencies prescribed on test data sheet. Repeat above for all channels. Return all channel priority controls to full ccw.
- U. Turn RF gain control on CHG-()4 to fully ccw.
 Turn carrier suppression switch on CMR-()4 to "0".
 Turn level control of TTG full ccw.
 Turn mode switch of CMR-()4 to "PTT". Short PTT terminals on rear of CMR-()4. Adjust RF gain control on CHG-()4 to give a 3.5v indication on AC VTVM monitoring dummy load.
 Adjust signal analyzer for a full scale single tone presentation. Unshort PTT terminals. Carrier suppression should be -55db.
 Record as necessary on test data sheet.